



OPERATING INSTRUCTIONS
for LCD-TV-sets Axio, Linus, Primus, Sirius
and Talio with Chassis 609
and Puros with Chassis 608



Foreword

Dear customer,
thank you for selecting a Metz
LCD TV set.

We have equipped this TV set
with a menu system which uses
"file cards" and believe that this
will provide you with a user
interface that is easy to under-
stand.

If you have any problems, you can
press the "INFO" key to display a
help function that will assist you in
setting up your TV set.

However, you should read at
least sections 1 to 8 of the Ope-
rating Instructions before putting
your new TV set into service.


HDTV

integriert

TV sets with the type designa-
tion "HDTV" provide the possi-
bility of showing HDTV pro-
grammes.



TV sets with the type designa-
tion "FHD" provide the possibi-
lity of HDTV programmes if an
external AV device supplies the
signal to the HDMI socket.

 The HD ready Logo is a
Trademark of EICTA.

Your METZ-WERKE

Contents

1. Installation	4
1.1 Proper use	4
1.2 Connecting and switching on	5
2. Safety notes	7
3. The Remote Control	8
4. Daily Operation.	10
5. Station selection.	11
... management of programme position	11
... from the station table	11
... back to the last programme	11
6. User help (Information)	12
7. Menu Control.	13
8. Teletext.	14
9. Selecting the Operating Mode	16
10. AV Playback,	17
... automatic programme change	17
10.1 ... , VCR-function	19
10.2 ... , MPEG noise reduction	20
10.3 ... , UV Shift-Function	21
10.4 ... , Pictur Format	22
10.5 ... , Noise reduction	23
11. General Picture Settings	24
... , Select power options	25
... , Configure picture profiles	27
... , Assign selected picture profile	28
... , adjust border colour	29
... , setting zoom/panorama mode	30
11.1 ... , Programmes via TV-Menu	31
11.2 ... , Programmes via station table	32
12. General Sound Settings	33
12.1 ... , for Progr. via TV Menu	38
12.2 ... , for Prog. via the Stat. Table	41
12.3 ... , Mute function	42
12.4 ... , HiFi-Amplifier, HiFi output	43
12.5 ... , Sound via speaker/hi-fi surround	44
12.6 ... , Overview	45
12.7 ... , connecting headphone	48
12.8 ... , Sound 1, Sound 2	48
13. Automatic zoom	49

Contents

14. Childlock	50, LNB supply voltage	92
15. Reminder	52, DiSEqC System	93
16. Timer Control	53, selecting Satellit	94
16.1 Setting the Time and Date	54	21.5 ... DVB-S Search Settings	95
16.2 Recording Control	55, automatic station search	96
17. Special Functions,	57, manual station search	97
....., Picture-in-Picture	57, Updating the Data	98
....., Normal/Speech	58	21.6 DVB-Prog.-Info, Signalquality	99
....., JPEG Photograph Display	58	21.7 DVB-C and DVB-S Portal stations ..	100
....., viewing time shift mode	62	22. Station Logo	101
....., Recording a progr. with a timer ..	64	23. Sorting Stations	102
....., Direct Recording (OTR)	66	24. Initial Programme Position	104
....., Picture format	67	25. Display Configuration	105
....., Picture format	68	26. DVB Radio Mode	106
....., Audio language selections	70	27. Operation without the Remote Control ..	107
18. Programming the Function Keys ...	71	28. Scope of Operation	108
19. EPG (Elektronic Program Guide) ...	72	29. Cleaning the TV Set	110
19.1 Activating the EPG	72	30. Cleaning the TV Set	111
19.2 Collecting EPG Data	74 on the Front	111
19.3 Using the EPG	76 on the Rear	112
....., selecting a program,	77	31. Registering AV Devices	113
..... viewing,	77	31.1 ... , Data Logic	115
..... reminder	77	31.2 ... , Setting the signal types RGB ..	118
....., Programinfo (now showing..) ..	78, Setting the signal types DVI / HDMI	119
....., recording a program	79, Setting the signal types YUV ..	120
20. Setting the Country and Language ..	80	31.3 Sound via HiFi Amplifier -	
21. Setting Stations,	81	HiFi output	121
....., reception mode	81	31.4 Removing AV Devices	123
21.1 ... , TV-Standard	82	32. Copying between AV Devices	124
....., Analogue -TV	83	33. Inserting/Removing CA Modules ..	126
....., Colour standard	84	34. Connect PC	127
21.2 ... DVB-T, Antenna suply voltage ..	85	34.1 Connect PC, sound from TV-speaker ...	129
....., automatic station search	86	35. Glossary	130
....., manual station search	87	36. Problem, Mögliche Ursache, Abhilfe ..	133
21.3 ... DVB-C, automatic station search ..	88	37. Upgrade Kits	136
....., manuelle Suche	89	38. Technical Data	138
21.4 Set-up satellite system,	90	Battery disposal	141
....., Antenna system	90	Index	142
....., Unicable	91		

1. Installation

- Take care that no bright artificial light or sunshine falls directly on the screen. This could cause reflections which have a negative effect on the brilliance of the picture.
- The best viewing distance is five times the screen diagonal, i.e.
 - Approximately 2 m (6.3 ft) for 26" screens
 - Approximately 2.4 m (7.6 ft) for 32" screens
 - Approximately 2.8 m (9 ft) for 37" screens
 - Approximately 3.2 m (10.3 ft) for 42" screens
- The antenna cable and any other components (such as a video recorder) connected between the antenna socket in the wall and the TV set must comply with the European standard EN 60966-2-4.
- The antenna cable used for connecting the TV set must have a screening attenuation of at least 75 dB.
- The use of non-approved cables will invalidate the operating permission for the TV set.
- Only use Metz bases as a stand for the LCD TV.
- Use the Metz wall bracket (item no. 604 99 0286.A2) or a suitable Omni-Mount wall bracket to hang the LCD TV on the wall. For an OmniMount wall bracket, you also need the Metz adapter plate 013ZM1091.
- Strong tobacco consumption at the installation location of the LCD TV can lead to nicotine and soot deposits behind the panel glass and thus to an impairment of the image quality. Such deposits can only be removed by a specialist. In extreme cases the panel may be damaged permanently, which may require to replace the panel. The cleaning and / or the replacement of the panel is not covered by warranty claims.

1.1 Proper use

This TV set is exclusively designed for the reception and replay of picture and sound signals.

The TV set is designed for dry rooms (living rooms and offices).

The room climate should be in a range from +5°C to +35°C with 75% air humidity.

The TV set must not be used in rooms with higher air humidity (e.g. bathroom, sauna, etc.).


The TV set must not be used in rooms with a high concentration of dust (e.g. a workshop).

If, as an exception, you operate the TV set outdoors, then please make sure that it is protected against moisture (rain, water spray, dew).

1.2 Connecting and switching on



Power connector

Connect the TV set to the wall socket with the accompanying power cord.

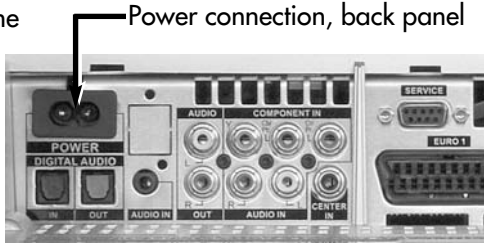



Antenna connector

Connect the TV set to the antenna socket with an antenna cable.

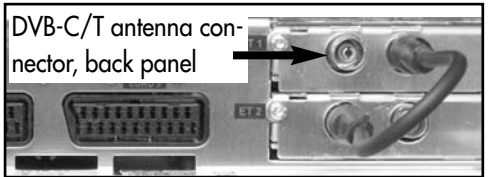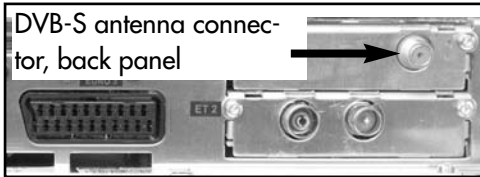

Switching on

Switch on the TV set with the main switch.

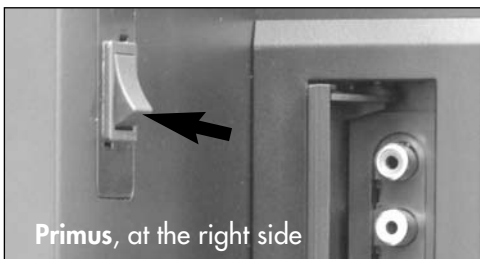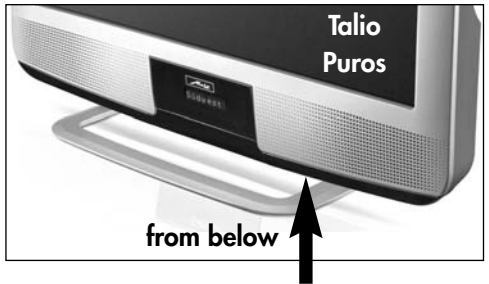


1.2 Connecting and switching on

The TV set is now in standby mode and the red standby indicator lights.


After about 25 seconds, the TV set switches to programme position 1 or to the programmed initial programme position (see page 104).

If you press no further keys on the remote control, a window requesting that you do so is displayed after about 10 minutes. If you do not do this, the TV set switches back to the standby state.

Switching on from the Stand-by

Use the numeric keys to select any desired programme position. Pressing the  key selects programme position 1 or, if it is programmed, the initial programme position (see page 104).


Switching off

Press the  key to switch the TV set to standby mode. If you do not intend to use the TV set for a longer period, switch it off with the main power switch.

2. Safety notes

- Always place the monitor on a solid, stable surface.
 - If a cold TV set is moved to a warm room, always allow any condensation on the screen to evaporate before switching it on.
 - The TV set is intended for use in a dry room. If, in exceptional circumstances, you use it outdoors, take care that it is protected against moisture (rain, splashed water, dew).
 - TV sets need adequate ventilation. Never cover the openings on the rear of the set with curtains, doilies, newspapers, etc. Also take care that the slits in the bottom of the case are freely accessible so that the intake of the cooling air is not hindered.
 - If you place the TV set in a wall unit, leave sufficient space on all sides for the circulation of cooling air.
 - Do not place the TV set close to a radiator, since this would effect adequate cooling.
 - Do not place
 - burning candles or vessels containing liquids (vases, etc.) on top of the TV set, since any hot wax or water dripping into the set could cause serious damage to the electronic components and could also jeopardize the electrical safety of the set.
 - Lightning can damage electrical equipment. A lightning flash entering the power cable or the aerial cable can damage the TV set even if it is switched off. You should therefore disconnect the power cable and aerial cable from their outlets or from the TV set in the case of a thunderstorm.
 - The monitor may be opened and repaired only by a qualified person.
- CAUTION! HIGH VOLTAGES CAN KILL !**
- If repairs should be necessary, consult your local dealer.
- Always switch off the TV set before cleaning it.
 - Do not hold the remote control directly in front of your eyes and press a button. The remote control emits infrared radiation!
 - Do not place rechargeable batteries in the battery compartment of the remote control. Use only two 1.5 V dry batteries of the type LR03/AM4/AAA (Micro).
 - The TV set is intended only for the reception and reproduction of picture and sound signals.
 - The TV set may be operated only from a mains voltage of 230-240V VAC, 50 Hz. Australia: 240 VAC.
 - For maintenance and repair work, the power plug or the power-cord input of the TV represents a means to disconnect the device from the mains and must therefore be kept in a usable state in line with applicable standards.
 - Lay the power cable so that nothing stands on it and no-one can trip over it.
 - Do not display still images, logos, 4:3 pictures with stripes etc. over an extended period. These still images can result in marks on the screen.

3. The Remote Control

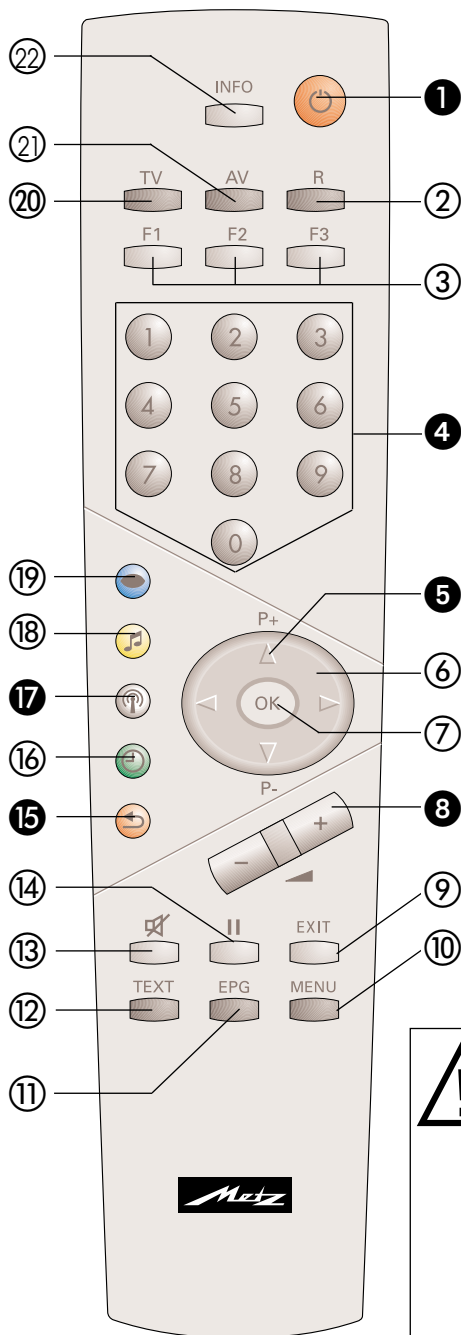

The remote control sends commands to the TV set by means of an infrared signal. You must point it towards the TV set when using it. Note that the remote control may interfere with the operation of other devices which use infrared signals (such as infrared headphones).

i Sunlight falling directly on the TV set may interfere with the operation of the remote control, since the TV set cannot detect the infrared signals from the remote control under these conditions. The TV set must be switched on with the main power switch before it can be controlled with the remote control.

The most important keys for normal use

- 1 ON**
Switches the TV set on with programme position 1 or the programmed initial programme position selected, or switches it OFF (to the standby state).
- 4** Numeric keys (direct station selection).
- 5** P+ /P- Selects the next/previous programme position.
- 8** Volume control.
Setting can be changed in the menu.
- 15** Back to the previously selected station.
- 17** Displays the station table.



Do not insert rechargeable batteries in the battery compartment of the remote control.

Use only two dry batteries of the type LR03/ AM4/AAA 1.5V.

The batteries that are used must not be exposed to excessive heat such as sunshine, fire or the like.









3. The Remote Control

Overview of the functions of the keys

- ② Switch to DVB radio mode.
Switch on from the standby state into radio mode¹⁾.
- ③ Function keys:
F1/F2/F3: **press briefly** to call the functions set in the factory.
F1/F2/F3: **press and hold** to display a selection of special functions.
AV: press to select one of the previously configured AV devices.
- ⑥ Cursor control key in the "Information" window and the "TV menu".
- ⑦ OK: confirmation key.
- ⑧ Volume control; values can be set in the TV menu.
- ⑨ Exit key: exit from the menu without saving any changes you have made.
- ⑩ Open the TV menu.
In the menu: back to the main menu.
- ⑪ Open the electronic programme guide (EPG).
- ⑫ Open the Teletext window.
- ⑬ Mute.
- ⑭ Freeze frame.
- ⑮ Back to the previously selected station.
In the TV menu: open the "Configuration" menu.
- ⑯ Display the date and time.
In the TV menu: open the "Timer" window.
- ⑰ Display the station table.
In the TV menu: open the station table or the station features window.
- ⑱ Display the sound functions.
In the TV menu: open the "AV devices" window.
- ⑲ Display the picture functions.
In the TV menu: open the "picture and sound" window.
- ⑳ Back to the TV picture.
Switch from radio mode¹⁾ to TV mode.
Switch on from standby mode into TV mode.
Split-Screen in Teletext
- ㉑ Display the AV menu "Replay/record".
Switch on from standby mode into AV mode.
- ㉒ Display the "Information" window. In the "Information" window:
back to the table of contents.


1) Possible only in DVB mode !

Opening the menu

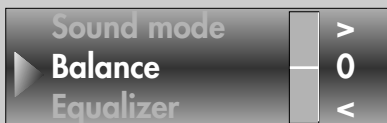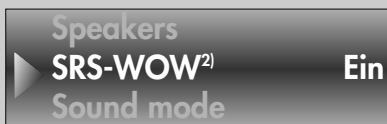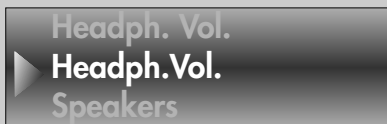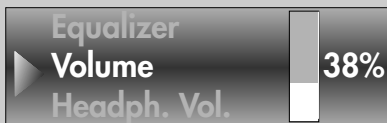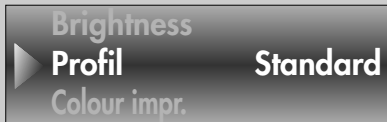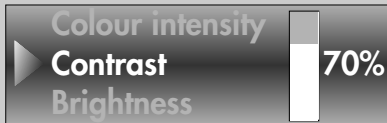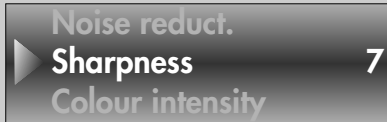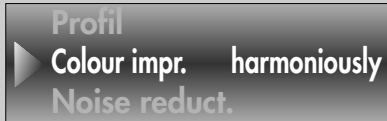

4. Daily Operation

Changing picture settings

The picture settings can be accessed with the blue button . The settings box with the individual functions (see picture) appears on the bottom left of the screen.


Select the desired function with the „P+/P-“ rocker switch and adjust it with the – + key.

The individual picture characteristics can also be saved as default values for all programmes. See Chapter 11 for this.

Volume settings


Use the – + key to change the volume.

Changing the sound settings

The sound settings can be accessed with the yellow button . The settings box with the individual functions (see picture) appears on the bottom left of the screen.

Select the desired function with the „P+/P-“ rocker switch and adjust it with the – + key.

The individual sound characteristics can also be saved as default values for all programmes. See Chapter 12 for this.

 The settings that are made here are only temporary and are not saved. If the TV set is switched to stand-by mode or switched off, all settings will be reset to the preset default values.

5. Station Selection

Station selection and management of programme positions

The TV set can store the settings for up to 2000 TV stations and 2000 radio stations in so-called programme positions. You can select any of these programme positions with the numeric keys, with the oval rocker key "P+/P-" or from the station table.

If you use the numeric keys for station selection, the first digit you enter is normally the "thousands" digit. If less than 1000 programme positions are occupied,

it automatically becomes the "hundreds" digit.


If less than ten programme positions are occupied, the first digit you enter automatically becomes the "units" digit.

After pressing any numeric key, you have three seconds to press further numeric keys

5. Station Selection



Opening the menu

Selecting stations from the station table


In normal TV or radio ¹⁾ mode, you can display the station table by pressing the white  key.


Press the white key  repeatedly to display a virtual keyboard. Use the respective key to sort the station list alphanumerically.


In the table which is then displayed, you can use the oval rocker key "P+/P-" or the numeric keys to select the desired station and then press the "OK" key to display this station.

If the station table contains more than 20 stations, you can display the next 10 stations by pressing the oval cursor control key  .

Back to the last station



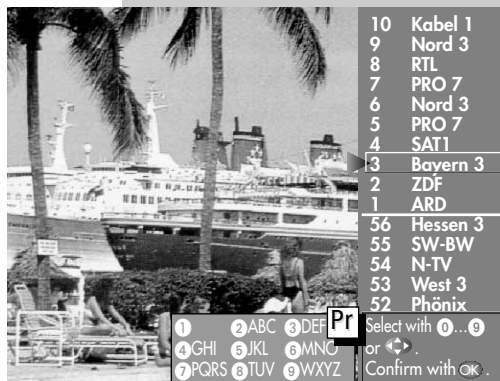


You can use the red  key to switch back and forth between the last two stations you have selected.

2 x 



10	Kabel 1
9	Nord 3
8	RTL
7	PRO 7
6	Nord 3
5	PRO 7
4	SAT1
3	Bayern 3
2	ZDF
1	ARD
56	Hessen 3
55	SW-BW
54	N-TV
53	West 3
52	Phönix

1	2 ABC	3 DEF
4 GHI	5 JKL	6 MNO
7 PQRS	8 TUV	9 WXYZ

Pr Select with ...
or  
Confirm with 



1) Possible only in DVB mode !

2) Possible only on sets equipped with this function.

Opening the Info



Information Contents

Index

Station selection

Picture settings

Sound settings

AV playback

Recording facilities:

- Timer recording

- Direct recording

- AV copying

Teletext

Function keys


DVB radio mode

Electronic Programm Guide (EPG)

Select the underlined text with the cursor.

: further information : table of contents

Visited pages: ● back ● forward

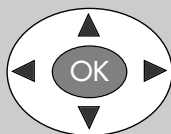

6. User Help (Information)

During the design of this TV set, we have made every effort to make it as easy as possible for you to use it and we hope that you will enjoy familiarising yourself with your new TV set.

With the "Information" menu, the TV set is able to answer the many questions which may come up during installation and setup.

To display this menu, simply press the "INFO" key for the table of contents.

The "Information" menu (user help)

In the table of contents or the index, you can select the item of interest with the cursor control key.

Use the cursor-right key ► to scroll forwards through the contents or index ...

Use the cursor-left key ◀ to scroll backwards through the contents or index ...

Use the cursor-up key ▲ to select the last underlined item ...

Use the cursor-down key ▼ to select the menu lines...

... and then press the "OK" key to display the explanation of the selected item.

You can select any underlined word in the table of contents, the index or the explanation of a selected item with the cursor. Pressing the "OK" key then displays the explanation for this word.

You can also scroll forwards and backwards through previously displayed pages with the aid of the red and green keys.

7. Menu Control

With the "TV menu", we provide you with an assistant to help you find your way through the many possible settings of the TV set.

Don't be afraid to change any settings in the various menus. No changes will be saved unless you press the "OK" key to confirm them. If you are not sure whether you want to keep a changed setting, you can exit from the menu at any time, without saving any changes, by pressing the "EXIT" key.

Within the TV menu, you can return to the previous main menu item at any time by pressing the "MENU" key. If you are not sure what a menu item does, press the "INFO" key for more information.

In order to return to the menu, press the "INFO" key twice.



You can open each of the five main sections of the menu with the key of the corresponding colour. The "card file" which is then displayed is subdivided into Subjects (on the left) and Sections (on the right), and you can select these by moving the red, triangular cursor with the oval cursor control key or with the numeric keys.

When you press the "OK" key, the current setting for the selected item is shown in the "Setting window" below the card file and can be adjusted with the - + key.

You can save the new setting by pressing the "OK" key, which also returns you to the list of sections. If you do not want to save the new setting, press the "MENU" key to return to the corresponding main menu item or press the "EXIT" key to close the menu.

You can delete any incorrect inputs with the II key.

Opening the menu

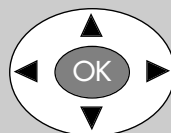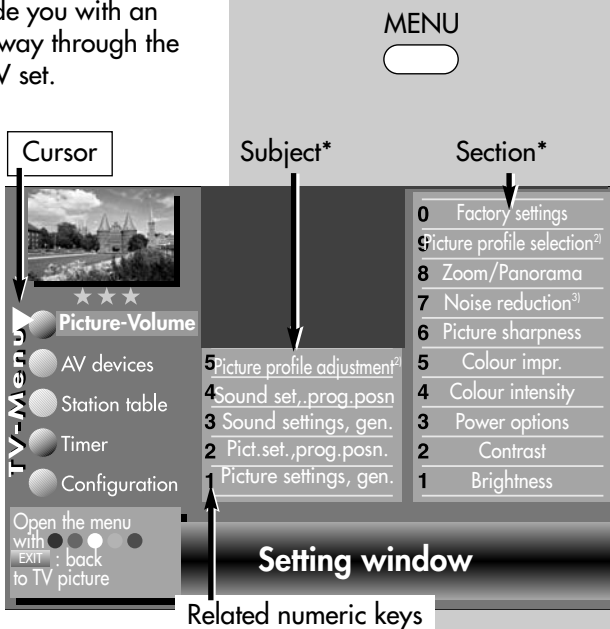

EXIT



II



* The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

2) Possible only on sets equipped with this function.

Opening the menu

TEXT




8. Teletext

i Teletext is an additional service provided free of charge by many TV stations. It is an "electronic magazine" through which you can browse in various ways.

Opening Teletext:

- Press the "TEXT" key. If the selected station offers "TOP-Text", a "card file" is displayed (see the picture on the left).
If "TOP-Text" is not available, Teletext page 100 is displayed (see the picture below).
- In the TOP-Text card file, you can select the desired cards with the cursor control key or with the numeric keys.
- Press the "OK" key to open the selected card.

Controlling Teletext with pages displayed:

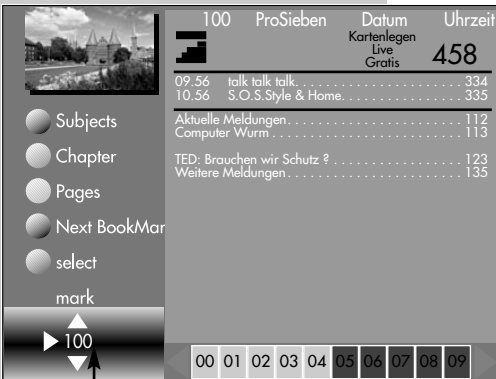

Blue key – next subject.

Yellow key – next section.

White key – next page.

After pressing the coloured pre-selection key, you can step through the subjects, sections or pages with the cursor control key or with the numeric keys.

If you wish to select a specific page, enter its page number on the numeric keys.

If sub-pages exist for the selected page, the page numbers are displayed in black. In the example shown here, there are five sub-pages.

You can step through these sub-pages with the cursor control key.

Page number

Sub-pages

8. Videotext

Double font size

You can double the size of the font used for Teletext pages with the **F1** key. Pressing this key once displays an enlarged picture of the upper third of the page. Pressing it a second and third time displays the centre and lower thirds of the page. Pressing a fourth time displays the entire page again.

Riddle key (display hidden text)

Function key **F2** is programmed in the factory to display hidden text, such as the answers to riddles.

Back to the last index page

You can return directly to the last index page you have displayed by pressing the numeric key **0**.

Stop page scrolling

The **II** key or the "OK" key can be used to stop the automatic scrolling executed by some pages, and to enable this again.

Page selection with the cursor

Press the "OK" key to stop page scrolling. The cursor ► is now positioned at the top left corner of the page and you can use the cursor control key ◀▶▲▼ to position it anywhere on the displayed page. This function is useful on index pages (such as pages 100, 200, etc.) in order to select a page you want to see. After positioning the cursor on the desired page number, press the "OK" key to display its contents.

Setting marks in Teletext⁶⁾

As a user of Teletext, you will probably want to visit certain pages (such as stock-market news, news pages or the weather forecast) regularly.

In order to find these pages quickly, you can set marks to suit your personal requirements.

To do this, open a page for which you want to set a mark.

- Press the red Ⓢ key for "Set" to place a mark on this page. The number of the mark you have just set is displayed above the window containing the number of the Teletext page. In the case of multiple pages, the mark is always set and displayed for the currently displayed sub-page.

 **Up to 10 marks can be set for each programme position.**

Scrolling through marked

Teletext pages⁶⁾

With the Teletext window open, you can step sequentially through the marked pages with the green Ⓢ key.

An even easier method is by pressing the "TEXT" key while the TV programme is displayed. Each time you press this key, the next marked page is displayed. After the last marked page, the TV picture is displayed again.

6) Not possible with an external receiver !


8. Videotext

Displaying all Teletext marks ⁶⁾

If you have set marks for a programme position, you can display an overview of these marks by pressing the **F3** key. The displayed list shows where the marks are set. Press **F3** again to hide the list.

You can select the individual marks in the list with the numeric keys.

Clearing Teletext marks ⁶⁾

Open the Teletext page whose mark is to be deleted and press the red  key "Delete" to delete the mark.

Subtitles in Teletext

Your TV set is capable of displaying subtitles. When a programme for which subtitles exist starts, the TV station displays a box showing the Teletext page on which these can be found.

- Press the "TEXT" key to open Teletext.
- If this is a "TOP-Text" station, the card file is displayed. Press the "OK" key and open any available page.
- Use the numeric keys to enter the number of the page containing the subtitles.

Split-Screen

In Teletxt mode, the TV-Programm window in the upper left corner can be enlarged to half of your screen by pressing the „TV“ button.

If you press „TV“ button again, it will be used to the original size.

6) Not possible with an external receiver !

9. Betriebsart einstellen



You can switch the TV set between its various operating modes with the keys "TV", "AV" and "R". You can also switch from standby mode to the desired operating mode with these keys.

TV = TV mode

AV = TV mode with input from AV devices
(e.g. video tape recorder, DVD player, etc.)

R = DVB Radio mode ¹⁾

1) Possible only in DVB mode !

10. AV Playback

AV playback

(devices with switching voltage)


- ☞ **Before they can be used, AV devices must be registered and assigned to the appropriate input sockets in the menu "AV devices".**

Playing back a recording from a video cassette, DVD, etc. on a connected AV device is called AV playback.

In order to see the picture, you must programme your TV set to execute an automatic programme change at the EURO socket to which the AV device is connected.

Programming a programme change

- ☞ **This menu item is not available in a 2 ** menu (see Section 28, Scope of Operation).**
- ☞ **The automatic programme change is set in the factory to "ON" for all EURO sockets.**

 
- Press the "MENU" key.
The TV menu appears on the screen.
- Press the red key . The menu "Configuration" is displayed.
- Use the corresponding numeric key (in this example: **7**) to select the menu item "EURO sockets".
- Use the cursor control key to select "EURO 1", "EURO 2" or "EURO 3²⁾".
- Press the "OK" key and then, in the setting window, use the - + key to select "Programme change on".
- Press the "OK" key to save the new setting.
- Press the "EXIT" key to close the TV menu.

Opening the menu

MENU



OK



OK

EXIT



The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

2) Possible only on sets equipped with this function.


AV



If you now start to play back a recording on the connected AV device, the TV set changes automatically from any other programme position to the playback mode.


AV playback

(devices without switching voltage)

 ***Before they can be used, AV devices must be registered and assigned to the appropriate input sockets in the menu "AV devices".***

In order to see the played back picture, you must switch the TV set to playback mode.


- Select any programme position.
- Press the "AV" key.
- Use the corresponding numeric key to select the AV device you want to use.
- The TV set now changes from the current programme to the selected playback device.
- Start the replay function on the AV device. This AV selection remains active until you switch to any other programme position.
- After watching the film from the AV device, press the "TV" key to return to normal TV mode.

 ***If the same AV device is to be selected quite often, then the AV button can also be programmed for that AV device. See Chapter 18. "Programming Function Buttons".***

10.1 AV Playback VCR function

Opening the menu


 *The menu item "VCR" is not available in a 2 ** menu.*


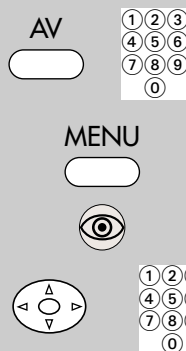


Picture quality when playing back from tape devices

The VCR function ensures an optimum picture quality when playing back recordings from tape devices such as video cassette recorders or cam-corders.




Setting the VCR function

- Select the appropriate AV level by pressing the "AV" key and using the numeric keys to select the AV device which is to supply the pictures.
- Press the "MENU" key to open the TV menu.
- Press the blue key . The menu "Picture and sound" and the menu item "General picture settings" are pre-selected.
- Use the corresponding numeric key (in the example: **2**) to select the menu item "Pict.settings for Pr."
- Press the "F1" key to display the entire selection.
- Use the corresponding numeric key (in the example: **8**) to select the menu item "VCR".
- Use the - + key to select "Opt.1". If this setting does not produce a satisfactory result, you can try using "Opt.2".
- Press the "OK" key to save the new setting.
- Press the "EXIT" key to close the TV menu.

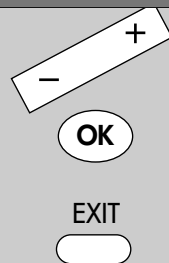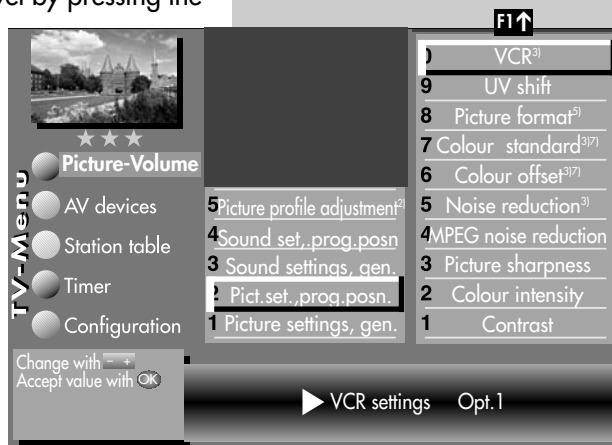

2) Possible only on sets equipped with this function.
 3) See glossary for an explanation.
 7) Available only for analogue stations!

Opening the menu

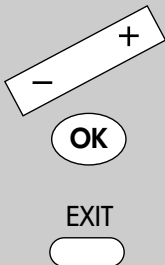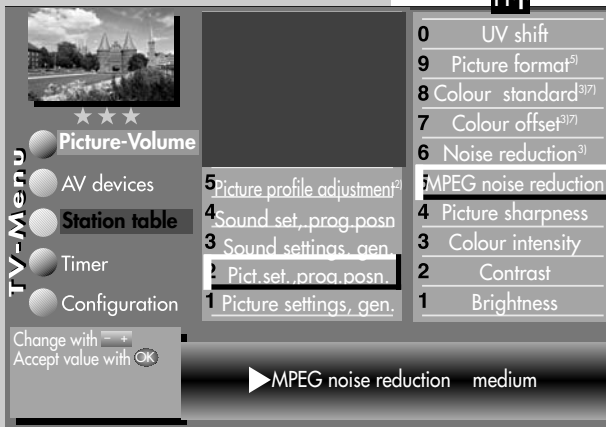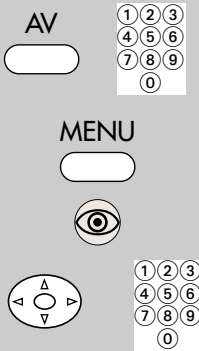

10.2 AV Playback MPEG noise reduction

In AV mode, when playing back digitally encoded films, system-related digital picture faults that can be seen as a rectangular pattern (formation of tiny blocks) in moving areas can be reduced with the help of MPEG noise reduction.

The rectangular pattern (formation of tiny blocks) can be corrected in the "MPEG Noise Reduction" menu option.

Set MPEG noise reduction:

- Select the AV level by pressing the AV button and using the numeric buttons to select the AV device that is to provide the picture..
- Call up the TV menu with the **MENU** button.
- Press the blue key The menu "Picture and sound" and the menu item "Picture settings, gen." is pre-selected.
- Use the corresponding numeric button (in the example **2**) to select the menu item "Pict. set., prog.posn."
- Use the corresponding numeric button (in the example: **5**) to select the menu item "MPEG noise reduction".
- Set the "MPEG noise reduction" with the - + button.
- Save the setting by pressing the **OK** button.
- Clear the TV menu with the **EXIT** button.

2) Possible only on sets equipped with this function.

3) See glossary for an explanation.


7) Available only for analogue stations!

10.3 AV Playback UV Shift-Function




In exceptional cases, when connecting an AV device using the HDMI socket with a non-standard signal, there may be a red-blue colour shift. This means that everything that is supposed to be red or reddish is shown in blue.

This colour shift can be corrected with the "UV Shift" menu option.

Setting UV Shift:


- Select AV level by pressing the AV button and using the numeric buttons to select the AV device that is to provide the picture.
- Call up the TV menu with the **MENU** button.
- Press the blue key  The menu "Picture and sound" and the menu item "Picture settings, gen." is pre-selected.
- Use the corresponding numeric button (in the example: **2**) to select the menu item "Pict. set, prog.posn."
- Use the corresponding numeric button (in the example: **0**) to select the menu item "UV shift".
- Set the "UV Shift" with the **- +** button.
- Save the setting by pressing the **OK** button.
- Clear the TV menu with the **EXIT** button.

Opening the menu

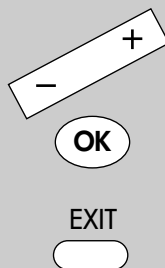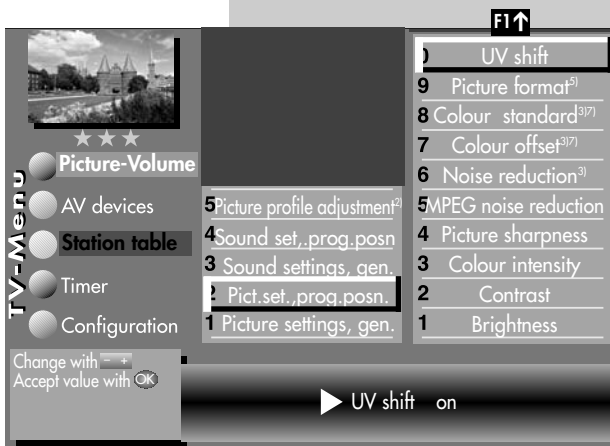
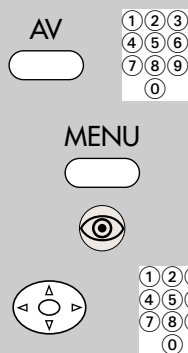


2) Possible only on sets equipped with this function.
3) See glossary for an explanation.
7) Available only for analogue stations!

 Opening the menu



MENU

 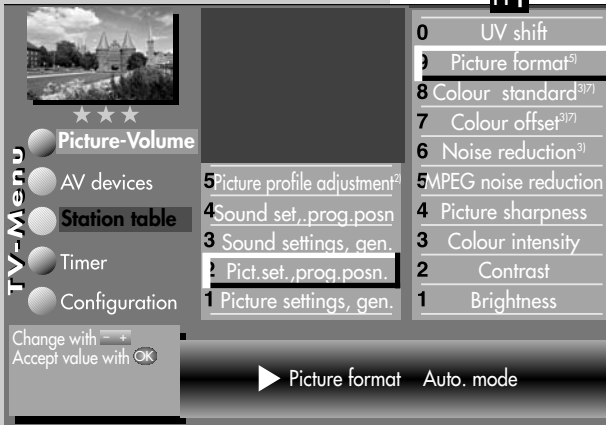

EXIT



10.4 AV Playback Picture Format

Some of the following menu items are not available on a 2 ** menu.

Setting the picture format:

- Select the AV programme position which delivers the picture by pressing the "AV" key and then pressing the numeric key corresponding to the device you want to use.
- Press the "MENU" key. The TV menu appears on the screen.

• Press the blue key to open the menu "Picture and sound". The menu item "General picture settings" is preselected.

FIT

0	UV shift
1	Picture format ⁵⁾
2	Colour standard ⁶⁾⁷⁾
3	Colour offset ³⁾⁷⁾
4	Noise reduction ³⁾
5	MPEG noise reduction
6	Picture sharpness
7	Colour intensity
8	Contrast
9	Brightness

- Press **numeric key 2** to select the menu item "Picture settings for Pr.":
- Use the corresponding numeric key (in the example: **9**) to select the function "Picture format".
- Use the - + key to set the picture format setting to "Automatic".

- Press the "OK" key to save the new setting.
- Press the "EXIT" key to close the TV menu.

2) Possible only on sets equipped with this function.

3) See glossary for an explanation.

7) Available only for analogue stations!

10.5 AV Playback

Noise reduction

Opening the menu

 **Some of the menu items are not available in a 2 ** menu.**

There may be a "noisy" picture, among other things, when playing back from AV devices.


Noise reduction can be enabled to compensate for a "noisy" picture.


Rauschreduktion einstellen:

- Select the programme position whose picture settings you wish to change.

- Press the **MENU** key.

The TV menu appears on the screen.

- Press the blue key  The menu "Picture and sound" and the menu item "Picture settings, gen." is pre-selected.

 
- Use the cursor control key  to select the menu item "Pict.set., prog.posn." and then press **OK**.

- Use the corresponding numeric buttons (in this example it is **4** for noise reduction), to select the individual menu items.


- In the setting window, change the setting with the **- +** button.

- Press the **OK** button to save the new settings.



- Clear the "TV menu" with the **EXIT** button.



MENU

 

F1 ↑

 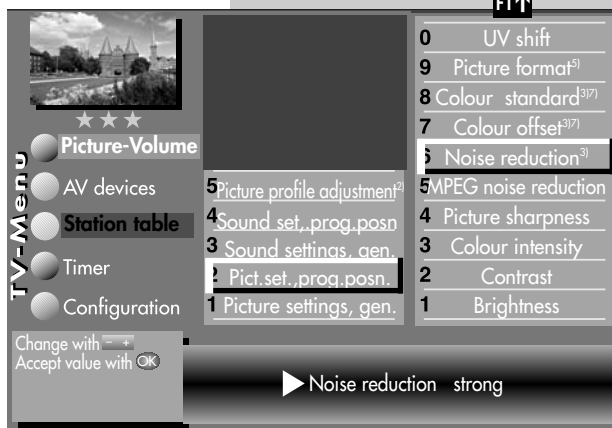

EXIT




2) Possible only on sets equipped with this function.

3) See glossary for an explanation.

7) Available only for analogue stations!

Opening the menu

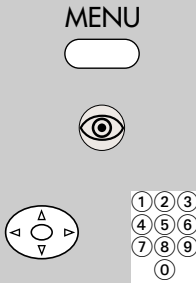


11. General Picture Settings

👉 Some of the menu items are not available in a 2 ** menu.


The picture settings brightness, contrast, colour intensity, sharpness and noise reduction can be set generally for all programme positions and saved as **standard values** which can be recalled at any time by pressing the "OK" key.

Opening the picture settings menu:

This example describes how the brightness is adjusted. The other picture settings can be adjusted in a similar manner.

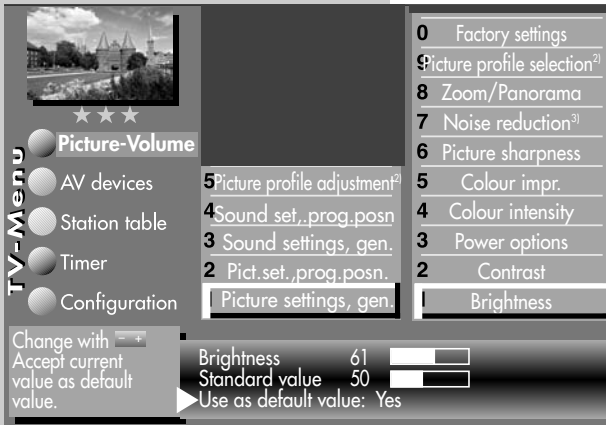

- Press the "MENU" key. The TV menu appears on the screen.
- Press the blue key . The menu "Picture and sound" and the menu item "General picture settings" are pre-selected.
- Use the cursor control key to select the menu item "Brightness".
- The various menu items can be selected with the aid of the numeric keys.

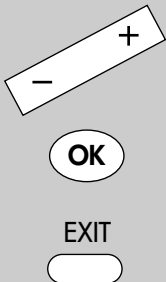

- In the setting window, use the + key to change the setting.
- Use the cursor control key to select the third line "Save as standard values".
- If you wish to save the new setting, use the + key to select "Yes".
- Press the "OK" key to save the changed setting as a standard value.
- Press the "EXIT" key to close the TV menu.

👉 If the standard values do not provide a satisfactory picture in some programme positions, you can make settings for these positions which differ from the standard values. See the next sections. 11.1 and 11.2.

2) Possible only on sets equipped with this function.
3) See glossary for an explanation.

11. General Picture Settings

Select power options

Opening the menu

Three different power options can be set in the "Power options" menu option.

Eco Mode

The "Eco Mode" setting is a good compromise between energy consumption and picture quality. In addition, the TV set switches to stand-by mode if no buttons are pressed for 4 hours. "Eco Mode" is the preferred setting for normal home operation.

Presentation


The "Presentation" setting is optimised for presentation rooms; it involves higher energy consumption, however. Automatic change-over to stand-by mode is not enabled.

Picture quality

In this mode, all controls can be used for picture maximisation in order to meet the needs of all individual conditions.



Setting the power options:

- Automatically after the initial start-up after pressing the red button (Ⓜ). See "Important information", or
- Press the "MENU" key. The TV menu appears on the screen
- Press the blue key (Ⓢ). The menu "Picture and sound" and the menu item "General picture settings" are pre-selected.
- Use the cursor control key ◀▶▲▼ to select the menu item "power options" and press the "OK" button
- Use the + key to select the "Eco Mode", "Presentation", or "Picture Quality" setting.

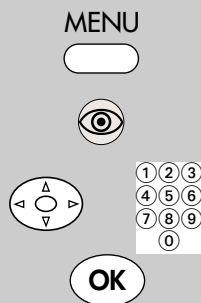

2) Possible only on sets equipped with this function.
3) See glossary for an explanation.

 Opening the menu

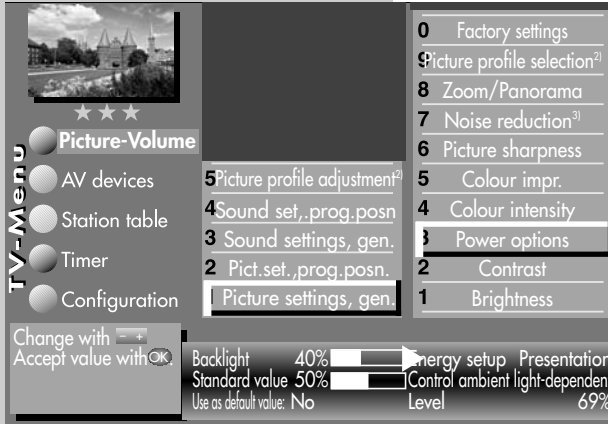

OK

EXIT

11. General Picture Settings Select power options

- Save the set power option by pressing the **OK** button.
For the "Presentation" or "Picture Quality" settings, the types of control described under a) to e) can be set as well.

a) Off: he backlighting is set to maximum. (highest level of power consumption).

b) ambient light-dependent: The backlighting is governed by the room light and always provides the same picture appearance regardless of changes in room lighting.

c) Picture content-dependent⁹⁾: The backlighting is governed by the picture content. In the

case of dark picture content, the brightness of the backlighting is reduced to increase contrast.

d) Manual: The backlighting is set to a fixed value in the menu.

e) Automatic⁹⁾: Combination of b) room light dependent and c) picture content dependent

The level control indicates the level of backlighting brightness currently in operation.

The backlighting (lamps that light up the screen) is adjusted automatically depending on the power option selected.

The brightness of the lamps has an influence on the device's power consumption.

- Press the "EXIT" key to close the TV menu.

2) Possible only on sets equipped with this function.

9) Depending on panel (screen)

11. General Picture Settings

Picture profile adjustment²⁾


 
Opening the menu

Picture profiles are a combination of very special picture parameters that make it possible to always create the best picture reproduction quality for different types of programmes or for replaying from different video sources.

 

The "Standard" picture profile is a good compromise for all types of transmission, and is set at the factory. However, in order to obtain the maximum picture reproduction quality, it is useful to assign the appropriate picture profile to a specific application.

If you are technically inclined, you also have the possibility of adjusting each individual picture profile yourself, as well as to create a separate additional picture profile according to your individual taste.

Picture profile²⁾ settings:

- Press the MENU key.
The TV menu appears on the screen.
- Press the blue key . The menu „Picture and sound“ and the menu item „Picture settings, gen.“ are pre-selected.
- Press the numeric key **5** to select the "Picture profile settings" menu option.
- Use the assigned numeric key to access the picture profile that is to be changed.
- Use the cursor control key  to access the menu option that is to be changed.
- Change the setting with the - + key.
- Press the "OK" button to save the new settings.
- Press the "EXIT" key to close the TV menu.

MENU



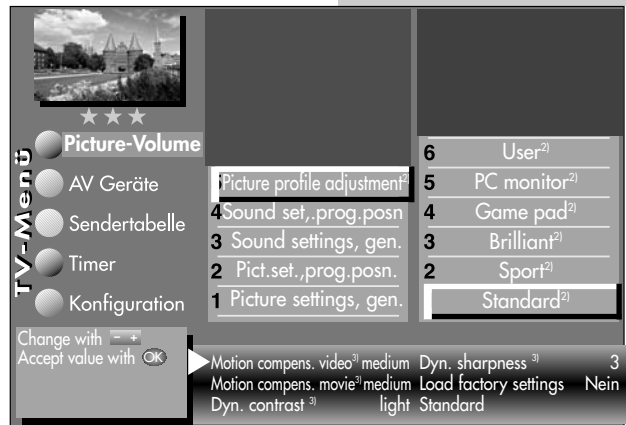


EXIT



2) Possible only on sets equipped with this function.
3) See glossary for an explanation.

 Opening the menu

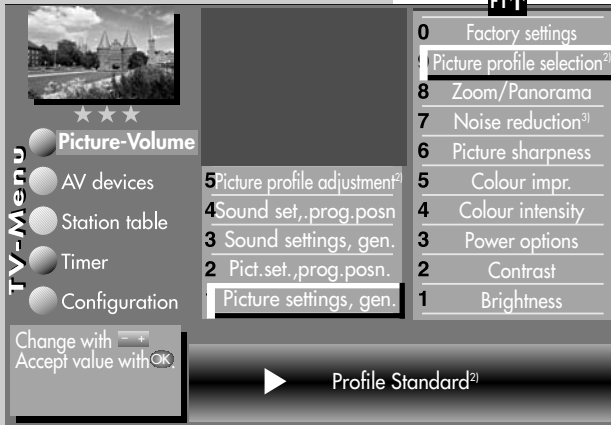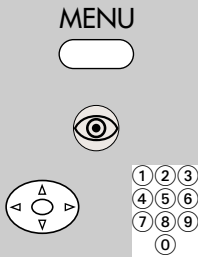



OK

EXIT


11. General Picture Settings selected picture profile²⁾

The picture profiles that were set up earlier can now be generally assigned to all or only individual programme positions.

Selected Profile Standard²⁾:

- Press the **MENU** key.
The TV menu appears on the screen
- Press the blue key . The menu „Picture and sound“ and the menu item „Picture settings, gen.“ are pre-selected.
- Use the cursor control key  to select the “Brightness” menu option.
- Use the assigned numeric key to select “Picture profile selection”.
- Use the - + key to change the settings for „Picture profile selection”.
- Press the **OK** button to save the new settings.

- Clear the “TV menu” with the EXIT button.

 **The picture profile can also be temporarily changed during a programme without the change being saved. See Chapter 4 for this.**

2) Possible only on sets equipped with this function.

11. General Picture Settings

Adjust border colour



Opening the menu

 **Some of the menu items are not available in a 2 ** menu.**

Displays that do not fill the screen produce black border. These border can be changed to a grey tone to avoid "image sticking"³⁾.



Displaying the picture in 4:3 format, for example, produces these black border at the left and right.

Adjust border colour:

- Press the "MENU" key.
The TV menu appears on the screen.
- Press the blue key . The menu "Picture and sound" and the menu item "General picture settings" are pre-selected.
- Use the cursor control key  to select the menu item "Brightness".
- Use the corresponding numeric keys (in this example: **8** for Zoom/Panorama) to select the desired menu items.
- Use the cursor control key to select the desired menu items.
- Use the - + key to change the settings for "Border colour".
- Press the "OK" key to save the new settings.
The picture shows the factory settings.
- Press the "EXIT" key to close the TV menu.

 **The setting is only possible if the function "Panorama" is set to "No".**

MENU

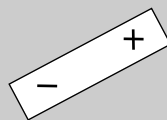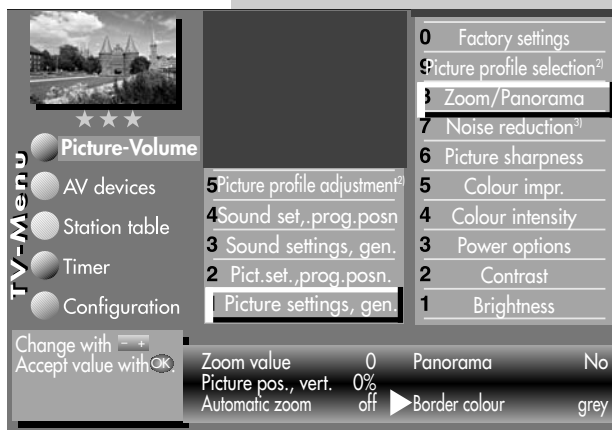

EXIT



2) Possible only on sets equipped with this function.

3) See glossary for an explanation.

Opening the menu

MENU



11. General Picture Settings Zoom/Panorama einstellen


Some of the menu items are not available in a 2 ** menu.

The picture settings zoom, vertical position, automatic zoom and panorama can be set and saved as general settings for all programme positions.

Setting the zoom/panorama mode:

- Press the "MENU" key.

The TV menu appears on the screen.

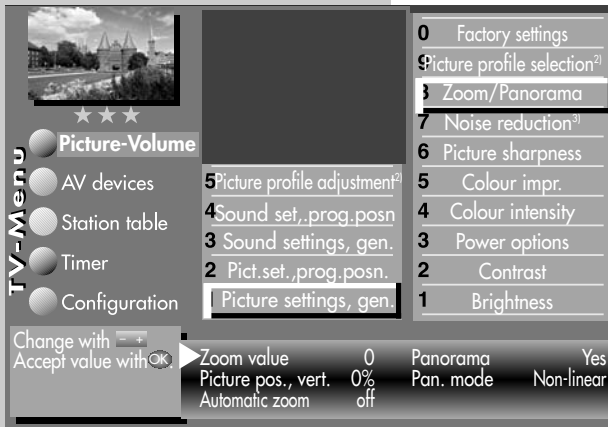

- Press the blue key . The menu

"Picture and sound" and the menu item "General picture settings" are pre-selected.

- Use the cursor control key to select the menu item "Brightness".

- Press the corresponding **numeric key** to select "Zoom/Panorama".

 
- Use the cursor control key to select the desired menu items.

- Use the - + key to change the settings for "Zoom/Panorama".

- Press the "OK" key to save the new settings. The picture shows the factory settings.

- Press the "EXIT" key to close the TV menu.

The functions "Panorama" and "Zoom" can be combined with each other.



OK

EXIT



2) Possible only on sets equipped with this function.

3) See glossary for an explanation.



11.1 Picture Settings for Programmes via TV Menu

Opening the menu



 **Picture settings for individual programme positions are not available in a 2 ** menu.**

 If the standard values do not provide a satisfactory picture in some programme positions, you can make different settings for these positions which override almost all of the general picture settings. These individual settings apply only to the programme position for which they are made, and they cannot be overwritten with the standard values. In addition to the general picture settings, the individual settings also include the settings colour offset, colour standard and VCR.

Individual picture settings for programme position xy:

- Select the programme position whose picture settings you wish to change.
- Press the "MENU" key.
- Press the blue key . The menu "Picture and sound" and the menu item "General picture settings" are pre-selected.
- Use the cursor control key  to select the menu item "Pic. settings for Pr." And press the "OK" key.
- Use the corresponding numeric keys (in this example: **4** for noise reduction) to select the desired menu items.
- In the setting window, use the - + key to change the setting.
- Press the "OK" key to save the new setting.
- Press the "EXIT" key to close the TV menu.

MENU

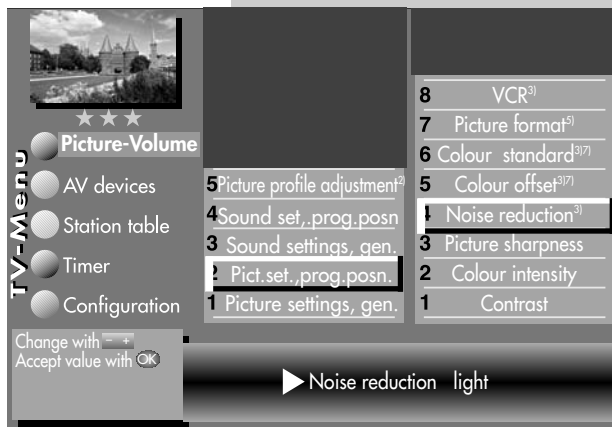

EXIT



2) Possible only on sets equipped with this function.
 3) See glossary for an explanation.
 5) Available only for DVB stations!
 7) Available only for analogue stations!

Opening the menu

 

MENU



F2



F1 ↑

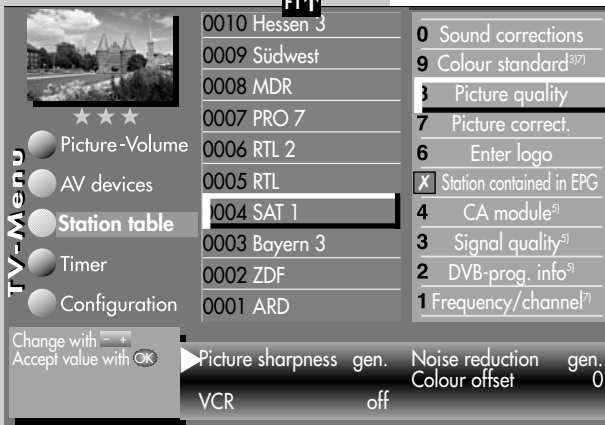

EXIT



11.2 Picture Settings for Programme via Station Table

Individual picture settings for programme position xy:

- Select the programme position whose picture settings you wish to change.
- Press the "MENU" key.
- Press the white key . The station table is displayed with the currently active programme position highlighted.
- Press the **F2** key to enable editing of the station table.
- Press the cursor control key to move to the subject side.
- Use the corresponding numeric keys (in this example: **5**) for the picture quality menu items.
- In the setting window, use the cursor control key to select the desired function.
- Use the - + key to change the setting. "gen." means here that the new setting will overwrite the related general picture setting (see page 24).
- **The individual settings made here which differ from the general settings remain saved.**
- Press the "OK" key to save the new settings.
- Press the "EXIT" key to close the TV menu.

3) See glossary for an explanation.

5) Available only for DVB stations!

7) Available only for analogue stations!

12. General Sound Settings

Opening the menu

👉 Some of the menu items are not available in a 2 ** menu.

 

The sound settings volume, treble, bass, stereo wide and spatial sound can be set generally for all programme positions and saved as standard values which can be recalled at any time by pressing the "OK" key.

Opening the sound settings menu:

- Press the "MENU" key.
The TV menu appears on the screen.
- Press the blue key . The menu "Picture and sound" and the menu item "General picture settings" are pre-selected.
- Use the corresponding numeric key (in the example: **3**) to select "General sound settings".
- Use the corresponding numeric keys to select the desired menu items in the right-hand column.
- Press the "OK" key to open the selected menu item for editing.
- In the setting window, use the - + key to change the setting.
- Use the cursor control key ▼ to select the third line "Save as standard value".
- If you wish to save the new setting, use the - + key to select "Yes".
- Press the "OK" key to save the new settings as standard values.
- Press the "EXIT" key to close the TV menu.

👉 If the standard values do not provide satisfactory results for some programme positions, you can make different individual settings for these positions. See sections 12.1.

MENU

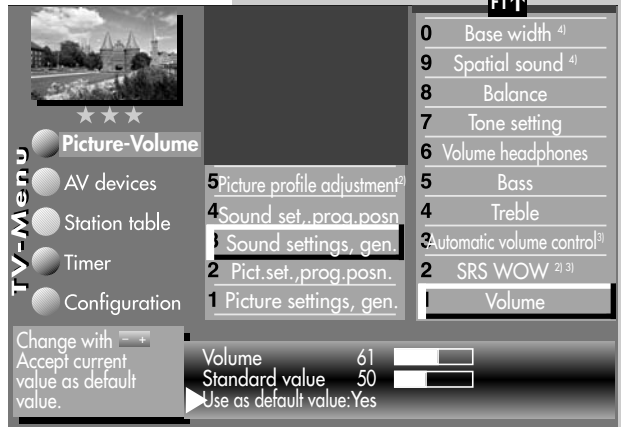

EXIT



 
2) Possible only on sets equipped with this function.

3) See glossary for an explanation.

4) Available only if SRS WOW is switched off

Opening the menu

MENU



EXIT



The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

2) Possible only on sets equipped with this function.

3) See glossary for an explanation.

4) Available only if SRS WOW is switched off

12. General Sound Settings

Some of the menu items are not available in a 2 ** menu.

Setting SRS-WOW²⁾

- Press the "MENU" key.

The TV menu appears on the screen.

- Press the blue key . The menu "Picture and sound" and the menu item "General picture settings" are pre-selected.

- Press the numeric key **3** to select "General sound settings".
- Use the corresponding numeric key (in the example: **2**) to select "SRS-WOW"²⁾.
- In the setting window, use the - + key to change the setting.
- Press the "OK" key to save the changed setting.
- „Press the "EXIT" key to close the TV menu.

If the SRS-WOW²⁾ function is active, the menu items "stereo wide" and "spatial sound" are disabled.

12. General Sound Settings

Opening the menu


Automatic volume correction


Some TV stations transmit their commercials at a higher sound volume than that for the normal programme. In order to save you from adjusting the volume each time with the remote control, you can activate automatic volume correction.

With this function active, there is little difference in the volume levels for the normal programme and the commercials.



The setting made here applies to all programme positions.

Opening the volume correction menu:

- Press the "MENU" key.
The TV menu appears on the screen.
- Press the blue key . The menu "Picture and sound" and the menu item "General picture settings" are pre-selected.
- Use the corresponding numeric key (in the example: **3**) to select "General sound settings".
- Use the corresponding numeric key (in the example: **3**) to select "Volume correction".
- In the setting window, use the - + key to change the setting.
- Press the "OK" key to save the new setting.
- Press the "EXIT" key to close the TV menu.

 **The function "Volume correction" in the menu "General sound settings" does not overwrite the function "Volume correction" in the menu "Sound settings for Pr..."**

 MENU

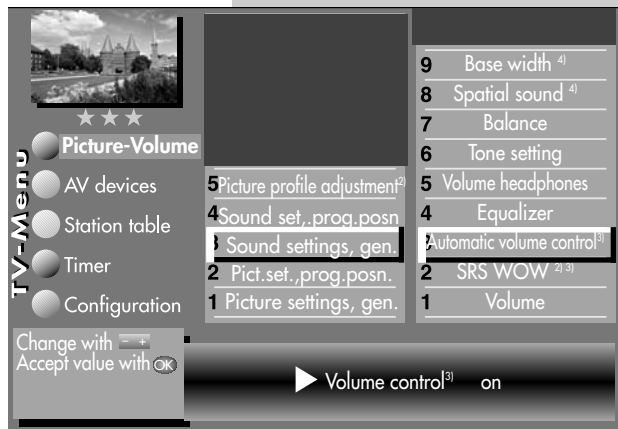

EXIT

 



2) Possible only on sets equipped with this function.

3) See glossary for an explanation.

Opening the menu

MENU

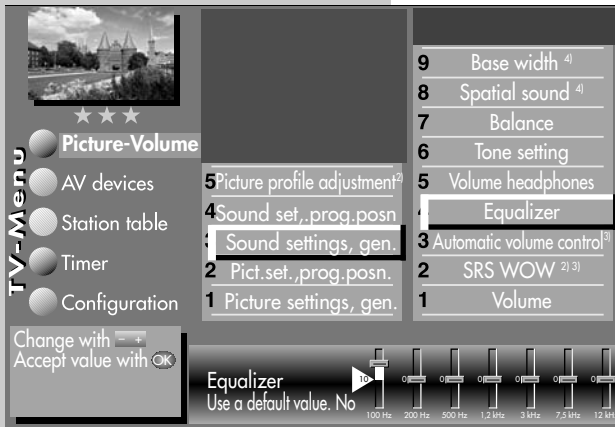

EXIT



12. General Sound Settings

Some of the menu items are not available in a 2 ** menu.

Audio frequencies can be individually adjusted to your personal tastes in the "Equalizer" menu.

Adjust Equalizer:

- Press the "MENU" key.
The TV menu appears on the screen.
- Press the blue key . The menu "Picture and sound" and the menu item "General picture settings" are pre-selected.
- Use the corresponding numeric key (in the example: **3**) to select "General sound settings".
- Use the corresponding numeric key (in the example: **4**) to select "Equalizer".
- Press Cursor control key and adjust each slider in turn.

- Change the setting with the - + key.
- With the cursor control key activate the line "As standard".
- To save the new value press the - + key and select "Yes".
- Press the "OK" key to save the new setting.
- Press the "EXIT" key to close the TV menu.


2) Possible only on sets equipped with this function.

3) See glossary for an explanation.

12. General Sound Settings

Opening the menu

Base width and spatial sound

 The menu points base width and spatial sound are only shown when the function "SRS WOW" is turned off.


Base width




In the case of stereo transmissions, the base width (= spatial distance between the loudspeakers) can be artificially widened to achieve a larger stereo triangle.

Spatial sound

In the case of mono transmissions, an artificial stereo effect can be produced.


Activate base width/spatial sound:

- Press the "MENU" key.
The TV menu appears on the screen.
- Press the blue key . The menu "Picture and sound" and the menu item "General picture settings" are pre-selected.
- Press the numeric key **3** to select "General sound settings".
- Select "Spatial sound" or "Base width" with key allocated, in the example **8** or **9**
- In the setting window, use the - + key to change the setting.
- Press the "OK" key to save the changed setting.
- „Press the "EXIT" key to close the TV menu.

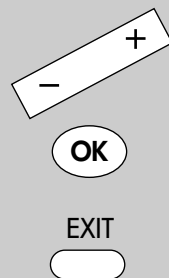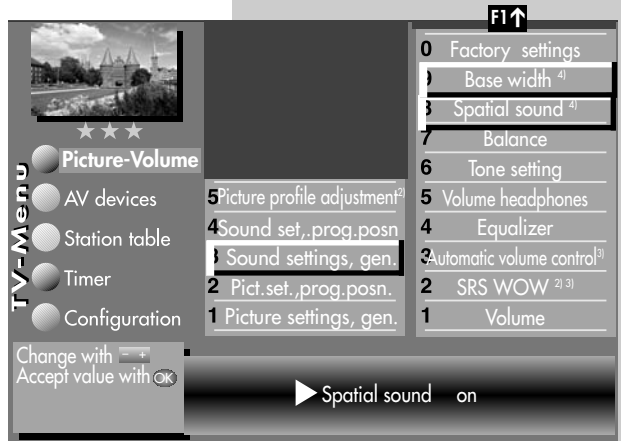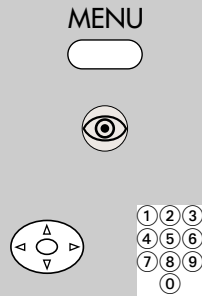

2) Possible only on sets equipped with this function.
 3) See glossary for an explanation.
 4) Available only if SRS WOW is switched off

Opening the menu

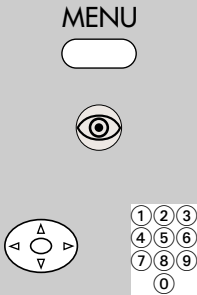

12.1 Sound Settings for Programmes via TV Menu


*Some of the menu items are not available in a 2 ** menu.*

Volume correction

Various TV stations broadcast their programmes with different sound volumes. This volume difference can be minimised by correcting the volume. This adjustment remains active even if the standard sound values are recalled.


Adjusting the volume correction:

- Press the "MENU" key. The TV menu appears on the screen.
- Press the blue key . The menu "Picture and sound" and the menu item "General picture settings" are pre-selected.
- Use the corresponding numeric key (in the example: **4**) to select "Sound settings for Pr."

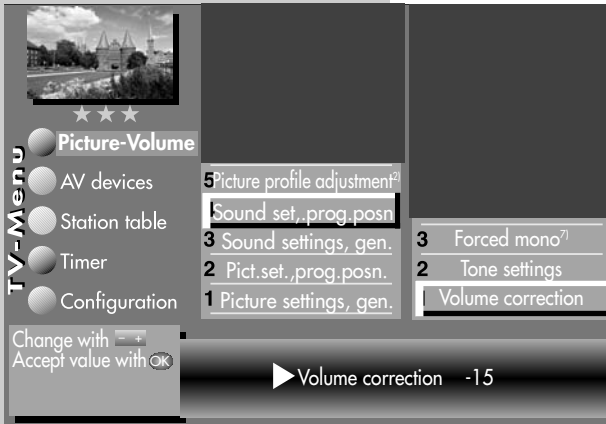

- Press the "OK" key and then, in the setting widow, use the - + key to change the setting.
- Press the "OK" key to save the new settings.
- Press the "EXIT" key to close the TV menu.

Individual sound settings can also be made in the station table.

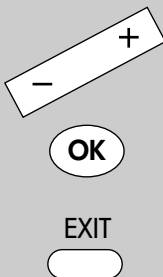

The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

7) Available only for analogue stations!

12.1 Sound Settings for Programmes via TV Menu


Opening the menu

 **Some of the menu items are not available in a 2 ** menu.**




Tone setting

The tone setting can be set to "Normal" or "Speech". The setting "Speech" should be used primarily for stations which broadcast mainly programmes with a lot of speech, such as news stations. The setting "Normal" is better for music programmes.

Adjusting the tone setting :



- Press the "MENU" key.
The TV menu appears on the screen.
- Press the blue key . The menu "Picture and sound" and the menu item "General picture settings" are pre-selected.
- Use the corresponding numeric key (in the example: **4**) to select "Sound settings for Pr.".
- Use the corresponding numeric key (in the example: **2**) to select "Tone settings".
- In the setting window, use the - + key to change the setting.
- Press the "OK" key to save the new settings.
- Press the "EXIT" key to close the TV menu.

 **Individual sound settings can also be made in the station table.**

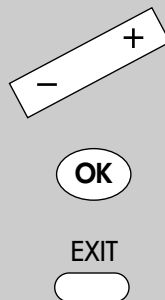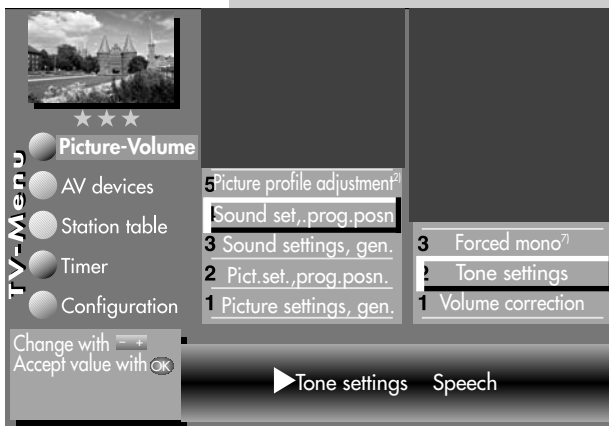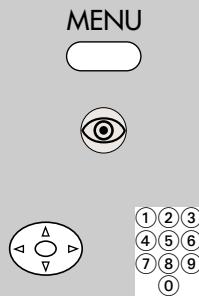

Opening the menu

 MENU

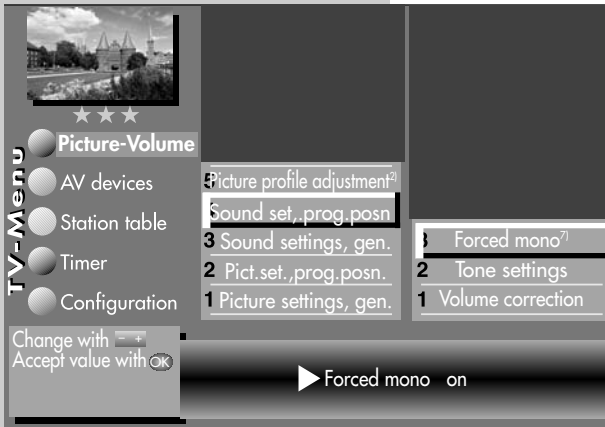

EXIT



12.1 Sound Settings for Programmes via TV Menu

Some of the menu items are not available in a 2 ** menu.

Forced mono⁷⁾

It may happen that your TV set switches from mono to stereo in the middle of a programme, although no stereo sound is being transmitted. This is generally caused by the local reception conditions. If you activate "Forced mono" for the selected programme position, all programmes from this station will be reproduced in mono.

Activating forced mono:

- Press the "MENU" key. The TV menu appears on the screen.
- Press the blue key . The menu "Picture and sound" and the menu item "General picture settings" are pre-selected.

- Use the corresponding numeric key (in the example: **4**) to select "Sound settings for Pr.".
- Use the corresponding numeric key (in the example: **3**) to select "Forced mono".
- In the setting window, use the - + key to change the setting.
- Press the "OK" key to save the new settings.
- Press the "EXIT" key to close the TV menu.

Individual sound settings can also be made in the station table.

2) Possible only on sets equipped with this function.




7) Available only for analogue stations!

12.2 Sound Settings for Prog. via the Station Table

Opening the menu

 *Some of the menu items are not available in a 2 ** menu.*

Making sound corrections:

- Select the programme position whose sound settings you wish to change.
- Press the "MENU" key.
The TV menu appears on the screen.
- Press the white key . The station table is displayed with the currently active programme position highlighted.
- Press the F2 key to enable editing of the station table.
- Use the cursor control key  to move to the subjects side.
- Use the corresponding numeric keys (in this example:  for sound corrections) to select the desired menu items.
- In the setting window, use the cursor control key to select the desired functions.

The use of the - + key to change the selected setting. "gen." means here that the new setting will overwrite the general sound settings (see pages 26).



 *The individual settings made here, which differ from the standard values, remain saved.*

- Press the "OK" key to save the new settings.
- Press the "EXIT" key to close the TV menu.

MENU



F2

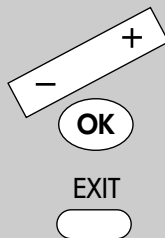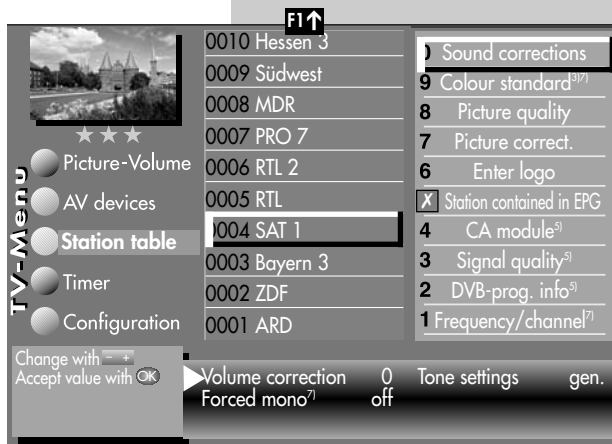



3) See glossary for an explanation.

5) Available only for DVB stations!

7) Available only for analogue stations!

Opening the menu

 MENU

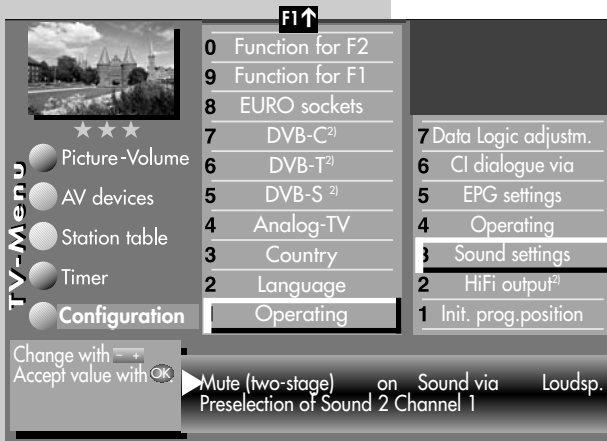

EXIT



12.3 Sound Settings Mute Function

In the menu "Sound settings", you can activate a two-stage mute function.

When this function is active, the volume in TV mode can be reduced in two stages with the mute key .

Activating the mute function

- Press the "MENU" key to open the TV menu.
- Press the red key to open the "Configuration" menu.
- Press the "OK" key to move to the right side of the menu.
- Use the cursor control key or the corresponding numeric key (in the example: **(3)**) to select the menu item "Sound settings".
- In the setting window, use the **- +** key to set the function "Mute (2-stage)" to "On".
- Press the "OK" key to save the setting.
- Press the "EXIT" key to close the TV menu.

In normal TV mode, the mute key is used as follows:

- Press it once to reduce the volume by 12 scale divisions.
- Press it again within five seconds to reduce the volume to "00".
- Pressing the key once again restores the volume to its original level.

During films for the blind, the scenes are described in the dialogue intervals. Under "Dual channel", select "Audio 2" if you want to receive films for the blind (with audio descriptions).

2) Possible only on sets equipped with this function.

12.4 Sound Settings

HiFi-output



On the back of the TV set, there are audio sockets (see picture and page 112 of the user's guide) with which you can connect an AV device to the TV set.


👉 *Settings in the "Hi-fi output" and "Sound settings" menu options are then only necessary if the TV set will be connected to an AV device, for example a hi-fi receiver, radio headphones, Surround decoder etc.*

The "Hi-fi output" and "Sound settings" menu options are linked to each other. The link is described on pages 45-47.

The sound can be output via a **cinch cable** or an **optical audio cable** ("Toslink", available in an accessories shop).



HiFi output settings

- Press the "MENU" key to open the TV menu.
- Press the red button  to open the "Configuration" menu.
- Use the cursor control key  to access "Init. prog. position".
- Select the menu option "hi-fi output" with the assigned numeric key. In the example it is **2**.
- Set the desired parameters in the settings window with the - + key.
- Press the **OK** button to save the new settings.
- Press the "EXIT" key to close the TV menu.

For normal TV mode, the yellow button  and the - + key can be used to set "Speaker on".

2) Possible only on sets equipped with this function.

Opening the menu

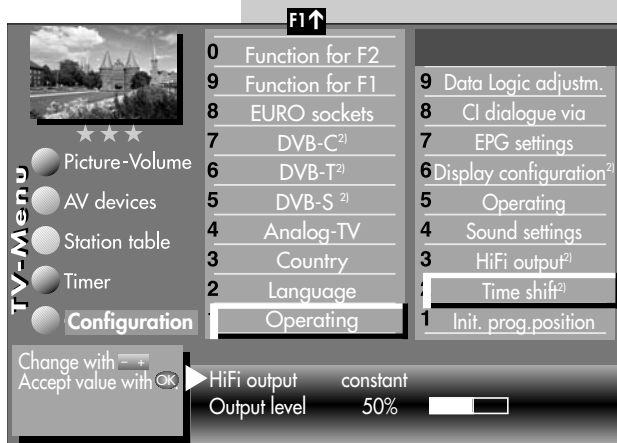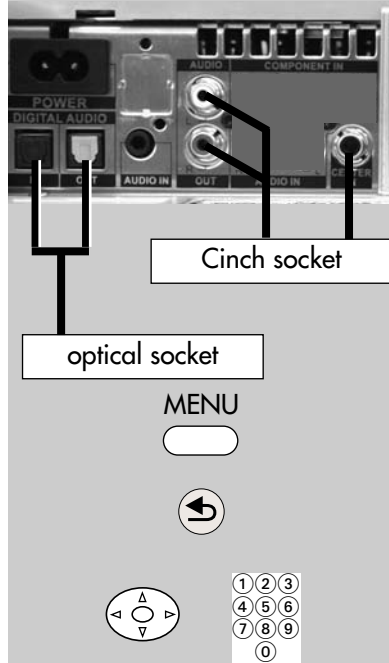

EXIT



Opening the menu




12.5 Sound Settings Speakers


There are audio sockets (see picture and page 112 of the user's guide) on the back of the TV set with which you can connect an AV device to the TV set.

Settings in the "hi-fi output" and "Sound settings" menu options are only necessary if the TV set will be connected to an AV device, for example a hi-fi receiver, radio headphones, Surround decoder etc.


The "hi-fi output" and "Sound settings" menu options are linked together. The link is described on pages 45-47.

Speaker settings

- Call up the TV menu with the **MENU** button.
- Use the red button  to open the "Configuration" menu.
- Press the **OK** button and change to the right column.
- With the cursor control key  or the assigned numeric key  in the example), select the „Sound settings" function.

• In the settings window, use the cursor control key  to access the "Speakers" menu option.

- Set "Centre speaker" with the - + key.
- Press the OK button to save the new settings.
- Clear the TV menu with the EXIT button.



For TV mode, the yellow button  and the - + key can be used to set "Speakers" temporarily.


MENU




F1 

TV-Menu <ul style="list-style-type: none"> Picture-Volume AV devices Station table Timer Configuration 	0	Function for F2	9	Data Logic adjustm.
	9	Function for F1	8	CI dialogue via
	8	EURO sockets	7	EPG settings
	7	DVB-C ²⁾	6	Display configuration ²⁾
	6	DVB-T ²⁾	5	Operating
	5	DVB-S ²⁾	4	Sound settings
	4	Analog-TV	3	HiFi output ²⁾
	3	Country	2	Time shift ²⁾
	2	Language	1	Init. prog.position
	1	Operating		

Change with 
 Accept value with 

 Mute (two-stage) on  Speakers Center
 Preselection of Sound 1




EXIT




2) Possible only on sets equipped with this function.


12.6 Sound Settings, Overview

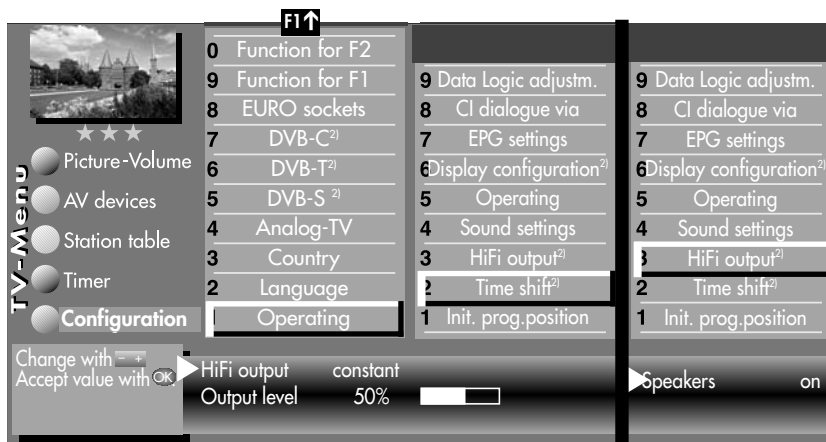


„HiFi output“	„Sound settings“	
HiFi output „constant“	Speakers „On“	The volume on the “AUDIO OUT sockets” on the back of the TV set remains “constant” at the % value set in the menu. The sound is also output via the speakers of the TV set. The volume of the TV set speaker can be changed with the - + button of the remote control.
	Speakers „Off“	The volume on the “AUDIO OUT sockets” on the back of the TV set remains “constant” at the % value set in the menu. The sound is <u>not</u> output via the speakers of the TV set. The symbol for the mute setting appears on the screen. The volume cannot be changed with the - + button of the remote control.
	Speakers „Center“	The sound of an AV device connected to the “CENTRE IN socket” (e.g. Surround decoder) is output through the speaker of the TV set. The speakers of the TV set are thus used as “centre speakers”

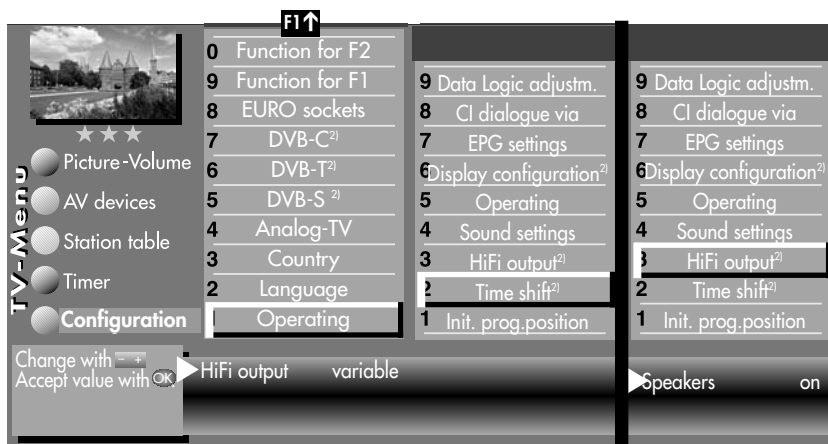

12.6 Sound Settings, Overview



„HiFi output“	„Sound settings“	
HiFi output „variabel“	Speakers „On“	The volume on the "AUDIO OUT sockets" on the back panel of the TV set is adjustable. The sound is also output via the speakers of the TV set. The volume of the TV set speakers and the volume on the "AUDIO OUT sockets" can be changed with the - + button of the remote control.
	Speakers „Off“	The volume on the "AUDIO OUT sockets" on the back panel of the TV set is adjustable. The sound is not output via the speakers of the TV set. The symbol for the mute setting appears on the screen  The volume on the "AUDIO OUT sockets" can be changed with the -+ button of the remote control.
	Speakers „Center“	The sound of an AV device connected to the "CENTRE IN socket" (e.g. Surround decoder) is output through the speaker of the TV set. That way, the speakers of the TV set are used as "Centre speakers".

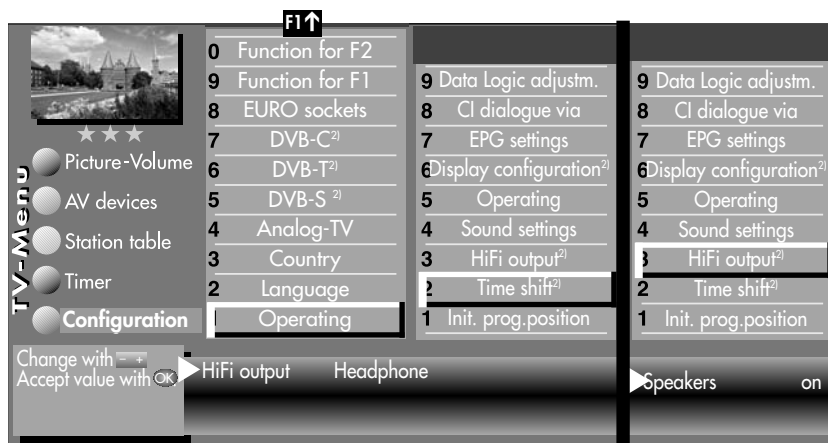12.6 Sound Settings, Overview



„HiFi output“	„Sound settings“	
HiFi output „Headphone“	Speakers „On“	The volume on the "AUDIO OUT sockets" on the back panel of the TV set is adjustable. The sound is also output via the speakers of the TV set. The volume of the TV set speakers can be changed with the - + button of the remote control. Changing the volume on the "AUDIO OUT sockets": - press the yellow button  . - press cursor button ▲ or ▼ and select "Headph. vol.". - use the - + Tbutton to change the volume. The headphones output on the front or side will also be changed.
	Speakers „Off“	The volume on the "AUDIO OUT sockets" on the back panel of the TV set is adjustable. The sound is not output via the speakers of the TV set. The symbol for the mute setting appears on the screen  . The volume on the "AUDIO OUT sockets" can be changed with the - + button of the remote control. The headphone output on the front or side will also be changed.
	Speakers „Center“	The sound of an AV device connected to the "CENTRE IN socket" (e.g. Surround decoder) is output through the speaker of the TV set. The speakers of the TV set are thus used as "Centre speakers"

12.7 Connecting Headphones

For the **Talio**, **Linus** and **Sirius**, the headphones connector is located behind a flap. See page 111.

Press ●●● to open the flap. The headphones connector is located behind a flap on the left side for the **Axio**. See page 111.

Press III in order to open the flap.

Radio headphones can also be connected to the AUDIO OUT sockets on the back of the TV set. Also see page 112. The sound settings for the radio headphones should then be set as described on page 47.

We recommend headphones with impedance that is not less than 32 Ohm.

For headphones with less impedance (approx. 8 Ohm), the dynamic range is smaller.


The headphones volume can be saved as a default value (see Chapter 12.)



Setting the volume too high when using headphones or earphones can result in damage to the ears - including the complete loss of hearing.

12.8 Sound 1, Sound 2

When receiving a dual-language programme, you can switch between the two sound channels.


In TV mode, press and hold the yellow key  until the sound function "Sound mode" is selected.

Then use the - + key to select Sound 1 or Sound 2.



13. Automatic zoom




Opening the menu


 **The menu item "Automatic zoom" is not available in a 2 ** menu.**

When the automatic zoom function is active, programmes in a "widescreen" format (such as programmes in 16:9) are expanded to fill as much of the screen as possible.


If the function is inactive, the programmes are displayed in their original format.

Activating the automatic zoom ²⁾

- Press the "MENU" key. The TV menu appears on the screen.
- Press the blue key . The menu "Picture and sound" and the menu item "General picture settings" are pre-selected.
- Use the cursor control key  to select the menu item "Brightness".
- Use the corresponding numeric key (in the example: **8**) to select the function "Zoom/Panorama".
- Use the cursor control key  to select the menu item "Automatic zoom".
- Use the - + key to change the setting.
- Press the "OK" key to save the new setting.
- Press the "EXIT" key to close the TV menu.

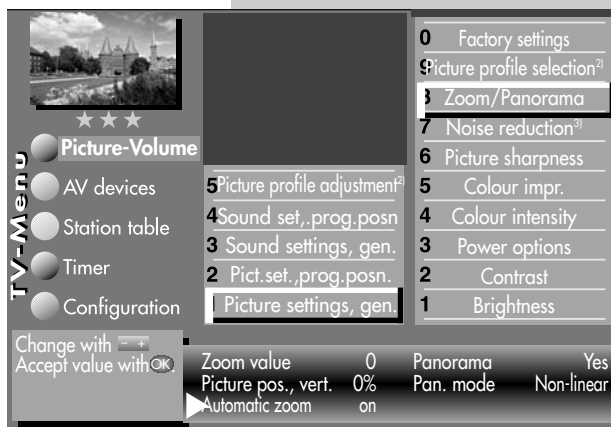

MENU


 


EXIT



The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

Opening the menu

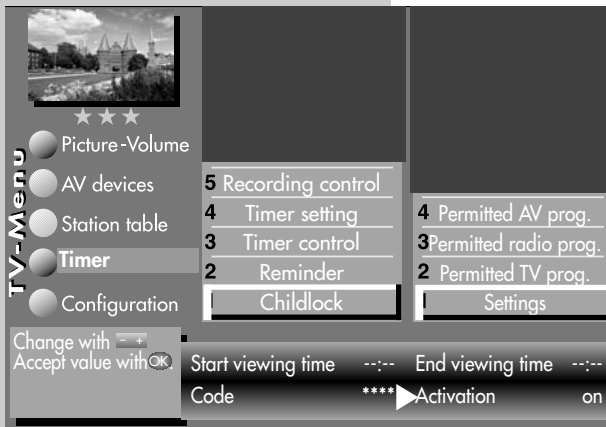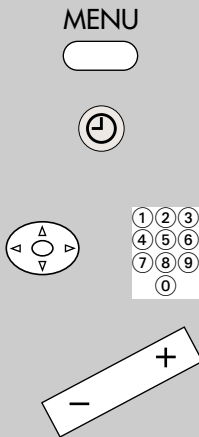

The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

14. Childlock

With the aid of the childlock function, you can determine whether or not the TV set can be switched on and which stations may be selected at which times. The childlock can be set such that:

- it is always active,
- one to six TV, radio or AV programmes (Prog A ... Prog F) are exempted from the locking function (permitted programmes), or
- all programmes, or programmes which are not locked, may be viewed during a permitted time period (TV start – TV end).

The childlock must be saved once with a 4-digit "code" (password).

a) Activating the childlock

- Press the "MENU" key. The TV menu appears on the screen.
- Press the green key to open the menu "Timer".
- Use the cursor control key to select "Settings" and press the "OK" key.
- In the setting window, use the cursor control key to select the menu item "Activate" and then use the - + key to set the childlock to "Active".
- Use the cursor control key to select "Code" and enter your personal 4-digit code with the numeric keys.
Make a note of this code!
- Press the "OK" key to save the new setting.
- Press the "EXIT" key to close the TV menu.

14. Childlock

b) Permitted programmes:

Activate the childlock as described in step a).


Use the corresponding numeric key to select the menu item "Permitted xx progs." (xx = TV, radio or AV). Press the "OK" key and, in the setting window, enter the programme positions with the numeric keys or use the - + key to select the desired programme positions.

- Press the "OK" key to save the new settings.

c) TV start – TV end

Activate the childlock as described in step a). In the setting window, use the cursor control key to select the start and end times and enter the desired times with the numeric keys.

Press the "OK" key to save the settings.

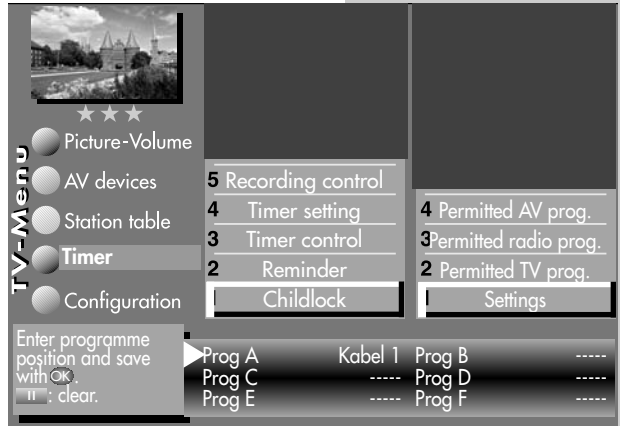

Protecting the childlock settings with your code

- Use the cursor control key to select "Code" and enter your personal code (password) with the numeric keys.

👉 Make a note of this code, since the child lock can be deactivated only if the correct code is entered !

- Press the "OK" key to save the settings.
- Press the "EXIT" key to close the TV menu.
- Switch off the TV set with the ⏻ key.


👉 The childlock is not fully activated until the TV set is switched off.

Deactivating the childlock

If the childlock is active, a window requesting your personal code is displayed each time the TV set is switched on. Entering the correct code enables the TV set and it can then be used normally until it is switched off again. To cancel the childlock function, proceed as described in step a), above, and set the childlock to "Inactive".

Opening the menu

MENU

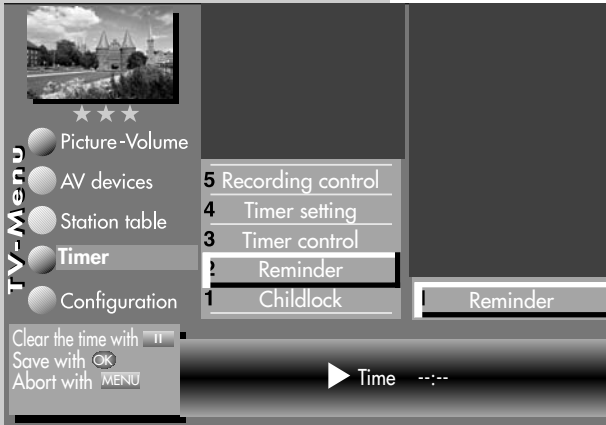

EXIT



The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

15. Reminder

The menu item "Reminder" is not available in a 2 ** menu.

If you wish to be reminded of something while watching TV, you can set a reminder for any desired time. At this time, a window with the reminder appears on the screen.

Setting the reminder time

- Press the "MENU" key to open the TV menu.
- Press the green key to open the "Timer" menu.
- Press the numeric key to select "Reminder".
- Press the "OK" key and then, in the setting window, enter the desired time (four digits) with the **numeric keys**.
- Press the "OK" key to save this setting.
- Press the "EXIT" key to close the TV menu.

At the programmed time, a window with the reminder is displayed on the screen. You can close this window by pressing any key on the remote control.

If you do not want the reminder to appear every day, you must clear the time in the menu by pressing the II key.

16. Timer Control

Opening the menu

 **The menu items "On time" and "Off time" are not available in a 2 ** menu.**


In the menu item "Timer control", you can programme a switch-on time, a switch-off time and a sleep timer (switch off after ...).

The **switch-on time** is the time at which the TV set is to be switched on automatically.



The **switch-off time** is the time at which the TV set is to be switched off automatically.

The **sleep timer** (switch off after...) switches off the TV set after a programmed delay (which can be set in steps of 15 minutes).


Setting the on time and off time

- Press the "MENU" key to open the TV menu.
- Press the green key  to open the "Timer" menu.
- Press the numeric key **2** to select "Timer control".
- Press the "OK" key and then, in the setting window, enter the desired time (four digits) with the numeric keys.
- Press the "OK" key to save the setting.
- Press the "EXIT" key to close the TV menu.

At the programmed on time, the TV set is switched on from the standby state (red LED lights). You must confirm this automatic action by pressing any key on the remote control. If this is not done, the TV set will switch back to the standby state after 10 minutes. This ensures that the TV set does not stay on if you are not at home.

 **If you do not want to have the TV set switch itself on each day, you must clear the on and off times in the menu by pressing the  key.**

MENU

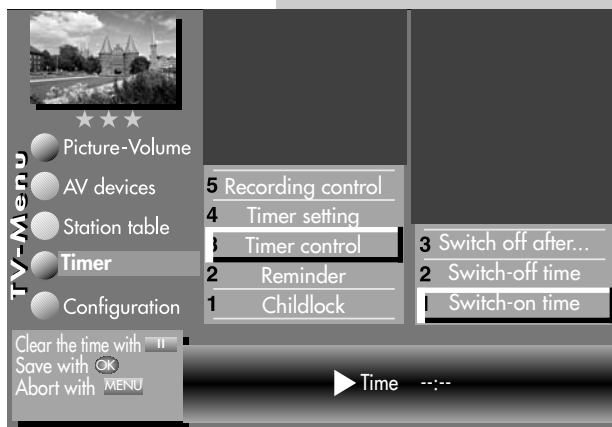

1

....

9





EXIT



The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

Opening the menu

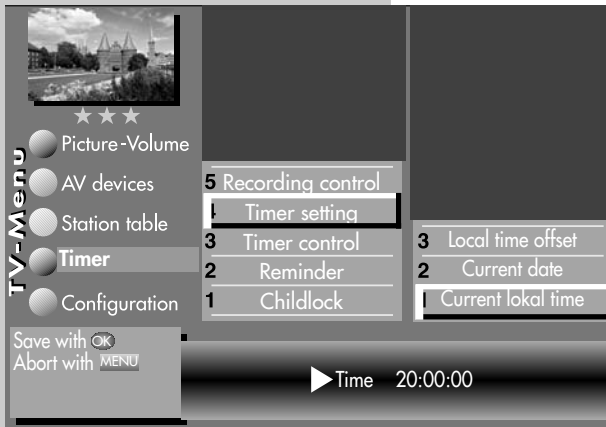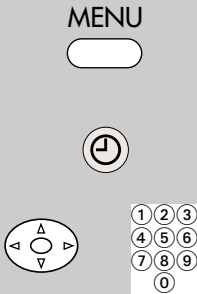

EXIT



The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

16.1 Setting the Time and Date

Normally, the TV set will determine the current date and time from the Teletext signals of the currently selected station (providing this station sends Teletext).

Note: For this the device must be turned on with the mains switch.

If this is not the case, or if an incorrect date or time is displayed, you can set the date and time manually.

In almost all cases, you will not need to do this.

Even the changeover between winter time and summer time is executed automatically.

Setting the time and date manually:

- Press the "MENU" key to open the TV menu.
- Press the green key to open the "Timer" menu.
- Press the numeric key **4** to select "Time settings".
- Press the "OK" key and then, in the setting window, enter the current time with the numeric keys.

- You can then start the internal clock precisely by pressing the "OK" key when the time you have entered is reached.

- Press the numeric key **2** to select "Current date".

- In the setting window, enter the date with the numeric keys.


- Press the "OK" key to save the settings.

- Press the "EXIT" key to close the TV menu.

The **local time offset** is the difference between the local time where the TV set is installed and Greenwich Mean Time (GMT). The TV set normally detects this time offset and also the additional changeover to summer time.

The time needs to be set manually only if it is not detected automatically.

16.2 Recording Control


 **This menu item is not available in a 2 ** menu.**

In the menu item "Recording control", you can set a lead time and an overrun time for timer recordings. The TV set is automatically switched to the programme position from which the recording is to be made at a time which is the number of minutes programmed as the **lead time** before the programmed starting time for the recording.




At the end of the programmed recording time, the TV set remains set to this programme position for the period programmed as the **overrun time**.

For **VPS** recordings, the TV set is automatically switched to the programme position from which the recording is to be made at a time which is the number of minutes programmed as the VPS lead time before the programmed starting time for the recording. By default, the TV set switches to this programme position about one hour before the programmed start time for a VPS recording.

Setting the lead time, VPS lead time and overrun time

- Press the "**MENU**" key to open the TV menu.
- Press the green key  to open the "Timer" menu.
- Use the corresponding numeric key (in the example: **5**) to select the menu item "Recording control".
- Use the cursor control key to select the desired menu item.
- Press the "**OK**" key and then, in the setting window, use the **- +** key to set the desired lead or overrun time.

Opening the menu

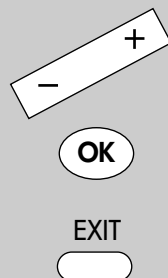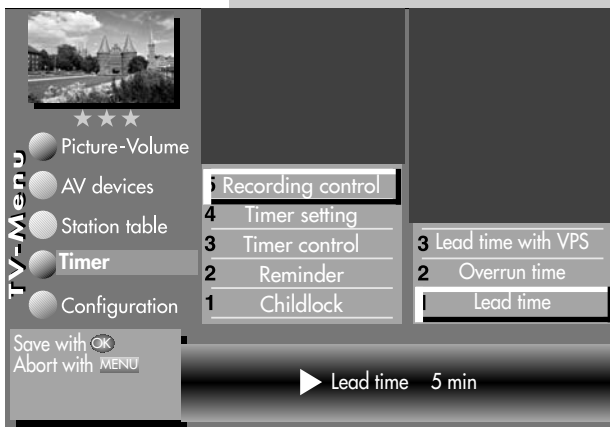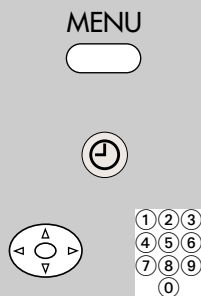

The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

16.2 Recording Control

- Press the "OK" key to save the settings.
- Press the "EXIT" key to close the TV menu.

Application example:

You wish to record a programme received via DVB-T. The programme starts at 22:45 hours, ends at 23:40 hours and is broadcast on ITV.


Set up a "manual timer" as described in Section 17, "Special Functions 2" or set a timer with the aid of the EPG as described in Section 22.3 "Using EPG, Recording a Programme". The timer recording does not use VPS.

Set the lead time to 3 minutes and the overrun time to 10 minutes.

At the programmed start time minus the programmed lead time of three minutes, the TV set is either:

- switched on from the standby state (red LED lights) with the programme position for ITV selected, whereby the screen remains dark but the programme is sent via the EURO socket to your recorder, or
- switched to the programme position for ITV if it is already switched on.

At the programmed end of the recording (at 23:40 hours) the programme position for ITV remains selected for the programmed overrun time of 10 minutes.

 ***It is not possible to switch to another programme position during the programmed lead and overrun times.***

17. Special Functions Picture-in-Picture

Opening the menu

In the case of TV sets with two receivers, it is possible to display a DVB programme and to open a window to show a different analogue programme or DVB programme from the second receiver or from the AV programme position.


F1



👉 In principle only one HDTV programme can be shown. An HDTV picture can therefore not be shown as a PIP. In the case of 100Hz- devices, it is not possible for a PIP to be shown for the HDMI- and DVI-AV-programme position.

Activating the PIP function

- Press the **F1** key. A small window will appear. If an HDTV programme is shown as the main picture, the AV programme position AV1 will always appear as the PIP.

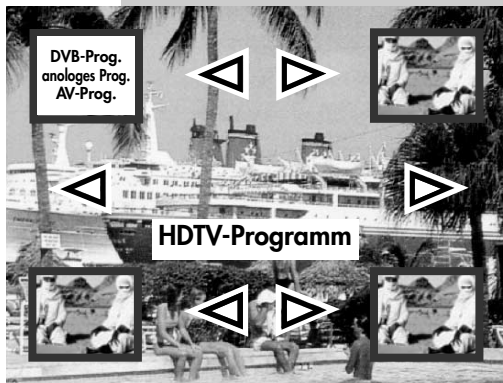

- If either a DVB programme or an analogue programme is shown as the main picture, the same station will always appear again as the PIP.
- By using the numeric keys or the "P+/P-" rocker switch, it is possible to select a different AV programme position or a programme that is received with the second receiver as a PIP.
- You can use the cursor control keys ◀ ▶ to move the PIP picture on the screen. The last position to which this picture was set is saved.
- By pressing the "OK" key, you can set the frame of the PIP picture to active (red) or inactive (white).
- The contents of the PIP picture can be changed only if its frame is active (red).
- By using the numeric keys or the "P+/P-" rocker switch, it is possible to select a different AV channel slot or an analogue channel from the second receiver.

Opening the menu





EXIT




17. Special Functions Picture-in-Picture

If you wish to display the picture from a connected AV device as a picture-in-picture, press the "AV" key and then use the **numeric keys** to select the desired AV device.

If you wish to display the picture from another station, use the numeric keys to select the desired programme position.

- Pressing the red key  swaps the contents of the two pictures.
- Pressing the green key  causes the PIP picture to expand to fill the screen and terminates the PIP function.
- To close the PIP picture, press the "EXIT" key.

 *If a recording has been programmed in the timer menu, activating the PIP function displays the programme which is being recorded.*

Opening the menu

F2



17. Special Functions Normal/Speech

Selection of "Normal" or "Speech" is described in Section 12.1, "Tone Settings".

In this menu, you can temporarily select "**Normal**" or "**Speech**". The selection remains active until you switch to another programme position, switch to standby mode or switch the TV set off completely.

This setting has no effect of the setting described in Section 12.1, "Tone Settings".



Special functions 2

1 Normal/Speech

9 Timer-Overview

0 Direct recording

17. Special Functions

JPEG Photograph Display²⁾

The JPEG photograph display is an image viewer for JPEG formats. The automatic image resizing and a full-picture mode ensure smooth, pleasant display.

Starting the photograph viewer:

- Connect the memory stick (exchangeable storage medium) to the USB socket / see page 112). The photograph display overview appears on the screen. The JPEG photograph display can also be started as follows:

- Press the "F2" key for approximately 2 seconds. The maximum possible selection appears.

- Press the numeric key **4** to call up the JPEG photograph display. The JPEG photograph display menu appears on the screen.

- Use the cursor control keys ▼ ▲ ◀ ▶ to select the desired image folder.
- Press the "OK" key to open the image folder.
- Use the cursor control keys ▼ ▲ ◀ ▶ to select the individual images.
- Press the "OK" key to open the selected image.
- Using the green key, the selected image can be rotated clockwise; with the red key, it can be rotated counter-clockwise.

Note: Images that have already edited on a PC cannot be rotated or displayed.

- To delete the image, press the II key.

Press the **EXIT** key to exit the photograph viewer.

Opening the menu

F2



4

OK



EXIT





²⁾ Possible only on sets equipped with this function.

Opening the menu


17. Special Functions JPEG Photograph Display²⁾

Starting the zoom function:

- When an image is displayed, the zoom function can be activated with the + key. A red outlined quadrangle appears in the image.
- Use the - + key to select the zoom factor (x2, x4, x8).
- Use the cursor control keys ◀▶▲▼ to move the red zoom quadrangle in the image in order to determine the image section to be magnified.
- Press the "OK" key for a magnified display of the selected image section.

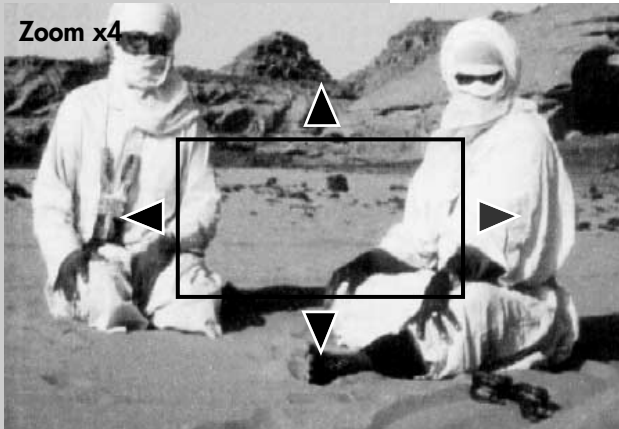 

- Use the cursor control keys ◀▶▲▼ to scroll the magnified image section.
- To return to the full screen, press the - key repeatedly until the "zoom" message disappears.

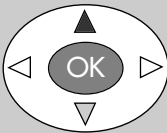

²⁾ Possible only on sets equipped with this function.


17. Special Functions

JPEG Photograph Display²⁾

Opening the menu

Starting the slide show:

- Use the cursor control keys ◀▶▲▼ to select the desired image folder.
- Press the "OK" key to open the selected image folder.
- Press the "F2" key and select the "Slide Show" function.
- The display of the individual images (display time 3 - 60 seconds) can be adjusted with the - + key.
- Press the "OK" key to start the slide show.
- During the slide show, the || key has the "Pause" function. Press the || key to resume the slide show.
- When the slide show is finished or stopped with "OK" or "EXIT", the photograph viewer appears again.

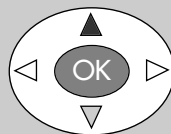

F2



Press **EXIT** to return to the TV picture.

EXIT



Prior to unplugging the USB memory stick, be sure to exit the photo display with the EXIT key!

There is otherwise a risk of losing data on the memory stick.

²⁾ Possible only on sets equipped with this function.

Opening Timeshift


17. Special Functions viewing-time shift mode²⁾

The TV set stores the recordings in temporary digital storage (time shift buffer).

The temporary digital storage is sufficient for recording approx. 130-300 min (SD) and 70-120 min (HD=HDTV programmes).


This information only represents approximate values, which can vary depending on the volume of data in the recording.

- Pause the programme with the II button.

The programme is recorded in the temporary storage. The name of the "paused" programme appears in the upper left corner of the screen. The green button  can be used to make the status display,

which gives you information about the current position in time shift mode, visible.



The time since the programme was „paused“ or alternatively recorded (05:50:00 in the example) is shown on the left below the bar display.

During pause mode, you can also change to a different programme position, to watch the news for example. Then, in addition to the name of the programme, the symbol  appears as a sign that the programme is „parked“.

When the news is over, you can press the II button again to continue the previously paused programme without having missed anything.

The time shift bar fills in with colour in accordance with the length of the pause. After a fill level of approx. 98%, the time shift bare is shown in red.

II

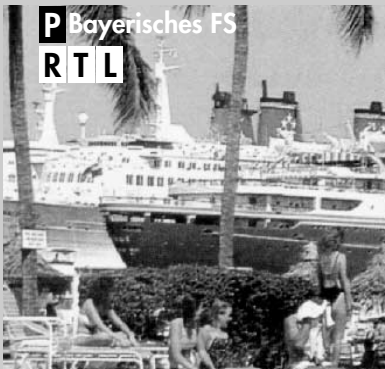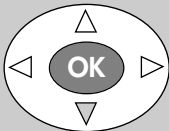

17. Special Functions viewing-time shift mode²⁾

Opening Timeshift

Everything that is further in the past than the set time will be lost.

- Press the **II** button again to continue watching the paused and recorded programme.
- Press the green button **Ⓢ** and show the play bar (see picture below).
- By briefly pressing the cursor control keys **◀▶** repeatedly, the replay can be forwarded in increments of +1 minutes and rewind in increments of -20 seconds.
- By holding down the cursor control keys **◀▶** mode will be enabled at twice the speed.
- By repeatedly pressing the cursor control keys **◀▶**, the replay can be forwarded or rewind at up to 32 times the speed.




In pause mode **II**, the programme can be forwarded or rewind in 10% increments.

If you want to return to the current status of the programme ("Live") from time shift mode, then press the green button **Ⓢ** to cause the status display to appear (play bar, see display insert in picture) and then press the **OK** button.

The amount of time that the programme has been „paused“ is shown on the left beside the bar display (-08:25 minutes in the example). The time that the replay lags behind the live broadcast is shown below the bar display (05:50 min in the example).

👉 *If the TV set is in stand-by mode or switched off, the recording will be lost.*

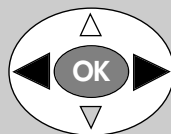

²⁾ Possible only on sets equipped with this function.

Opening the menu

17. Special Functions

Recording a programme with a timer

If you wish to record a programme which your video recorder or DVD recorder cannot receive directly because it does not have a suitable tuner (such as DVB-T or DVB-C), you can use the "Timer overview" to make such programmes available to the recording device.

Setting a timer manually for a recording:


- Press the **F2** key. If you press **F2** briefly, the function programmed for **F2** (see Section 18. "Programming the function keys") is executed. If you hold down **F2** for about two seconds, all possible selections are displayed.
- If all possible selections are displayed, press the corresponding numeric key (in the example: **9**) to open the timer menu.
- If a timer already exists, press the **F1** key.
- The cursor is located at the left of the first line "Record". The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set,

the various menu items may be displayed in a different order and numbered differently.

Use the - + key to set this menu item to "Yes".

- If desired, press cursor control key ▼ and use the - + key to activate the reminder function. If the reminder function is active, a reminder window is displayed on the screen one minute before the start time programmed for the timer.

- Use the **numeric keys** to select the programme position (see the station table of the TV set) which is to make the programme available for recording.

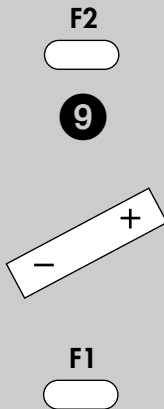

The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

17. Special Functions

Recording a programme with a timer

Opening the menu


- Press the cursor control key ▼ and use the **numeric keys** to enter the date, start time and end time of the programme you want to record..

☞ *If you inadvertently enter a wrong time, you can delete it with the **II** key or overwrite it with the numeric keys.*

- Press the cursor control key ▼ and use the - + key to select the recording device connected to the TV set which is to be used for the recording.
- Press the "OK" key to save the programmed settings. The settings are stored in the timer memory.
- Press the "EXIT" key to close the TV menu.

Clearing a timer:

- Press the **F2** key.
- Press numeric key **9** to open the timer menu.
- Use the cursor control key to select the timer you wish to clear and press **II** to mark it for deletion. A window is displayed on the screen, asking whether you really want to clear this timer. Confirm the intended action by pressing the appropriate key.

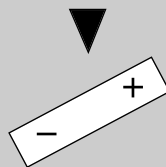

Recording	Yes	Vorschau	17:23
Reminder	Yes	+ Mo Di Mi Do Fr Sa So	29.04.
Pr	Sat 1	20:00 ✓✓	Das Erste -20:15
		Tagesschau	
		22:45 ✓✓	SAT 1 -23:40
		Planetopia	

Timer	Date	13.10.
	Start	22:45
	End	23:40
	VPS	No
	Recording device	Videorecorder

select.
0..9: set time
F1 new Timer.
II clear Timer.
edit

Opening the menu

17. Special Functions

Direct recording of a programme

If you wish to record the programme you are currently watching, you can start a direct (one-touch) recording to make the current programme available to a recording device connected to the EURO sockets.

Starting a direct recording:

- Press the **F2** key.
If you press **F2** briefly, the function programmed for F2 (see Section 18. "Programming the Function keys") is executed.
If you hold down **F2** for about two seconds, all possible selections are displayed.

F2



0



Recording	Yes
Reminder	Yes

Pr Sat1


Date	13.10.
Start	22:45
End	23:40
VPS	No

Recording device	
Videorecorder	

Change with - +
select.
OK save the timer.

- Press numeric key **0** to open the timer menu window.
The timer menu window displays the programme position, the date and the EPG data for the current programme or for the next two hours.
- If there is more than one AV device connected to your TV set, use the cursor control key **▼** to select the proposed recording device and use the **- +** key to select the desired device.

- Press the "OK" key to save the settings.

 **On the recording device (e.g. video recorder), select the AV programme position and start the recording by pressing the appropriate button (REC, OTR, etc.).**

17. Special Functions

Picture format

Opening the menu

Adjusting the picture format:

- Press the F3 key.
If you press F3 briefly, the function programmed for F3 (see Section 18. "Programming the Function keys") is executed.
If you hold down F3 for about two seconds, all possible selections are displayed.
- Press numeric key 1 to select the function "Picture format menu".
- Use the "P+/P-" rocker key to select the desired function. After selection of a picture format, you can also adjust the zoom setting by pressing the - + key within five seconds.
- The settings made here (except for the automatic zoom set in the TV menu) remain active until you switch to a different programme position or switch off the TV set.

Zoom / Picture position

After selecting the function "Zoom", you can adjust the zoom factor with the - + key. In addition, you can move the picture position 4) up and down on the screen in order, for example, to keep the station logo or the subtitles visible. To change the picture position, press and hold the F3 key until the selection is displayed. Then press numeric key 2 and use the "P+/P-" rocker key to move the picture.

Standard 4:3

This is the standard setting for all programmes in the 4:3 picture format.

 
F3



Special functions 3

- 1 Picture format
- 2 Pic. form., vertical

1



Opening the menu

17. Special Functions Picture format



Panorama

With the aid of the panorama function, you can expand programmes broadcast in 4:3 format to fill the screen of a 16:9 TV set. The picture is expanded uniformly in the horizontal direction. You can also zoom the picture. The panorama function can be activated and deactivated in the menu item "General picture settings" of the menu "Picture and sound".

16:9 Full picture

This function serves to display pictures from external devices (such as a 16:9 video recorder) with the correct aspect ratio.

17. Special Functions Picture Position

Opening the menu

If desired, the picture can be shifted up or down in order, for example, to make subtitles visible or to hide "ticker" displays.

Adjusting the picture position:

- Press the **F3** key.
If you press **F3** briefly, the function programmed for F3 (see Section 18., "Programming the Function keys") is executed.
- Press numeric key **2** to select the function "Picture position vertical".
- You can now use the **- +** key to move the picture up and down on the screen so that, for example, the station logo or the subtitles are visible.

 ***This setting is not saved. If you wish to save it as a global setting, use the procedure described in Section 11 to set it.***

F3



2





Special functions 3

- 1 Picture format
- 2 Pic. form., vertical

Opening the menu

17. Special Functions Audio/language selection

Various programs are transmitted with several audio channels (e.g. multilingual or ).

If you are receiving a multilingual programme the information box on the bottom left of the screen features the  logo.



Pr 30
arte
05.04.07

Press **F2** to see the list of available languages.

F2



Open menu:



Special functions 2

- 1 Normal/Speech
- 2 Language of progr.

- 9 Timer overview
- 0 Direct recording

2


- Press F2.
Press F2 briefly to run the function programmed for the key (see Chapter 18. "Programming function keys").

Press F2 for approx. 3 seconds and the max. possible selection is displayed.

- Press numeric key **2** and select the "Programme language" function.


- Select a language with the cursor control key **▲▼**.

- 1 German
- 2 France

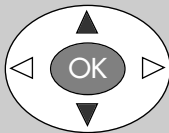

 Symbol in grey:

Other audio options e.g. dd = "Dolby digital" are available but are not selected.

 Symbol in white:

One of the audio options has been selected.



18. Programming the Function Keys


Opening the menu

The remote control has four function keys: F1, F2, F3 and AV. You can programme these function keys with any of the available functions.

If you press and hold any function key, a window with the available functions is displayed. The picture on the left shows the functions available for the F2 key.

Programming function key F1, F2, F3 or AV with a function

- Press the "MENU" key to open the TV menu.
- Press the red key  to open the "Configuration" menu.
- Continue pressing the "F1" key until all options are displayed.
- Use the cursor control key  or the corresponding numeric keys to select the desired "Function for.." (in this example: F2).
- Press the "OK" key and then use the cursor control key to select one of the available functions.
- Press the "OK" key to assign this function to the selected function key (the selected function is marked with "X").
- Press the "EXIT" key to close the TV menu.

 **If a function key is programmed with a function, this function can be called by briefly pressing the function key. Pressing and holding the function key displays a list of all available functions.**

2) Possible only on sets equipped with this function.



Special functions 2

- 1 Normal/Speech
- 2 Language of progr.

- 9 Timer overview
- 0 Direct recording

MENU



F1↑

<input type="checkbox"/>	Direct recording
<input checked="" type="checkbox"/>	Timer overview
<input type="checkbox"/>	Language of prog
<input type="checkbox"/>	Normal/Speech

▶ Function for F2
Timer overview

EXIT



19. EPG

EPG (Electronic Program Guide) is an electronic TV guide covering all major channels.

The guide may be made up of details from **NexTVView⁸⁾** and/or **DVB-SI**.

The **NexTVView⁸⁾** information is broadcast by various channels and also includes information for other broadcasting organizations.

DVB-SI (Digital Video Broadcasting-Service Information) is a service provided by different broadcasters. Programme details are broadcast digitally by each broadcaster exclusively for those programmes it offers.

NexTVView⁸⁾ and **DVB-SI** are similar in principle, but their content may differ in the detail offered.

The function is activated by pressing the button marked "EPG".

19.1 Activating the EPG


EPG



NexTVView details⁸⁾

Before NexTVView⁸⁾ details can be received, a new programme slot must be created in the menu. If the menu does not contain a slot for NexTVView⁸⁾, the following text applies.

A message will appear for all slots programmed to receive NexTVView:

 Accept this programme as an EPG programme ?

 **Yes**

Any other key close the window.

In this way, the TV asks whether this slot should be used to compile the information for the EPG programme guide.

8) NexTVView is transmitted by the following broadcasting organizations:

D and **A**: Kabel1,
CH SF1, TSR1, TSI1, TV5

F:Canal+, M6, TV5

Status as of 18 Aug 2006

Not possible with an external receiver !

19.1 Activating the EPG

Pressing the green key  for yes activates the slot in order to receive NexTVView. The message will not appear again.

If you know the NexTVView⁸⁾ slot, you can also enter it using the numeric keys in the TV menu.

You can overwrite existing programme slot numbers or delete them with the **II** key.

DVB-SI details

To receive DVB-SI data, no slot in the TV menu is needed.

Factory EPG settings:

- EPG NexTVView & DVB-SI
- NexTVView programme slot - - - -
- DVB-SI selection TV
- Prog. selection in the channel table all free slots*)

*) In the menu, "retain" is displayed, i.e. when you make an adjustment, this change is displayed in plain text after it is confirmed by selecting "OK" in the menu. "Retain" is then displayed in the menu as an indication that the previously confirmed setting has been retained.


In countries where NexTVView data⁸⁾ is unavailable, the menu setting should read "EPG DVB-SI" as illustrated.



Opening the menu

MENU




F1↑



TV-Menu  Picture-Volume AV devices Station table Timer Configuration	0	Function for F2	8	Data Logic adjustm.
	9	Function for F1	7	CI dialogue via
	8	EURO sockets	5	EPG settings
	7	DVB-C	5	Display configuration ²⁾
	6	DVB-T	4	Operating
	5	DVB-S	3	Sound settings
	4	Analog-TV	2	HiFi output ²⁾
	3	Country	1	Init. prog.position
	2	Language		
		Operating		

Change with  Accept value with 

EPG NextView & DVB-SI Pr selection in stationtable
 NextView prog. Kabel 1
 DVB-SI selection TV retain

F1↑

TV-Menu  Picture-Volume AV devices Station table Timer Configuration	0	Function for F2	8	Data Logic adjustm.
	9	Function for F1	7	CI dialogue via
	8	EURO sockets	5	EPG settings
	7	DVB-C	5	Display configuration ²⁾
	6	DVB-T	4	Operating
	5	DVB-S	3	Sound settings
	4	Analog-TV	2	HiFi output ²⁾
	3	Country	1	Init. prog.position
	2	Language		
		Operating		

Change with  Accept value with 

EPG DVB-SI Pr selection in stationtable
 DVB-SI selection TV retain

Not possible with an external receiver !

19.2 Collecting EPG data

NexTView data⁸⁾ is transmitted by various broadcasting organizations.


DVB-SI data is broadcast by each channel corresponding to its own content.

Information may therefore correspondingly vary.

Switch on your TV, so that EPG data can be compiled and/or updated. While data is being compiled the green LED is lit or „EPG“ lights in the display.

TV sets with one receiver unit:

- If a NexTView slot⁸⁾ has been set: Switch the TV to standby mode, using the mains key on your remote.
- If no NexTView slot⁸⁾ has been set and only DVB-SI details can be received: switch the set to standby.

 **After switching on the TV, data compilation will continue stop until it is switched to standby again.**

TV sets with two receivers:

The TV set collects EPG data via the second receiver, provided that the EPG station has also been stored there. For example: The EPG station (e.g. Kabel 1) can be received via DVB-T or DVB-C (1st receiver) and via DVB-S (2nd receiver)

Special notes:

The TV set's channel table lists all available channels in the programme guide, provided you do not make another selection in the channel table menu.









Channels broadcasting on a time-shared basis – e.g. arte/Kinderkanal – must be saved in separate programme slots (see 24). If you include all channels in the EPG, you won't be able to see very far ahead.

Exclude stations from the EPG TV guide:

You can decide which channels should appear in the EPG programme guide.

As a rule, the collection process gathers data for all free channels. The following options are available to exclude selected channels from the EPG programme guide:


Solution 1:

- Press the MENU key. The TV menu appears on the screen.
- Press the white key . The menu channel table appears with the active programme slot selected.
- Press F2 to permit editing of the channel list.
- Press  to switch to the menu page.
- Using  and  select "Include channel in EPG" and dedeselect rows marked (x) with OK.
- To exclude other channels from the EPG programme guide, use    and  to select the channel and repeat the procedure.

Not possible with an external receiver !

19.2 Collecting EPG data

Solution 2:

- Press the MENU key . The TV menu appears on the screen.
- Press the white key. The menu channel table appears with the active programme slot selected.
- Follow the steps described under "23. Sort channels" to sort and save your favourite channels so that they appear at the top of the list, for example sort 1-50 and save them.
- Select "EPG Settings" from the Configuration menu and under "Prog. select. in the channel table", select "Channels 1-50" using the - + key and save by pressing OK.

The collection process will be halted if:

- videotext is opened.
- a recording has been programmed under AV Recording.
- a preset recording is running or will begin in an hour.
- the videotext subtitle function is active.

If the TV is switched to standby during the collection process, the green LED or „EPG“ will appear to indicate that the process is still running.

Not possible with an external receiver !

Opening the menu

EPG



19.3 Using the EPG

When the complete data is available, the EPG TV guide appears after pressing the "EPG" button and shows the programme that is currently running in that programme position.

F1 Sort the display by station list.

F2 Sort a station by the timetable.

F3 Sort all stations by time

The display selected with the **F1** , **F2** , **F3** button is retained after exiting the EPG display.



Select programme.

Scroll page forwards - backwards

Watch the selected programme set a reminder

Scroll time of day forwards/backwards

After pressing the **F2** button, the station can be changed with the green button

the white button

0-9 Enter a time. Programmes can be selected as of the time entered.

blau: Programme selection of all programmes

gelb: User can set interests – or – programme selection in accordance with the set interests of the user

weiß: in F1 status, scroll time of day forwards, In F2 status, scroll stations forwards.

grün: in F1 status, scroll time of day backwards, In F2 status, scroll stations backwards.

rot: The selected programme is ready to be recorded (see pg. 69)

EXIT Back to TV picture.

- / + Day of week forwards/backwards.

EXIT



Not possible with an external receiver !

19.3 Using the EPG

Opening the menu

Select, watch, remind programme






A programme can be selected in the TV guide with the cursor control key.


- Press the **OK** button and
 - watch the selected programme if the programme is already running.
 - or set a reminder for it, if the starting time is still in the future. A green checkmark appears behind the starting time.
- Press the **TEXT** button to show or hide the content description of the programme. It is not possible to display the content description for all programmes.

Interests settings

Areas of interest can be set in the EPG TV guide.

To do this:

- Press the yellow button  or if you want to change interests, press the button  twice.
- use the cursor control key or the assigned numeric key to access one of the themes.
- Use the cursor control key  to change to the other page.
- Use the cursor control key to access the theme and mark it with the **OK** button ().
- The markings () can be deleted again with the **OK** button.

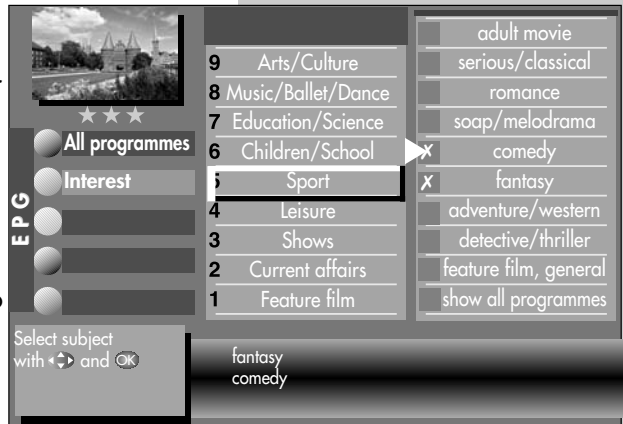

Not possible with an external receiver !

Opening the menu



EXIT




19.3 Using the EPG


Programme Information (Now Showing: ..)

After switching to a channel, a box is displayed at the bottom of the screen as shown in the picture.

This box contains the following information:

- Channel number (in this example: Pr4).
- Audio mode (stereo/mono).
- Start/end time of the programme
- The time bar shows the elapsed programme time.
- Broadcasting station
- Programme title
- Date and time
- Time details and title of the following programme

Press the green key  to view additional information about the programme currently showing, provided the respective station broadcasts such information.

Repeatedly press the green key  to view additional information about the following programme, provided the respective station broadcasts such information.

This information can also be accessed while a programme is running.

To hide the information, press "EXIT".

Not possible with an external receiver !

19.3 Using the EPG Recording a Programme


Opening the menu

Selecting a programme for recording:


If you have a video recorder with the dialogue system, the EPG permits you to start a recording by pressing a single key.

- Press the "EPG" key to open the EPG.
- Use the cursor control key to select the programme you wish to record.


If a **video recorder with dialogue system** is connected (see also Section 31):




- Switch on the video recorder.
- Insert a cassette.
- Press the red key  on the remote control.

If a **normal video recorder** is connected:

- Switch on the video recorder.
- Insert a cassette.
- Press the red key  on the remote control to programme the TV timer (see also "Direct recording (OTR)").
- On the AV programme position of the video recorder, programme a timer with the data and time of the programme which will be provided by the TV timer.

EPG




Recording	Yes
Reminder	No
Pr 1	
Das Erste	
Date	01.05.
Start	22:45
End	23:40
VPS	no
Recording device	
Videorecorder	
Change with 	
	:select
	:save the timer



Not possible with an external receiver !

Opening the menu

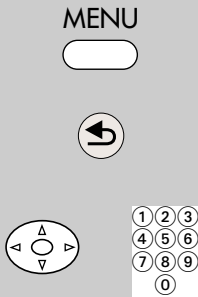

20. Setting the Country and Language

The menu items "Language" and "Country" are not available in a 2 ** menu.

Selecting the language in the TV menu



You can select any of the available languages for the TV menu. All texts in the menu and in the help screen (Information) are then displayed in the selected language.

Setting the country

After installation of the TV set, you must enter the country in which it is installed (such as Great Britain) in order to assign certain basic settings (such as the channel assignments, the order in which the stations are stored, etc.).

Setting language and country:

- Press the "MENU" key to open the TV menu.
- Press the red key to open the menu "Configuration".
- Use the corresponding **numeric keys** to select "Language" or "Country".
- Press the "OK" key and then use the cursor control key to select the desired language or country.
- Press the "OK" key to confirm your selection.
- Press the "EXIT" key to close the TV menu.

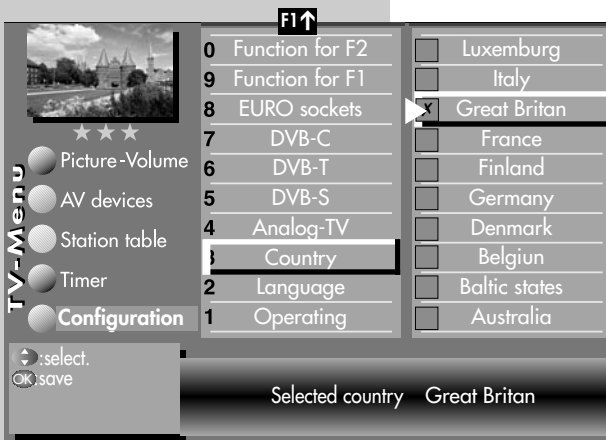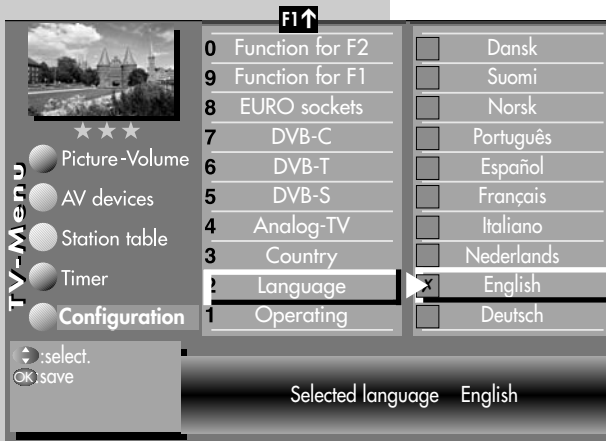

21. Setting Stations

Setting the reception mode

This TV set is equipped for up to four different types of reception, depending on the configuration or retrofitting:

Analogue TV: The broadcasting technology which has been used for many years. The signals can be received via a rooftop antenna or a cable.


DVB-T: The new digital broadcasting technology whose signals can be received via an existing (analogue) rooftop antenna or an indoor antenna (depending on the strength of the available signal). For more details, please consult your local TV dealer or search for "DVB-T" in the Internet.

DVB-C: The new digital broadcasting technology whose signals are received via a cable connection. For further details, please consult your local cable provider or TV dealer or search for "DVB-C" in the Internet.


DVB-S: The digital broadcasting technology that can be received via a satellite. Ask your local TV dealer about it, or find out more at "www.lyngsat.de".

Select the reception mode to match the broadcasting technology available in your area.

Setting the reception mode

- Press the "MENU" key to open the TV menu.
- Press the red key  to open the menu "Configuration".
- Use the corresponding numeric key to select the appropriate reception mode "Analogue TV", "DVB-T", "DVB-C" or DVB-S.

Opening the menu

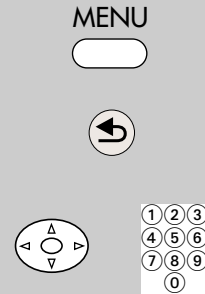

Opening the menu

MENU




21.1 Setting Stations

TV-Standard ²⁾ for analogue stations

Various TV standards for picture and sound are used in different countries. If the wrong TV standard is selected, you will not be able to hear the sound, or it will be distorted. The TV standard "L" also uses a different standard for transmission of the picture. The TV standard must therefore be set before you execute a station search.

The TV set is set in the factory to the TV standard B/G.

Setting the TV standard ²⁾

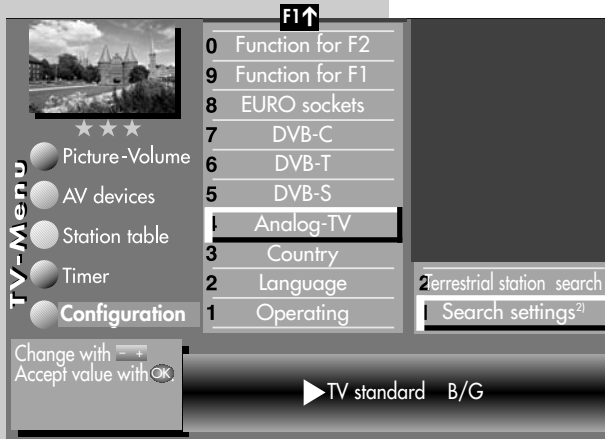

- Press the "MENU" key to open the TV menu.
- Press the red key to open the menu "Configuration".
- Use the corresponding numeric key (in the example:) to select "Analogue TV".
- The menu item "Search settings" is already selected.
- Press the "OK" key and, in the setting window, use the - + key to select the desired TV standard.

OK

EXIT

- Press the "OK" key to confirm your selection.
- Press the "EXIT" key to close the TV menu.

The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

²⁾ Possible only on sets equipped with this function.

21.1 Setting Stations


Analogue TV

Opening the menu

Terrestrial station search

The terrestrial station search automatically searches the entire range of available reception frequencies for stations. All stations which are found are placed in the station table which is displayed at the end of the search operation. If you are not satisfied with the order in which the stations are displayed, you can move them to other positions or delete unwanted stations (see Section 23., "Sorting stations").

Executing a terrestrial station search

- Press the "MENU" key to open the TV menu.
- Press the red key  to open the menu "Configuration".
- Use the corresponding **numeric key** (in the example: **(4)**) to select "Analogue TV".
- Use the corresponding numeric key (in the example: **(2)**) to select "Terr. station search".
- Press the "OK" key and, in the setting window, confirm the menu item "Start station search" by pressing the "OK" key.
- The TV set starts to search for available stations. A station table with the newly found stations is displayed on the left half of the screen. If a station table already existed before the search, the newly found stations are automatically appended after the last existing station.
- After completion of the search, all stations which have been found are sorted.
- You can delete any unwanted stations from the station table by selecting them with the cursor control key and pressing the **II** key.

MENU



The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

2) Possible only on sets equipped with this function.

Opening the menu

 

MENU



F2



6

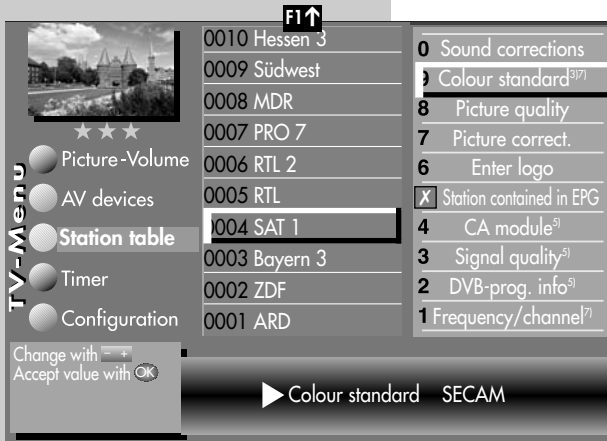

EXIT



The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

21.1 Setting Stations

Colour standard for analogue stations

The TV set will normally detect the colour standard automatically.

If this automatic selection does not provide satisfactory results (which should happen only rarely), you can select the colour standard manually for each programme position.

The colour standard is set in the factory to "Automatic".

Setting the colour standard

- Press the "MENU" key to open the TV menu.
- Press the white key to open the station table.
- Press the F2 key to enable editing of the station table.
- Use the cursor control key to select the programme position whose colour standard you wish to change.
- Press the cursor control key to move to the left column.
- Use the corresponding numeric key (in the example: **9**) to select "Colour standard".
- Use the - + key to select the desired colour standard, or to step through the available colour standards until the picture is displayed clearly.
- Press the "OK" key to confirm your selection.
- Press the "EXIT" key to close the TV menu.

3) See glossary for an explanation.

7) Available only for analogue stations!

21.2 Setting Stations

DVB-T, Antenna supply voltage


With this menu item, you switch the supply voltage for a DVB-T antenna on or off.

On: The antenna supply voltage is constantly on (Select this setting if you have a TV-Set with two DVB-T-Tuners but only one active antenna or if you receive also analog stations via the active antenna).

Switched: The antenna supply voltage is only active for DVB-T-programmes (e.g. for controlling a relay to switch between DVB-T-antenna and broadband cable, if they coexist).

 

Off: For a passive antenna or a community antenna

Setting the antenna supply voltage

- Press the "MENU" key to open the TV menu.
- Press the red key  to open the "Configuration" menu.
- Use the corresponding numeric key (in the example: **6**) to select the function "DVB-T".
- Press the "OK" key and, in the setting window, use the - + key to select the antenna supply voltage.
- Press the "OK" key to save the new settings.
- Press the "EXIT" key to close the TV menu.

Opening the menu

MENU

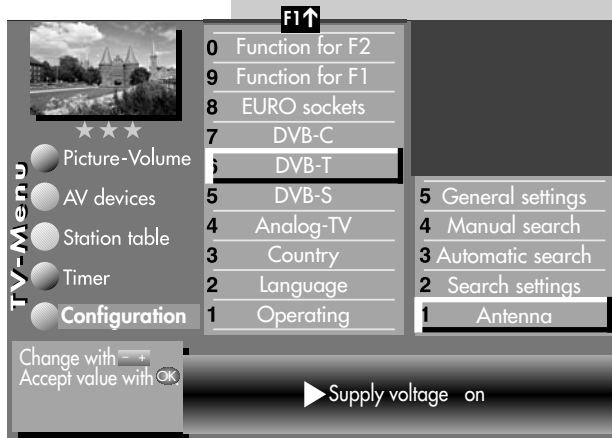


EXIT



The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

Opening the menu

MENU

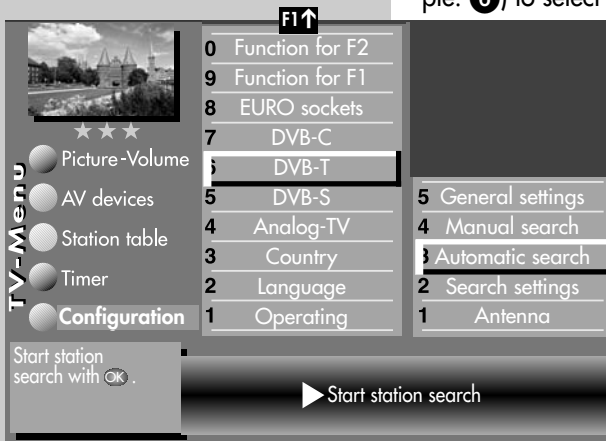

OK

Die Anzahl der Themen und Kapitel ist abhängig vom eingestellten Bedienungsumfang. Die Anordnung der einzelnen Menüpunkte kann sich, abhängig von der Geräteausrüstung, in der Reihenfolge und Nummerierung ändern.

21.2 Setting Stations

Automatic DVB-T station search

The DVB-T station search operation searches the entire frequency band for **TV and radio stations**. All stations which are found are placed in separate TV and radio station tables. See Section 26. for details of DVB radio mode.

If you are not satisfied with the order in which the stations are displayed, you can move them to other positions or delete unwanted stations (see Section 23., "Sorting stations").

Executing the automatic station search

- Press the "MENU" key to open the TV menu.
- Press the red key to open the menu "Configuration".
- Use the corresponding **numeric key** (in the example: **6**) to select "DVB-T".

- In the setting window "Antenna", you can switch the supply voltage for an antenna on or off with the - + key.

Normal setting = Off !

The setting "On" may be used only if you have an active **indoor antenna** which needs a supply voltage for its internal amplifier.

- Use the corresponding numeric key (in the example: **2**) to select "Search settings".

- In the setting window, use the - + key to select one of the following:

All = search for all stations.

FTA only = search for only unencrypted (free-to-air) stations.

FTA +CICAM = search for FTA stations and stations which can be decoded with a CI module (accessory).

- Press the "OK" key and use the corresponding numeric key (in the example: **3**) to select "Automatic search".
- Press the "OK" key to start the search. The TV set now searches for available stations.


21.2 Setting Stations

Manual DVB-T station search

Opening the menu

For a manual station search, you must know the channel number or the frequency of the station you wish to find.

Executing the manual search


- Press the "MENU" key to open the TV menu.
- Press the red key  to open the menu "Configuration".
- Use the corresponding **numeric key** (in the example: **6**) to select "DVB-T".
- In the setting window "Antenna", you can switch the supply voltage for an antenna on or off with the - + key (see also page 72).
- Use the corresponding numeric key (in the example: **2**) to select "search settings".
- In the setting window, use the - + key to select "All", "FTA only" or "FTA + CICAM" (see also page 67).
- Press the "OK" key and use the corresponding numeric key (in the example: **4**) to select "Manual search".

- In the setting window, use the **numeric keys** to enter the channel number or the frequency.

If you know further data of the desired station, select the menu item "Mod. parameter" and use the - + key to change the setting there to "Manual". You can then enter further data.

- After input of the station data, use the cursor control key to select the menu item "Station search" and press the "OK" key to confirm your selection.
The station settings are saved.

MENU


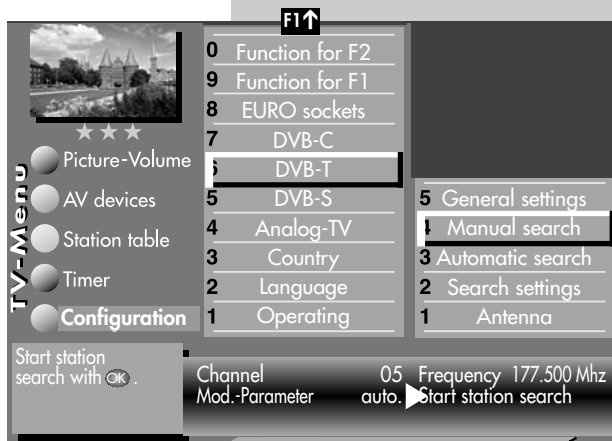


Transmission 8k Mode Modulation 64 QAM
Mod. Parameter manuell Guard Intervall 1/8
Code rate 3/4 Start station search

The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

Opening the menu

 MENU

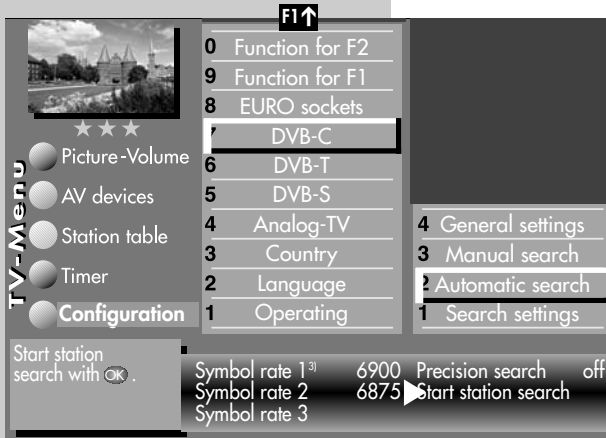

The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

3) See glossary for an explanation.

21.3 Setting Stations

Automatic DVB-C station search

The DVB-C station search operation searches the entire frequency band for **TV and radio stations**. All stations which are found are placed in separate TV and radio station tables. See Section 26 for details of DVB radio mode.

If you are not satisfied with the order in which the stations are displayed, you can move them to other positions or delete unwanted stations (see Section 23., "Sorting stations").

Executing the automatic search

- Press the "MENU" key to open the TV menu.
- Press the red key to open the menu "Configuration".
- Press the numeric key **7** to select "DVB-C".
- The cursor is now on the menu line "Search settings".
- Press the "OK" key and, in the setting window, use the - + key to select "All", "FTA only" or "FTA +CICAM" (see also page 67).
- Press the "OK" key and then press the corresponding numeric key (in the example: **2**) to select "Automatic search". The cursor is now on the line "Symbol rate 1".
- **The most common symbol rates are already preset. Usually these settings do not need to be modified. If the symbol-rate settings do not yield the desired result, set other symbol rates and save them by pressing "OK". Ask your cable operator for details.**
- Press the cursor control key to select the menu line "Start station search".
- Press the "OK" key to start the search. The TV set now searches for available stations.


21.3 Setting Stations

Manual DVB-C station search

Opening the menu

For a manual station search, you must know the channel number or the frequency of the station you wish to find.

Executing the manual search

- Press the "MENU" key to open the TV menu.
- Press the red key  to open the menu "Configuration".
- Use the corresponding **numeric key** (in the example: **7**) to select "DVB-C".
- The cursor is on the menu line "Search settings".
- Press the "OK" key and, in the setting window, use the - + key to select "All", "FTA only" or "FTA +CICAM" (see also page 67).
- Press the "OK" key and use the corresponding numeric key (in the example: **3**) to select "Manual search".
- The cursor points to "Channel".
- In the setting window, use the numeric keys to enter the channel number (or special channel number) or the frequency of the desired station.

If you know further data of the desired station, select the menu items "Modulation" and "Symbol rate" and use the - + key or the numeric keys to change the settings there.

- After input of the station data, use the cursor control key to select the menu item "Station search" and press the "OK" key to confirm your selection.
The station settings are saved.

MENU



F1 ↑

0	Function for F2	
9	Function for F1	
8	EURO sockets	
7	DVB-C	4 General settings
6	DVB-T	3 Manual search
5	DVB-S	2 Automatic search
4	Analog-TV	1 Search settings
3	Country	
2	Language	
1	Operating	

TV-Menu


- Picture-Volume
- AV devices
- Station table
- Timer
- Configuration

Start station search with **OK**.

Channel	05	Cable channel	--
Frequency	64.500MHz	Symbol rate	6900
Modulation	Auto.mode	▶ Start station search	

OK

 3



The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

Opening the menu

MENU




F1↑

TV-Menu	0	Function for F2	
	9	Function for F1	
	8	EURO sockets	
	7	DVB-C	7 General settings
	6	DVB-T	6 Manual search
	5	DVB-S	5 Automatic search
	4	Analog-TV	4 Search settings
	3	Country	3 Satellit B
	2	Language	2 Astra 19.2°
	1	Operating	1 Arial facility

Change with Accept value with

 Antenna normal Power compensation off
LNB supply voltage off DiSeq system off



OK

EXIT



The number of subjects and chapters is dependent on the range of functions that has been set. The order and numbering of the individual menu options may change depending on the device configuration.

21.4 Set-up of Sat System Antenna system

Section 21.4 only in the case of corresponding equipment or conversion.

The sat. antenna system must be reported to the TV set in the "Configuration" menu.

Antenna

Normal

In the "Normal" setting, the DVB-S receivers in the LCD TV set each have a separate antenna cable.

Tandem

In the "Tandem" setting, the two DVB-S receivers have one feed line and are connected together with a splitter.

Single Cable (Single Cable Distribution SDC)

With the "Single cable" setting, the DVB-S receivers have one feed line. The programme selection is preset according to the structural

conditions of the satellite system.


No antenna control signals can be sent over the feed line.

Unicable


The antenna system with a channel router feeds one cable and is designed to receive the full programme selection. For this purpose, each receiver is assigned one specific frequency in the satellite frequency range (950-2150 MHz). The channel router has multiple fixed frequencies (SCR-Freq.) saved in a frequency bank. See the user's guide for the channel router.

The satellite antenna splitter 010ZR1199 is required for all satellite single cable solutions.

21.4 Set-up of satellite system Unicable


 **Section 21.4 only in the case of corresponding equipment or conversion.**

Each DVB-S receiver must be assigned a subscriber number (SCR no.) and the associated subscriber frequency (SCR freq.) from the frequency bank (see channel router or its user's guide)

 **Each subscriber number and subscriber frequency may only be assigned once.**

The DVB-S receiver in the TV set requests the data for the desired programme from the channel router.

Setting the SCR no. and SCR freq.

- Call up the TV menu with the MENU button
- Use the red button  to open the "Configuration" menu.
- Select the menu option "DVB-S" with the assigned numeric buttons. In the example it is **5**.
- Press the **OK** button and the "Ariel facility" setup window opens.
- Use the cursor control buttons to select "Antenna" and then the - + button to select "Unicable".
- Use the cursor control buttons to select the SCR data for each receiver.
- Enter the required data with the numeric buttons.
- Confirm the setting by pressing the **OK** button.
- Clear the "TV menu" with the **EXIT** button.

Opening the menu

MENU



FI ↑

 
0	Function for F2	7	General settings
9	Function for F1	6	Manual search
8	EURO sockets	5	Automatic search
7	DVB-C	4	Search settings
6	DVB-T	3	Satellit B
5	DVB-S	2	Astra 19,2°
4	Analog-TV	1	Arial facility
3	Country		
2	Language		
1	Operating		

TV-Menu

- Picture-Volume
- AV devices
- Station table
- Timer
- **Configuration**

Change with - +
Accept value with OK

Antenna	Unicable	Power compensation	off
SCR1 no.	1	SCR2 no.	4
SCR1 freq.	1284 MHz	SCR2 freq.	1632 MHz



EXIT




The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

Opening the menu

MENU



The screenshot shows the TV menu structure. On the left, a vertical list of menu items includes Configuration. The main menu lists options 0 through 9, with 'DVB-S' selected. A sub-menu for 'DVB-S' is shown with 'Aerial facility' selected. At the bottom, the 'Aerial facility' settings are displayed: 'Antenna' is set to 'normal', 'LNB supply voltage' is set to 'off', 'Power compensation' is 'off', and 'DiSEqC system' is 'off'.

 

OK

EXIT



The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

21.4 Set-up of satellite system LNB supply voltage

Section 21.4 only in the case of corresponding equipment or conversion.

The settings of the satellite antenna system must be entered in the menu "Configuration" so that the TV set knows them.

These settings should always be made in the order in which they are shown in the right-hand column of the menu, starting at the bottom, i.e. LNB supply voltage, DiSEqC system, etc.

LNB supply voltage

The LNB voltages for selection of the polarisation (horizontal H = 18V, vertical V = 14V) are already set and do not normally need to be changed.

If the cable to the satellite antenna is very long, the voltages reaching the LNB may be too low. In such cases, the voltages can be increased by 1 V by activating the line-compensation function.

If any changes should be

necessary, they can be made as follows.

Change settings

- Call up the TV menu with the MENU button.
- Use the red button to open the "Configuration" menu.
- Select the menu option "DVB-S" with the assigned numeric buttons. In the example it is .
- Press the **OK** button and the "Aerial facility" setup window opens.
- Use the cursor control buttons to select "LNB supply voltage" and then use the - + button to set the LNB supply voltage on or off.
- Confirm the setting by pressing the **OK** button.
- Press the **EXIT** key to close the TV menu.

If the TV set is connected to a community antenna, the LNB supply voltage must always be set to "Off".

21.4 Set-up of satellite system DiSEqC system

Opening the menu


Section 21.4 only in the case of corresponding equipment or conversion.




"DiSEqC" makes it possible to control the satellite antenna digitally via the existing antenna cable and is a prerequisite for the reception of signals from more than two satellites (e.g. Astra, Eutelsat, Hotbird).

If you wish to receive signals from at least three satellites (e.g. ASTRA 19.2°, Eutelsat 16°, Hotbird 13°) the antenna system can be controlled only with the aid of "DiSEqC".

This menu item is not available in a 2 menu.**


Switching DiSEqC on and off

- Press the MENU key to open the TV menu.
- Press the red key  to open the menu "Configuration".
- Press the appropriate numeric key (in this example **5**) to select "DVB-S".
- Press the **OK** button and the "Ariel facility" setup window opens.
- Use the cursor control buttons to select "DiSEqC" and then use the - + button to set DiSEqC on or off.
- Press the OK key to confirm the new setting.
- Press the EXIT key to close the TV menu.

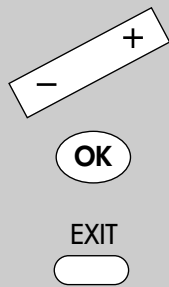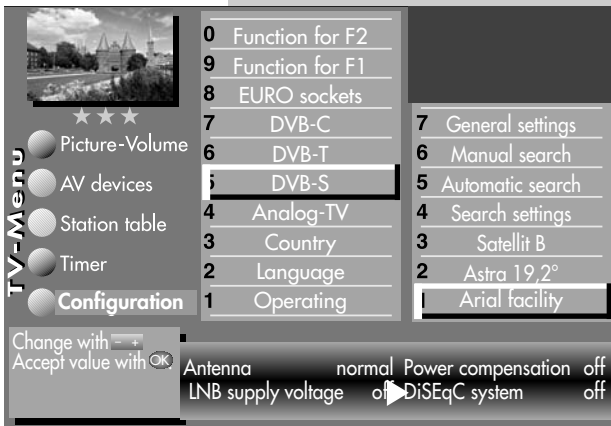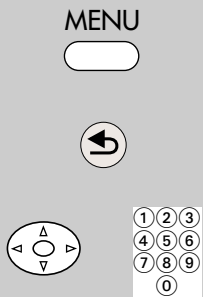

The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

Opening the menu

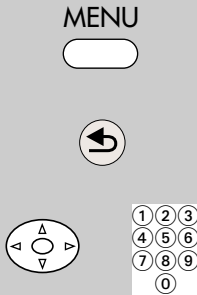


TV-Menu

- ★ ★ ★
- Picture-Volume
- AV devices
- Station table
- Timer
- **Configuration**

0	Function for F2
9	Function for F1
8	EURO sockets
7	DVB-C
6	DVB-T
5	DVB-S
4	Analog-TV
3	Country
2	Language
1	Operating

7	General settings
6	Manual search
5	Automatic search
4	Search settings
3	Satellit B
2	Astra 19,2°
1	Arial facility

Change with - +	Accept value with OK	Satellite	Astra 19,2°	Symbol rate 1	22000
		Low band	9,75 GHz	Symbol rate 2	27500
		High band	10,60 GHz	Symbol rate 3	-----

 

The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

21.4 Set-up of satellite system Selecting satellites

Section 21.4 only in the case of corresponding equipment or conversion.

You can set up to four satellites in the menu "Configuration". No satellite is set in the factory.

The LNB frequency is used to switch between the high and low frequency bands. The default frequencies **Low band 9.75 GHz** and **High band 10.60 GHz** are set in the factory.

Selecting satellites


- Press the MENU key to open the TV menu.
- Press the red key to open the menu "Configuration".
- Press the appropriate numeric key (in this example **4**) to select "DVB-S".
- Press the appropriate numeric key (in this example **3**) to select "Satellite A".
- Use the - + key to select the desired satellite. The most common satellites are

displayed one after the other, together with the symbol rates for each one. Depending on the satellite, it may be necessary to set additional **symbol rates** manually if the selected satellite uses different symbol rates and you wish to find the related transponders in an automatic station search.

- Use the cursor control key to select "Low band" or "High band". The settings depend on the components installed in the satellite antenna. For the correct settings, please consult the data sheet or the label of the LNB(s) being used.
- Press the OK key to confirm the new settings.
- Press the EXIT key to close the TV menu.

21.5 Setting the stations

Search settings

 **Section 21.5 only in the case of corresponding equipment or conversion.**

Before executing a DVB station search, you must make the appropriate search settings.

Depending on the features installed in the TV set and your personal requirements, you can make the following settings:


All = search for all stations on the selected satellite.


FTA only = search only for unencrypted (free-to-air) stations on the selected satellite.

FTA (CI) = search for all FTA stations and stations which can be received with the CI module.



The menu item "FTA (CI)" is available only if a CI module has been installed and a CA module is plugged into it.

Making the search settings

- Press the MENU key to open the TV menu.
- Press the red key  to open the menu "Configuration".
- Press the appropriate numeric key (in this example **5** to select "DVB-S".
- Press the appropriate numeric key (in this example **5** to select "Search settings".
- Use the - + key to select the desired setting.
- Press the Ok key to confirm the new setting.
- Press the EXIT key to close the TV menu.



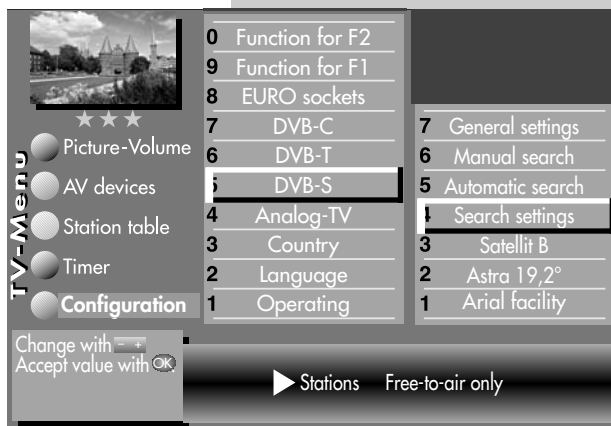


Opening the menu

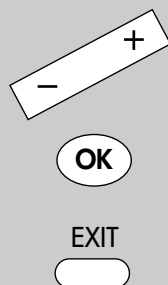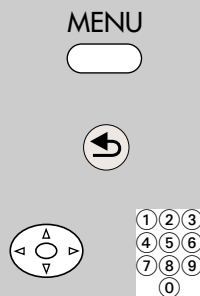

The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

Opening the menu

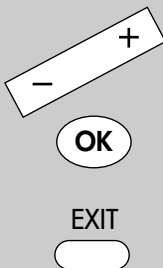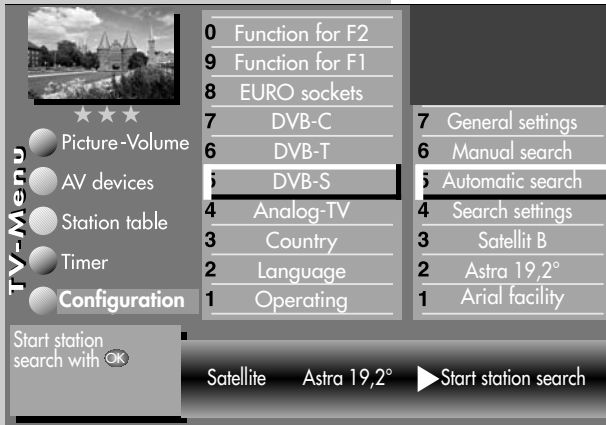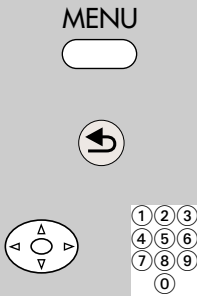

The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

21.5 Setting the stations Automatic search

Section 21.5 only in the case of corresponding equipment or conversion.

The DVB-S station search scans the entire reception band for **TV** and **radio stations** and stores them in separate TV and radio station tables. For details of the DVB radio mode, see Section 26 in the operating instructions for the TV set.

If you are not satisfied with the order in which the stations are stored, you can move stations to other positions in the table or delete them. For further details, see Section 23, "Sorting stations" in the operating instructions for the TV set.

The station search will function correctly only if the LNB frequencies have been set and stored correctly.

Executing the automatic station search

- Press the MENU key to open the TV menu.
- Press the red key to open the menu "Configuration".
- Press the appropriate numeric key (in this example) to select "DVB-S".
- Press the appropriate numeric key (in this example) to select "Automatic search".
- In the setting window, use the - + key to select the desired satellite.
- Use the cursor control key to move to the menu line "Start station search".
- Press the OK key to start the station search.

The TV set searches for the specified stations and places them in a station table, which is then displayed.

If desired, you can sort or move stations to other positions in the table or delete unwanted stations. For details, see Section 23 of the operating instructions for the TV set.

21.5 Setting the stations

Manual search

Opening the menu

Section 21.5 only in the case of corresponding equipment or conversion.

For the manual search, you must know the frequency, the symbol rate and the polarisation of the station for which you want to search.

Executing the manual search

- Press the MENU key to open the TV menu.
- Press the red key to open the menu "Configuration"
- Press the appropriate numeric key (in this example **5**) to select "DVB-S".
- Select the menu option "Manual search" with the assigned numeric keys. In the example it is **6**.
- The cursor then moves to "Satellite". If more than one satellite is available, use the - + key to select the desired satellite.
- In the setting window, use the cursor control key to select the menu line "Frequency".
- Use the numeric keys or the - + key to set the frequency.

For a HD station search, the information for the DVB system (e.g. DVG-S2/8PSK) must also be entered.

- If all the data has been entered, use the cursor control key in the settings window to access the „Programme search“ menu option and confirm with the **OK** button.


The station will be searched for. If necessary, the stations can also be sorted, moved, or deleted. See Chapter 23 for this.

MENU



0	Function for F2	7	General settings
9	Function for F1	6	Manual search
8	EURO sockets	5	Automatic search
7	DVB-C	4	Search settings
6	DVB-T	3	Satellit B
5	DVB-S	2	Astra 19,2°
4	Analog-TV	1	Arial facility
3	Country		
2	Language		
1	Operating		

Start station search with	Satellite	Astra 19,2°	Frequency	11836 MHz
	Symbol rates	27500	Polarisation	H
	Start station search			

 

The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

Opening the menu

MENU



TV-Menu


- Picture-Volume
- AV devices
- Station table
- Timer
- Configuration

Start station search with

0	Function for F2
9	Function for F1
8	EURO sockets
7	DVB-C
6	DVB-T
5	DVB-S
4	Analog-TV
3	Country
2	Language
1	Operating

7	General settings
6	Manual search
5	Automatic search
4	Search settings
3	Satellit B
2	Astra 19,2°
1	Arial facility

 Satellite Astra 19,2° Start station search



EXIT



The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

21.5 Setting the stations Updating the data

Section 21.5 only in the case of corresponding equipment or conversion.

With the menu item, "General settings", you can specify whether or not the data are to be saved in the non-volatile memory of the TV set when transmission parameters are changed.

This update function applies to stations which use different transmission parameters at different times of the day, such as when they transmit regional programmes.

Setting the data update function

- Press the MENU key to open the TV menu.
- Press the red key to open the menu "Configuration".
- Press the appropriate numeric key (in this example to select "DVB-S".
- The cursor is located on the line "LNB supply voltage".
- Press the appropriate numeric key (in this example to select "General settings".


- In the setting window, use the - + key to set "Update data" to "On".
- Press the OK key to confirm the new setting.
- Press the EXIT key to close the TV menu.


21.6 DVB Prog. Info. signal quality

Opening the menu

The displays for the DVB prog. info or signal quality are only for informational purposes. DVB prog. info. shows the data for the displayed station.

The signal quality display is not directly related to the picture quality. The bit error rate fluctuates between the transponders and increases if a rain front is approaching, for example.


- Select the programme position for the DVB prog. info or signal quality that is to be displayed.
- Press the **MENU** key.
The TV menu appears on the screen.
- Press the white key  The station table menu appears on the screen and the active programme position is selected.

- Press the **F2** button.
- Press the cursor control key  and switch to the menu page.
- Use the assigned numeric keys to select the DVB prog. info. or the signal quality menu option.
- Clear the "TV menu" with the **EXIT** button.

MENU




F2

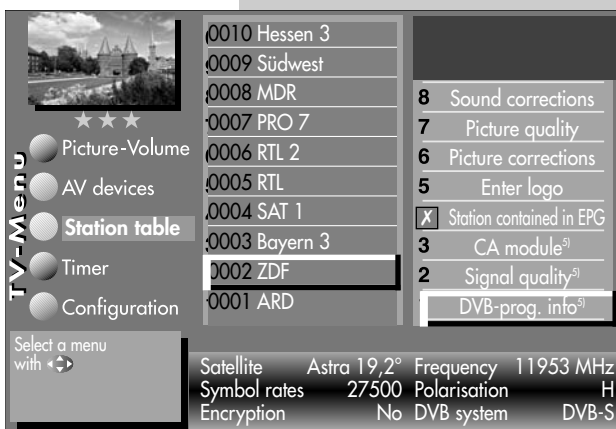TV-Menu


- Picture-Volume
- AV devices
- Station table**
- Timer
- Configuration

Select a menu with 

.0010	Hessen 3
.0009	Südwest
.0008	MDR
.0007	PRO 7
.0006	RTL 2
.0005	RTL
.0004	SAT 1
.0003	Bayern 3
.0002	ZDF
.0001	ARD


8	Sound corrections
7	Picture quality
6	Picture corrections
5	Enter logo
X	Station contained in EPG
3	CA module ⁵¹
2	Signal quality ⁵¹
	DVB-prog. info ⁵¹

Satellite Astra 19,2° Frequency 11953 MHz
 Symbol rates 27500 Polarisation H
 Encryption No DVB system DVB-S

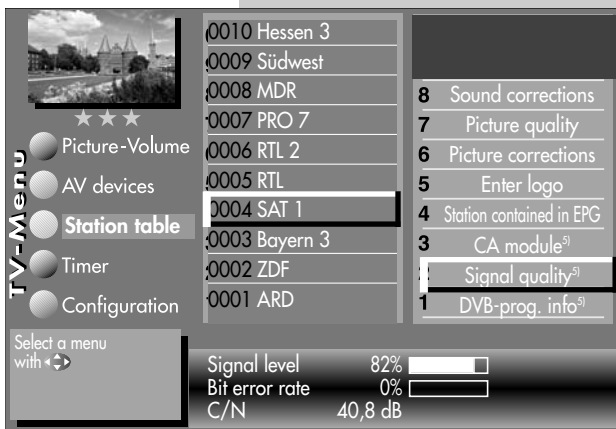



TV-Menu

- Picture-Volume
- AV devices
- Station table**
- Timer
- Configuration

Select a menu with 

.0010	Hessen 3
.0009	Südwest
.0008	MDR
.0007	PRO 7
.0006	RTL 2
.0005	RTL
.0004	SAT 1
.0003	Bayern 3
.0002	ZDF
.0001	ARD

8	Sound corrections
7	Picture quality
6	Picture corrections
5	Enter logo
4	Station contained in EPG
3	CA module ⁵¹
	Signal quality ⁵¹
1	DVB-prog. info ⁵¹

 Signal level 82% 
 Bit error rate 0% 
 C/N 40,8 dB

Opening the menu

21.7 DVB Portal stations

Various pay TV stations broadcast portal stations. These portal stations are filled with sub-stations or optional channels.

In station search (see ch. 21) in "Search settings" the setting "all", "only free" or "free+CICAM" must be set so that these stations can be found too.



10	Kabel 1
9	Nord 3
8	RTL
7	PRO 7
6	Nord 3
5	PRO 7
4	SAT1
3	Portalsender
2	ZDF
1	ARD
56	Hessen 3
55	SW-BW
54	N-TV
53	West 3
52	Phönix

Select with ... or
Confirm with

After a station search, the portal stations and the accompanying optional channels (may also be identified in the station table as SID=xy) will be shown in the station table on various program places.

We have programmed a simple way for you to find optional channels quickly.

If you select a portal station via the station table (see p. 11), a suitcase symbol appears next to the station logo.

This suitcase can be opened by pressing the white button repeatedly. All optional channels included in this suitcase then appear in the station table. Other stations are not shown simultaneously.



5	Optionskanal 4
4	Optionskanal 3
3	Optionskanal 2
2	Optionskanal 1
1	Portalsender

Select with ... or
Confirm with

In this way, you can switch quickly between the optional channels.




22. Station Logo

Opening the menu

With the aid of the VPS signal, a station logo with a maximum length of 15 characters is automatically assigned to each station.

If this automatic assignment does not work, or if you want to use a different logo, you can change the setting manually.

Setting the station logo


- Press the "MENU" key.
- Press the white key  to open the "station table".
- Press the F2 key to enable editing of the station table.
- Select the programme position whose logo you wish to change.
- Press the cursor control key  to move to the other column.
- Use the corresponding numeric key (in the example: **6**) to select "Logo input".
- The various letters and digits can be selected with the aid of the cursor control key .

- You can delete single characters with the red key or the complete logo with the **||** key.
- Set the desired logo by repeatedly pressing the various numeric keys. The lowercase letters are displayed after the uppercase letters.
- Press the "OK" key to save the new logo.
- Press the "EXIT" key to close the TV menu.

MENU



F2

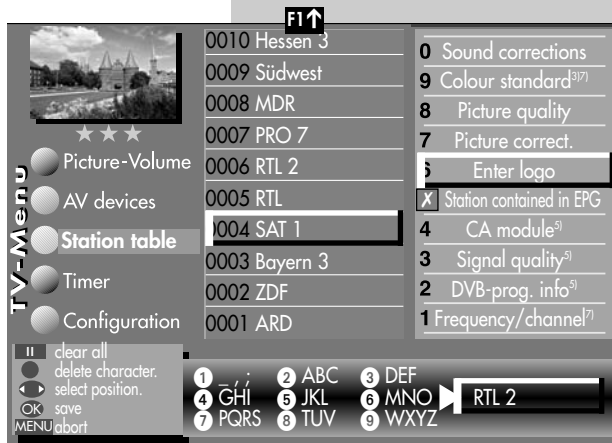

OK

EXIT



The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

Opening the menu

MENU



OK




TV-Menü

- Bild und Ton
- AV Geräte
- Sendertabelle**
- Timer
- Konfiguration

auswählen
F2 Programmattribute oder Senderliste bearbeiten

0010	Hessen 3	0020	BR alpha
0009	Südwest	0019	3 SAT
0008	MDR	0018	Kinderkan.
0007	PRO 7	0017	FRANKEN
0006	RTL 2	0016	TELE-5
0005	RTL	0015	9LIVE
0004	SAT 1	0014	SuperRTL
0003	Bayern 3	0013	Kabel 1
0002	ZDF	0012	VOX
0001	ARD	0011	West 3

Markieren mit OK (langer Tastendruck = Block markieren),
Neue Position mit Cursor bestimmen,
- + verschieben/kopieren, || löschen.
Alle Markierungen löschen mit .

 

EXIT



23. Sorting stations, individual

Individual stations in the station table can be moved, copied or deleted.

Copying, moving, deleting individual stations

- Call up the TV menu with the **MENU** button.
- Use the white button to retrieve the station table.
- Use the cursor control key to select a programme position that is to be copied, moved, or deleted.
- Press the **OK** button and mark the programme position (prog. 0006 in the example).

Copy:

- When copying, afterwards use the cursor to select the programme position where the station is to be inserted.
- Use the + key to copy the station

Move :

- When moving, select the programme position where the programme position is to be moved.
- Use the - key to move the station.

Delete:


- If the station is to be deleted, then press the || button.
- When you are finished, clear the "TV menu" using the **EXIT** button.

23. Sorting stations, block-by-block

Opening the menu

Individual or multiple stations can be moved, copied or deleted in the station table.

Copying, moving, deleting multiple stations

- Call up the TV menu with the MENU button.
- Use the white button  to retrieve the station table.
- Use the cursor control key to select the first programme position that is to be copied, moved, or deleted.
- Press the OK button and mark the programme position (prog. 006 in the example).
- Use the cursor control key to select the last programme position that is to be copied, moved, or deleted.
- Press down the OK button until all stations between the first and last station position are marked.

Copy:

- When copying, afterwards use the cursor to select the programme position after which the stations are to be inserted.
- Use the + key to copy the block of stations.

Move:

- When moving, afterwards use the cursor to select the programme position after which the stations are to be re-inserted.
- Use the - key to move the block of stations.

Delete:

- If the marked block of stations is to be deleted, then press the **||** button.
- When you are finished, clear the "TV menu" with the EXIT button.


MENU



Prog.	Station	Prog.	Station
0010	Hessen 3	0020	BR alpha
0009	Südwest	0019	3 SAT
0008	MDR	0018	Kinderkan.
0007	PRO7	0017	FRANKEN
0006	RTL 2	0016	TELE-5
0005	RTL	0015	9LIVE
0004	SAT 1	0014	SuperRTL
0003	Bayern 3	0013	Kabel 1
0002	ZDF	0012	VOX
0001	ARD	0011	West 3

auswählen
F2 Programmattribute
oder Senderliste
bearbeiten

Markieren mit OK (langer Tastendruck = Block markieren).
Neue Position mit Cursor bestimmen.
- + verschieben/kopieren, || löschen.
Alle Markierungen löschen mit

 


EXIT



Opening the menu

MENU

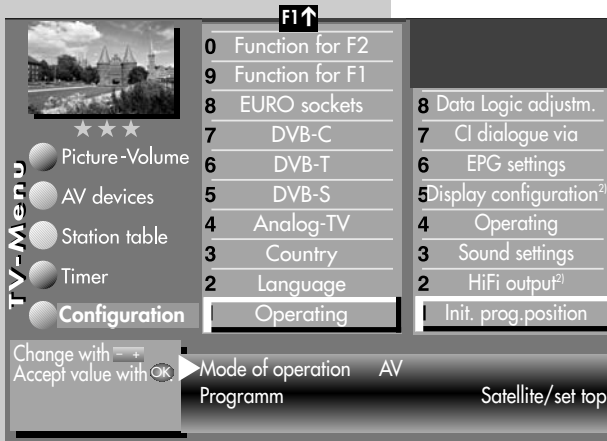

OK



OK

EXIT



The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

2) Possible only on sets equipped with this function.

24. Initial Programme Position

You can define an initial program position for this TV set. The preferred use for the initial programme position is to switch to the AV programme position when using an external receiver

Initial programme position settings


This menu option cannot be set in a 2 menu**

- Press the "MENU" key to open the TV menu.
- Use the red button to open the "Configuration" menu.
- Use the cursor control key to select "Operating" and "Init. prog. position" and press **OK**.
- The cursor is on the "Mode of operation" menu option. You can use the - + key to set the desired mode of operation (TV, Radio or AV).
- Then select "Programme". If you have selected TV as the mode of operation, you can now set the desired programme (e.g. 004 for "RTL"). With the AV mode of operation, you can select an external AV connection like EURO 1, EURO 2, HDMI, etc. as an external AV connection.

- Press the **OK** button to save the new settings.
- Clear the "TV menu" with the **EXIT** button.



If the TV set is now switched on with the power button on the set or the button on the remote control, the preset initial programme position appears.


25. Display Configuration²⁾

 **This menu item is not available in a 2** menu.**

By way of an option, the green display on the front of the TV set (depending on TV set configuration) can also be used for displaying the time or the station logo.


Setting the display configuration²⁾

- Press the "MENU" key to open the TV menu.
- Press the red key  to open the menu "Configuration".
- Use the cursor control key  to select "Initial programme position".
- Use the corresponding numeric key (in the example: **5**) to select "Display configuration".
- In the setting window, use the **- +** key to select the desired setting.
- Press the "OK" key to save the new setting.
- Press the "EXIT" key to close the TV menu.

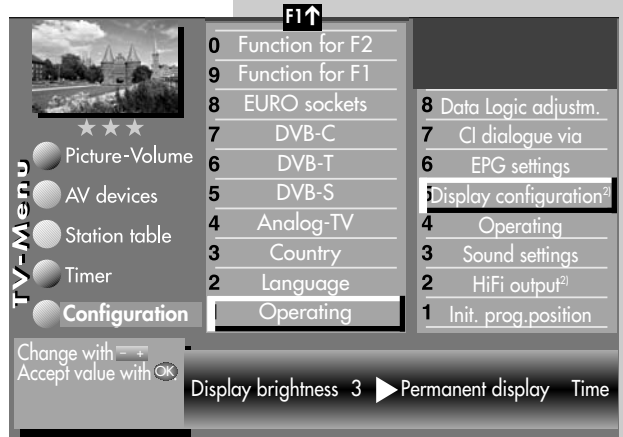

Opening the menu

 MENU



EXIT



The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

2) Possible only on sets equipped with this function.

R



TV



To switch from TV mode to DVB radio mode, press the "R" key.




The screen is automatically blanked after about 30 seconds.

To switch from DVB radio mode to TV mode, press the "TV" key.

Setting DVB radio stations

The available DVB radio stations are automatically detected during a station search (see Section 22) and stored in a separate station table at the operating level for radio mode.

The radio station table can be sorted (see Section 23) and the station logos can be changed (see Section 22).

-  ***DVB radio stations are administered in the same basic way as DVB TV stations. The functions described in Sections 12, 12.1, 15 to 16.2 and 18 (Special functions, Normal/speech, Timer overview and Direct recording) are also available for radio stations.***
-  ***Note: The screen can be switched on and off manually with the blue key .***

27. Operation without the Remote Control

Operation without the remote control is provided as an emergency measure in case the batteries of your remote control are exhausted or the remote control is not readily available.

Local controls for Axio



Local controls for Talio, Puros



The local controls on the Talio/Puros can be found on the bottom of the TV set behind a flap that can be opened by pressing ●●●

Local controls for Linus, Sirius



Local controls for Primus



Switching on

Press the main power switch on the TV set. After about 30 seconds, the TV set is switched on with programme position 1 or the programmed initial programme position selected.

You can also use the following functions directly on the TV set, without a remote control. For functions which require further adjustments, the function remains preselected for ten seconds.

Programme selection

Press the – + buttons.

Volume

Press and hold the preselection key F until the bar display for the volume appears on the screen. Then press the "–" or "+" button to adjust the volume.

Contrast




Press and hold the preselection key F until the bar display for the contrast appears on the screen. Then press the "–" or "+" button to adjust the contrast.

28. Scope of Operation

The adjustable scope of operation for the TV set can be a great help in finding your way around the complex operating functions of the TV set.

The scope of operation can be set to various levels, which are identified by asterisks.

1 ★ "Just watching TV"- in other words, it is not possible to open the TV menu and only the functions available on the remote control can be used:

- Zapping
- Selection of programme positions with the numeric keys, the oval "P+/P-" rocker key or the white key .
- Opening Teletext.
- Displaying help information (INFO).
- Playing back films from a video recorder or DVD player by pressing the "AV" key.
- Selecting "Special functions 1" by pressing the **F1** key.
- Selecting "Special functions 2" by pressing the **F2** key.
- Selecting "Special functions 3" by pressing the **F3** key.
- Selecting connected AV devices by pressing the "AV" key.
- Calling the standard picture functions by pressing the blue key .
- Calling the standard sound functions by pressing the yellow key .
- Calling the "EPG" function with the "EPG" key.

If the scope of operation is set to a 1 ★ menu and you subsequently want to open a menu, then:

- Press and hold the "MENU" key for at least five seconds to open the TV menu.
- The menu item "Operation" is automatically selected.

28. Scope of Operation




Opening the menu

- Use the - + key to select the desired scope of operation and press the "OK" key to save the new setting.
- 2 ★ ★ This menu permits you to configure the use of the TV set to a certain degree. All of the functions listed for the 1 ★ menu are available and are supplemented by the following functions:



- Childlock
- Timer control (sleep timer)
- Automatic station search
- Transfer of the TV station table from the TV set to a Data Logic video recorder.
- Editing functions in the station table

- 3 ★ ★ ★ This is the operating scope for persons who are interested in technology who want to be able to use the full range of functions of the TV set.

Setting the scope of operation

- Press the "MENU" key to open the TV menu.
- Press the red key  to open the menu "Configuration".
- Use the cursor control key  to move to the menu line "Initial programme position".
- Press the numeric key  to select "Scope of operation".
- In the setting window, use the - + key to select the desired scope of operation.
- Press the "OK" key to save the new setting.
- Press the "EXIT" key to close the TV menu.

MENU

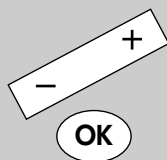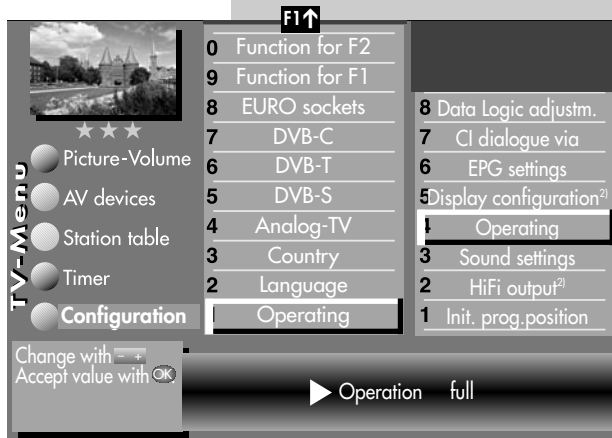

EXIT



The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

29. Cleaning the TV Set

- ☞ **Before cleaning the set, always switch it off with the mains switch!**
- ☞ **Incorrect treatment and cleaning of the screen surface can cause irreparable damage to it. You should therefore always observe the following instructions for treatment and cleaning of the set.**

Treatment:

Always treat the screen surface very carefully.

Take care not to damage it mechanically by shocks, impact, scratching or scraping.

Keep sharp, pointed and hard objects away from the surface of the screen.

Keep the surface of the screen clean.

For cleaning the case and the screen, use only a soft, dry cloth. For removing stubborn marks, you may moisten the cloth slightly.

Cleaning and care:

The surface of the screen may be cleaned only with a soft, dry cloth (such as a microfleece duster). If any marks cannot be removed with this dry cloth, you may moisten the cloth slightly.

Take care that no water or other liquid can enter the TV set, since this can cause serious damage to the set.

If any liquid or other foreign object (pieces of metal, etc.) enters the set, immediately disconnect the mains plug from the wall outlet.

Never insert your hands or tools into the set, since this may result in electric shocks.

Detaching the front glass on Primus models

Pull the front glass out of the frame on all four corners as far as it will go.

Take out the front glass by lifting it approx. 1.5 cm upwards and at the same time forwards.

Detaching the front glass on Sirius models


The front glass can be taken off frontwards for cleaning. The Sirius 32 has 4 retaining pins and the Sirius 37/42 has 6 retaining pins on the back of the front glass. The front glass should be removed if possible by two persons, by removing the bolts one at a time and taking it off frontwards.

Cleaning



The front glass can be cleaned with a standard glass cleaner.

30. Connections on the Front Side of the Set


Axio, at the right side under the flap

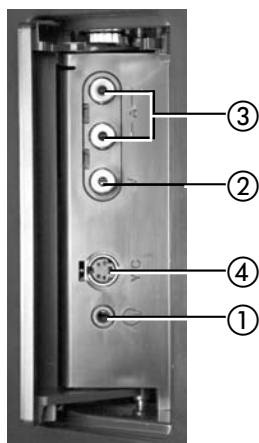


Puros, at the front under the flap

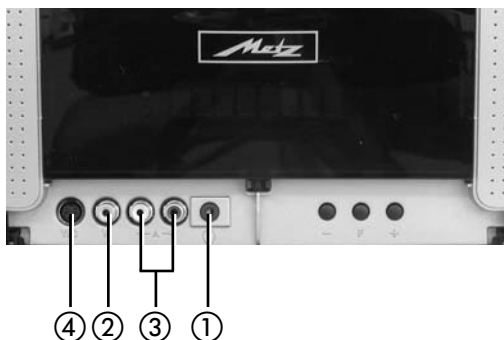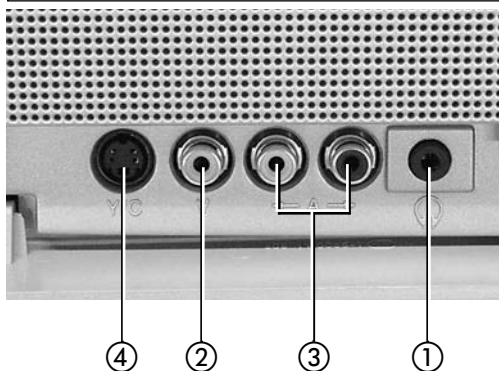

Talio, at the front under the flap

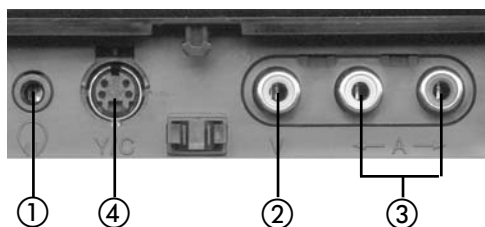


Primus, right side

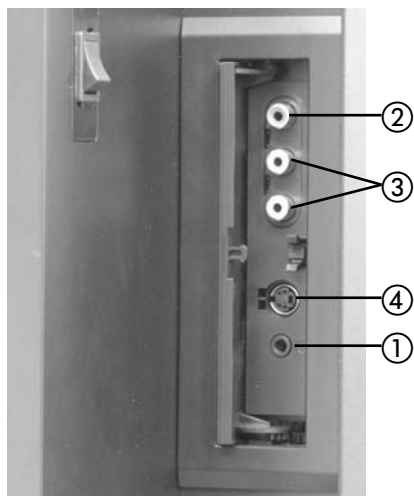


Linus, Sirius, at the front under the flap

- ① Headphone socket, diameter 3.5 mm
- ② FBAS/Video in (e.g. digital camera or camcorder)
- ③ Audio in R/L (e.g. camcorder)
- ④ S-VHS or Y/C in (e.g. camcorder)

30. Connections on the Rear of the Set (covered by a flap) Viewed from below

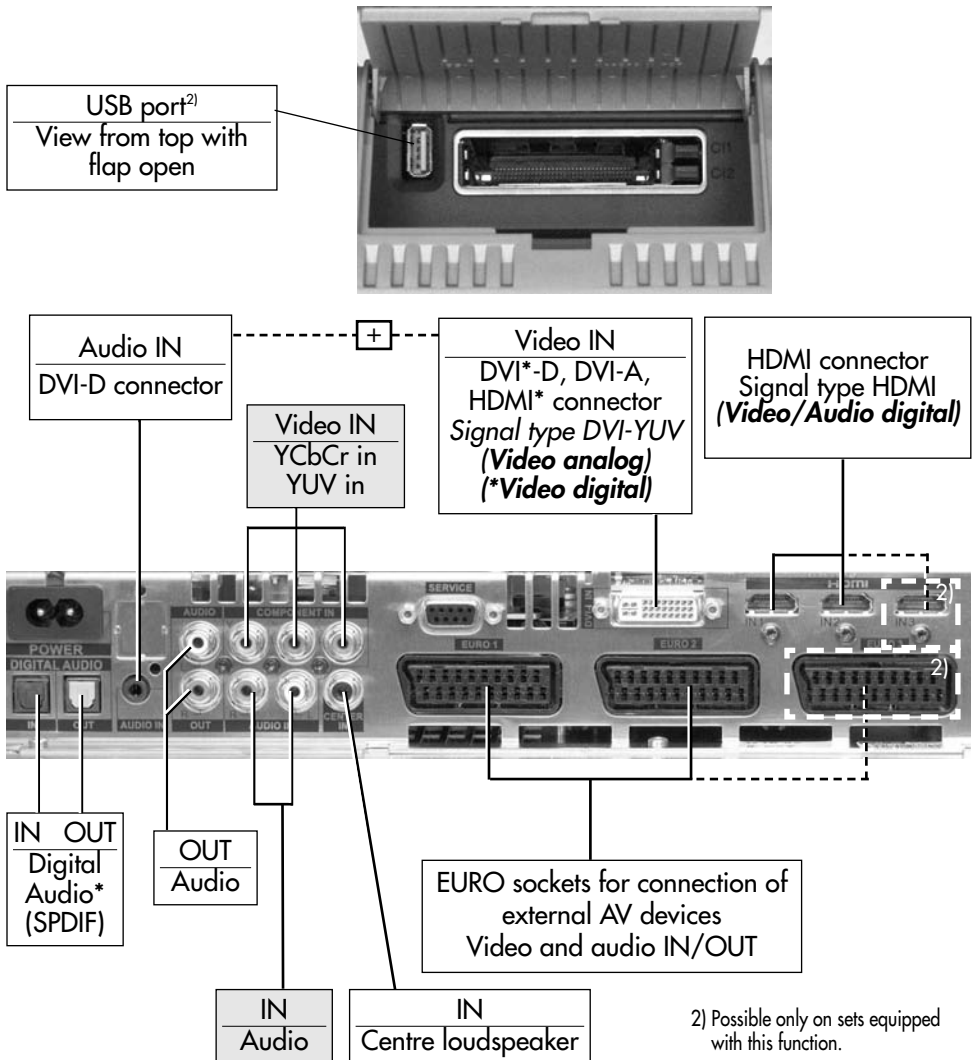

*) The sockets "Digital audio IN" and "Digital audio OUT" can be operated in loop-through mode. To do this, open the menu "AV devices" and activate (x) the menu item "Activate TV SPDIF input".

 **With the aid of an optical audio cable ("Toslink" cable, available from your dealer), the digital audio signal (AC3) provided by the TV set can be extracted for external processing.**

31. Registering AV Devices

Opening the menu

i AV (audio/video) devices are external devices which deliver video and/or audio signals (such as video recorders, DVD players, DVD recorders, etc.) and which can be connected to TV sets.


All commonly available AV devices are listed in the menu "AV devices".

👉 Note that you must always connect AV devices exactly as shown in the connection diagram in the TV menu of your TV set !

SVHS/Hi8 and Data Logic video recorders **must** always be connected to the EURO1 socket of the TV set.

In the factory, the EURO1 socket is programmed for a video recorder and the EURO2 socket is programmed for a DVD player.


Registering an AV device on the TV set

- Press the "MENU" key to open the TV menu.
- Press the yellow key  to open the menu "AV devices".
- Use the cursor control key to select the AV device you wish to register and press the "OK" key.
- Press numeric key **2** and set the signal types (OUT/IN) that apply to the AV device with the - + key and then confirm with the **OK** button.

Signal types:

(also see pages 118-120 and the user's guide of the respective AV device).

There are different signal types for the transmission of picture signals. See next page.

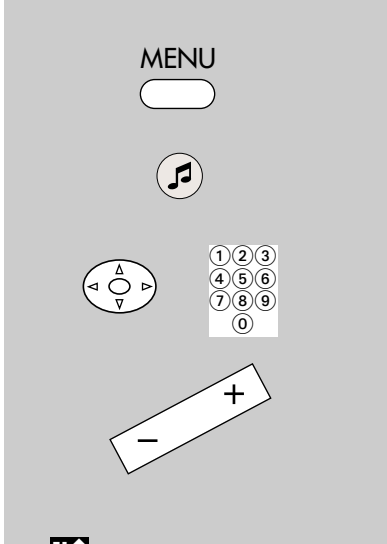

OK

👉 Caution! Connection of a new device may cause an existing connection diagram to be changed. If so, you must reconnect the AV devices accordingly.

31. Registering AV Devices

Fully-wired SCART or Euro AV cable	<p>FBAS: Connection of a VHS video recorder, analogue Sat receiver, decoder, camcorder, photos etc. via a Scart or EURO AV cable or via a Cinch cable or a Hosiden cable.</p> <p>For devices with higher picture quality (e.g. DVD players, Blu-Ray players, game consoles), the following applies:</p> <p>YC: Better quality through separation of brightness and colour information (SVHS/Hi8 video recorder) when connecting a VHS video recorder, analogue Sat receiver, decoder etc. via a Scart or EURO AV cable or a Hosiden cable</p> <p>RGB: Signal type with three video basic colours – Red, green, blue. Is usually needed to control a screen.</p>	<p>DVI-cable</p> <p>DVI-A /DVI-D: With a DVI interface, you can choose between DVI-A (analogue, PC with VGA interface) and DVI-D (digital, PC with DVI interface).</p> <ul style="list-style-type: none">• If you want, press the numeric key 3 and specify another name for this AV device and then press the OK button..• Use the cursor control key to select "Connect" and press the OK button. Connect the AV device to the respective EURO socket.• Press the "EXIT" key to close the TV menu.
Cinch-cable	<p>YUV High-quality video signal (video components); consists of brightness (Y) and the two colour difference signals (U and V) and is transmitted using three lines.</p>	
HDMI-cable	<p>HDMI: Using this interface, digital picture and sound signals are transmitted over a line with very high bandwidth (suitable for HDTV).</p>	

31.1 Registering AV Devices Data Logic

Opening the menu

i "Data Logic" is a system which provides a dialogue between a TV set and a video recorder. This "intelligent" system offers the features such as:


- Automatic transfer of the settings for terrestrial or cable TV stations (**not DVB**) to the video recorder.
- Immediate recording - the video recorder records the programme currently displayed on the TV screen.
- Automatic switching to the AV programme position.
- Direct control of the video recorder from the timer menu of the TV set.
- Automatic switching off of the video recorder when the TV set is switched to the standby state.



In the menu "AV devices" check **X** to the left of the field "Data Logic" for "Video recorder 1" and connect the video recorder to the EURO1 socket.

👉 ***Data Logic will function correctly only if the AV-1 socket on the video recorder is connected to the EURO 1 socket on the TV set.***


Comparable dialogue systems are: QLink (Panasonic), EasyLink (Philips), Megalogic (Grundig), SMARTLINK (Sony).

Registering a Data Logic video recorder on the TV set

- Press the "MENU" key to open the TV menu.
- Press the yellow key  to open the menu "AV devices".

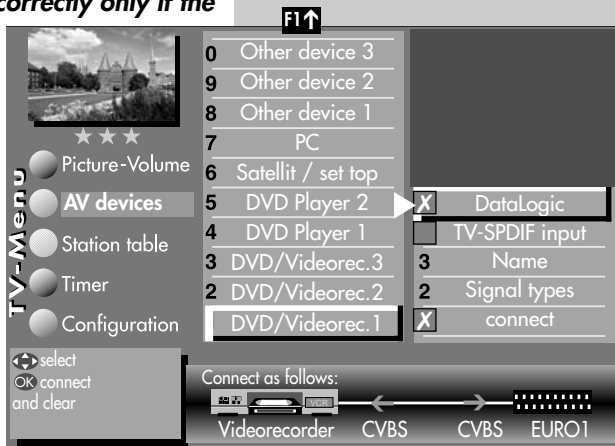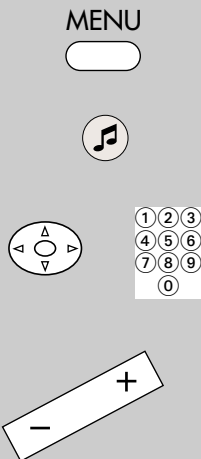

Opening the menu

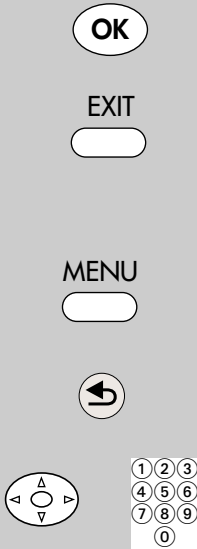


31.1 Registering AV Devices Data Logic


- Use the cursor control key to select the AV device to be connected and press the "OK" key.
- Press numeric key **2**, use the - + key to select the correct signal types (OUT/IN) and press the "OK" key.
(See also the operating instructions of the AV device.)
- If desired, press numeric key **3**, enter a new name for the AV device and press the "OK" key.
- Use the cursor control key to select "Data Logic" and press the "OK" key.
- Use the cursor control key to select "Connect" and press the "OK" key. Then connect the AV device to the corresponding EURO socket.

Note:

In the "Configuration" menu, "Mode 1" is set in the "Data Logic Settings" menu option. This factory setting is valid for most AV devices. If the AV device aborts the recording after approx. 5-10 seconds, then select setting "Mode 2".

Data Logic: transferring the station table

- Press the "MENU" key to open the TV menu.
- Press the red key  to open the menu "Configuration".
- Press numeric key **4** to select "Analogue TV".
- Press the "OK" key and then press numeric key **3** to select "Data Logic".

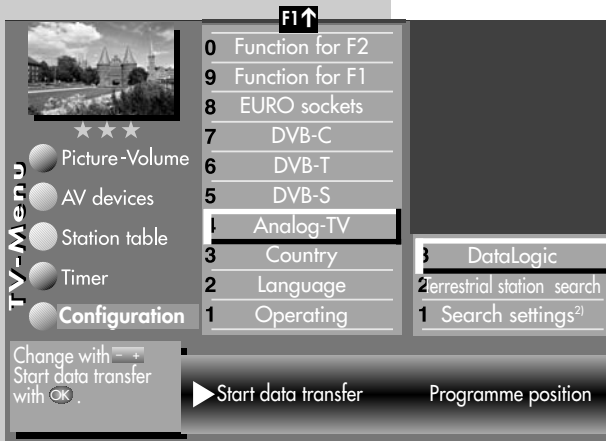

The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

- Press the "OK" key to transfer the programme positions from the TV set to the video recorder.

31.1 Registering AV Devices Data Logic Settings



Opening the menu

Data Logic Mode 1 / Mode 2

 

Factory setting is **Mode 1**.

If the recording is stopped by the Data Logic Videorecorder (self-dependent, 5-10sec. after the start of the recording), switching to **Mode 2** could solve this problem.

DataLogic mode settings

- Call up the TV menu with the **MENU** button.
- Use the red button  to open the "Configuration" menu.
- Use the cursor control key  to access "Init. prog. position".
- Select the menu option "DataLogic settings" with the assigned numeric key. In the example it is **8**.
- Set the desired parameters in the settings window using the - + key.
- Press the "OK" key to confirm your selection.
- Press the "EXIT" key to close the TV menu.

MENU

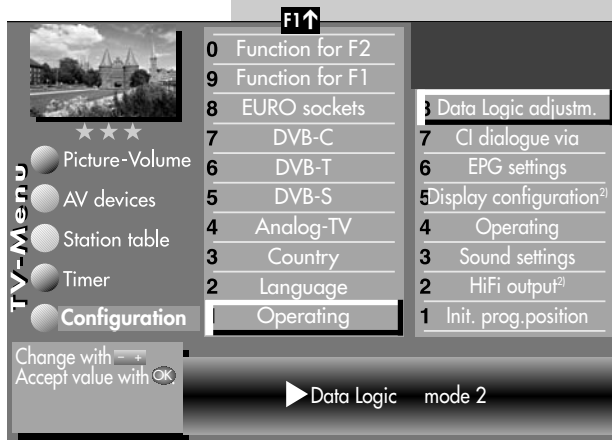



EXIT



The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

2) Possible only on sets equipped with this function.

Opening the menu

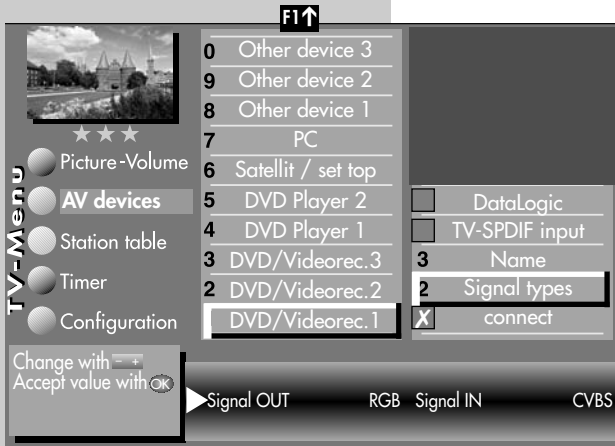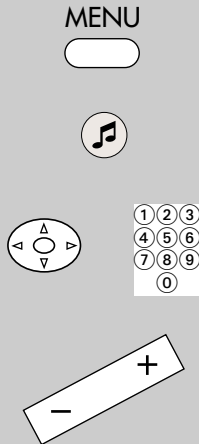

EXIT



The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

31.2 Registering AV Devices Setting signal types RGB

The signal type always refers to the input and output of the AV device.

Some AV devices may use a composite video signal (FBAS) for recording and playback operations and an RGB signal for displaying their menus.

It is not possible to make a general statement in this respect. The operating instructions of the AV device concerned may provide some indication.

If you connect such an AV device with the signal type "composite video" (FBAS) and recordings are played back correctly, but you cannot see the menu of the AV device, you must change the signal type in the menu "AV devices" to "RGB".

Setting the signal type

- Press the "MENU" key to open the TV menu.
- Press the yellow key to open the menu "AV devices".
- Use the cursor control key to select the AV device whose signal type you wish to change and press the "OK" key.
- Press numeric key **2**, use the cursor control key to select "Signal OUT", and use the - + key to change the setting to "RGB".

- Press the "OK" key to confirm your selection.
- Press the "EXIT" key to close the TV menu.

Caution ! This may cause an existing connection diagram to be modified. If so, you must reconnect the AV devices accordingly.

31.2 Registering AV Devices

Setting signal types DVI/HDMI



Opening the menu

 **The signal type always refers to the input and output of the AV device.**


AV devices equipped with a DVI or HDMI socket can be connected to the LCD TV with the aid of a DVI or HDMI cable, respectively.

The connected device must be registered in the menu "AV devices" with "Signal OUT" set to "DVI" or "HDMI", as applicable. Connection via a DVI or HDMI interface permits digital transfer of the picture signal from the device to the TV set. The sound signal must be connected with an additional Cinch or optical (Toslink) audio cable.

 
Setting the signal type DVI or HDMI

- Press the "MENU" key to open the TV menu.
- Press the yellow key  to open the menu "AV devices".
- Use the cursor control key to select the AV device whose signal type you wish to change and press the "OK" key.
- Press numeric key , use the cursor control key to select "Signal OUT", and use the $- +$ key to change the setting to "RGB".

- Press the "OK" key to confirm your selection.
- Press the "EXIT" key to close the TV menu.

 **Caution ! This may cause an existing connection diagram to be modified. If so, you must reconnect the AV devices accordingly.**

MENU



OK





EXIT



The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

Opening the menu

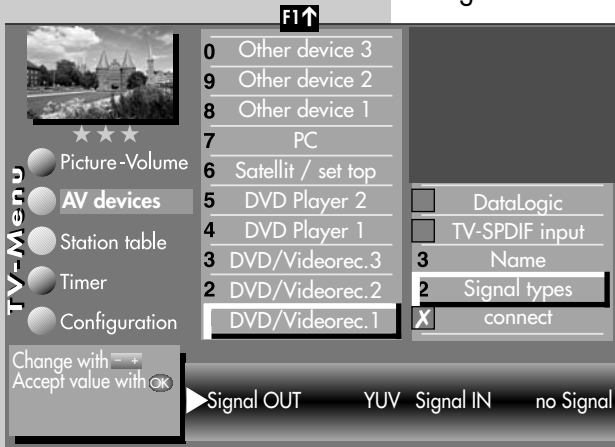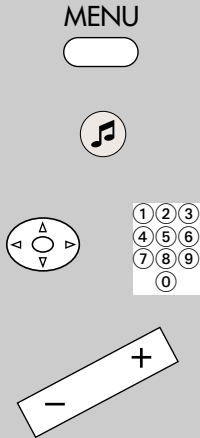

OK

EXIT

The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

31.2 Registering AV Devices Setting signal types YUV

Connection of external devices with YUV component output to the "COMPONENT IN" RCA jacks.

The signal type always refers to the input and output of the AV device.

AV devices equipped with a YUV jack can be connected to the LCD TV by means of a YUV cable (see page 114). In the "AV Devices" menu, the connected AV device must be registered with signal OUT "YUV".

The connection of the analogue YUV source using the RCA jacks to the YUV input of the LCD TV depends on the output format of the signal source. For YUV, the sound must be connected in addition via a Cinch or optical audio cable (Toslink).

Configure the following settings, depending on the output format of your signal source:

Setting the YUV Signal Type


- Enter the TV menu by pressing "MENU".
- Press the yellow key to open the "AV Devices" menu.
- Use the cursor control to select the AV device whose signal type you want to change and press "OK".
- Press numeric key **2**, use the cursor control to select "Signal OUT", and use the - + key to set "YUV" or "YUV (HD)".

- Confirm the setting by pressing "OK".
- Exit the "TV Menu" by pressing "EXIT".

Caution ! This may cause an existing connection diagram to be modified. If so, you must reconnect the AV devices accordingly.

31.3 Connecting a HiFi Amplifier/AV Receiver

Metz LCD-TV

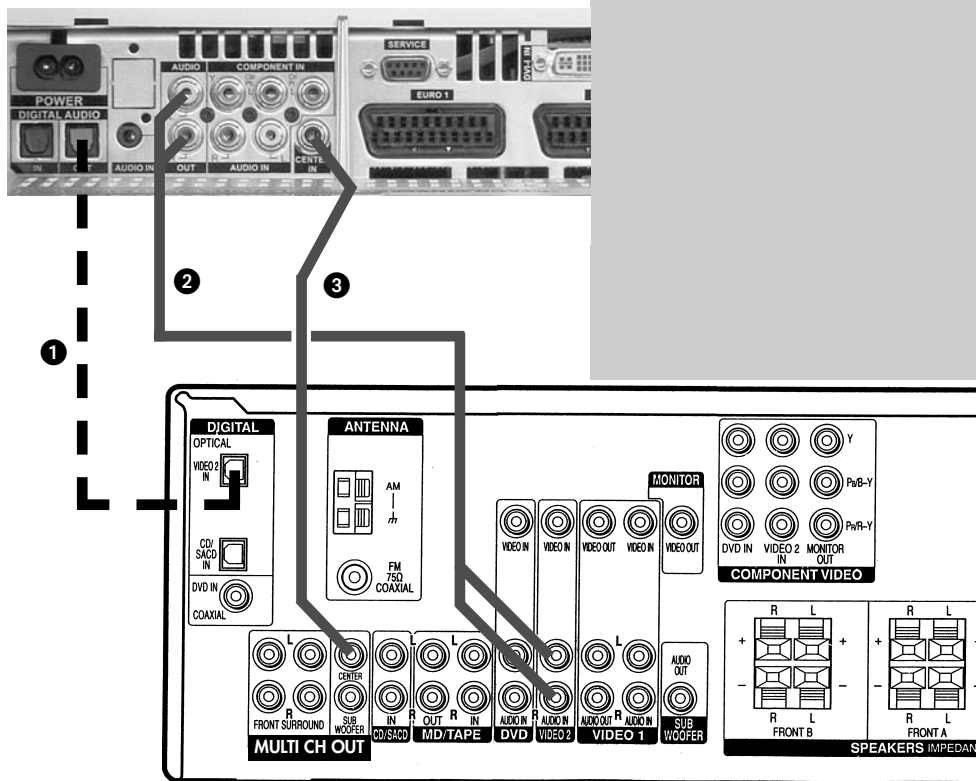


HiFi-amplifier
AV-Receiver

- ❶ Digital audio signal formats (depending on the source)
- ❷ analogue audio signal R+L (stereo)
- ❸ Centre IN is always possible if the AV receiver offers this.
Can be used in combination with ❶ or ❷ if this option is available.

It is always possible to use the TV speakers as the centre speaker if the AV receiver has this output available. The advantage of this is that the TV speakers can be used as the centre speaker, thus making it unnecessary to set up an external centre speaker.

Opening the menu

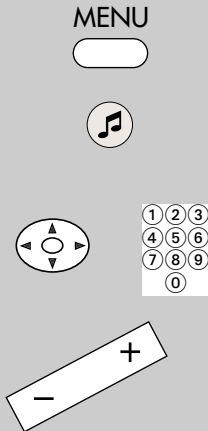

31.3 Connecting a Hifi Amplifier/AV Receiver

Registering the AV Device with the TV

- Enter the TV menu by pressing "MENU".
 - Press the yellow key to open the "AV Devices" menu.
 - Use the cursor control key to select "Hifi Amplifier" in the device selection.
 - Press "OK" twice, use the cursor control key to select "Signal Types", and press "OK"..
 - For connection type **1**, select the signal type "Signal IN - SPDIF".
- For connection type **2**, select the signal type "Signal IN – Stereo".

Confirm the setting by pressing "OK"

- Press the "EXIT" key to close the TV menu.


Sound:

- To configure the sound settings of the LCD TV, press the yellow key and use the cursor control key to select the menu item "Sound via ...".




- For connection type **1**, use the - + key to select "Sound via Hifi".
The speakers of the LCD TV are muted. The sound (AC3 or stereo sound) is rendered over the speakers of the Hifi set.
- For connection type **2**, use the - + key to select "Sound via surround".
The speakers of the LCD TV are used as the centre box. The sound (AC3 or stereo sound) is rendered over the speakers of the Hifi unit.


31.4 Removing AV Devices

 **This menu item is not available in a 2 ** menu.**


If desired, you can change the factory settings for AV devices (a video recorder on the EURO1 socket and a DVD player on the EURO2 socket).

Removing an AV device from the TV set

- Press the "MENU" key to open the TV menu.
- Press the yellow key  to open the menu "AV devices".
- Use the cursor control key to select the device you wish to remove and press the "OK" key. The cursor is on the line "Connect".
- Press the "OK" key again. A message is displayed, asking if you really want to change the connected device.
- Press the OK key again to remove the connected device.
- Press the "EXIT" key to close the TV menu.

 **Caution ! This may cause an existing connection diagram to be modified. If so, you must reconnect the AV devices accordingly.**

Opening the menu

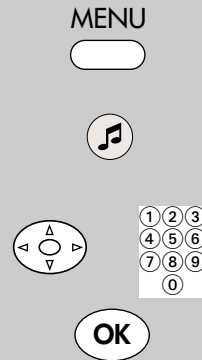

Die Anzahl der Themen und Kapitel ist abhängig vom eingestellten Bedienungsumfang. Die Anordnung der einzelnen Menüpunkte kann sich, abhängig von der Geräteausstattung, in der Reihenfolge und Nummerierung ändern.

Opening the menu

32. Copying between AV Devices Direct recording

AV



2

If you wish to copy a recording from one of the AV devices connected to your TV set (such as a DVD player) to another connected AV device (such as a video recorder), you must do this by means of a direct recording operation. In this case, the signal arriving at one of the EURO sockets is redirected to the other EURO socket, from where it can be recorded.

Example: you have a DVD player and a video recorder connected to the EURO sockets of the TV set (see Section 31).

Programming a direct recording for copying:

- Press the "AV" key and use the corresponding numeric key to select the DVD player (playback device).

- Press the **F2** key. Briefly pressing **F2** executes the function which is programmed for this function key (see Section 18, "Programming function keys"). Pressing and holding **F2** for about three seconds displays all functions available for this function key.


- Press **numeric key 0** to open the timer menu. The timer window displays the AV programme position (DVD player), the current date and a time window of two hours.
- If two hours is insufficient for the copying operation, use the numeric keys to enter a later end time.



F2



0

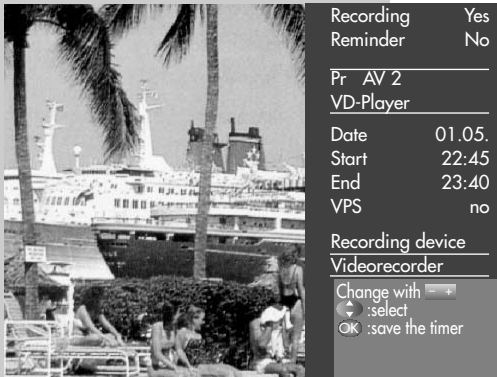


32. Copying between AV Devices

Direct recording

- Use the cursor control key ▼ to select the line "Recording device".
If only one such device exists, it is then displayed. If further recording devices exist, you can select the desired device with the aid of the - + key.
- Press the "OK" key to save the settings.
- On the playback device (in this example, the DVD player) start the film which is to be copied.
- On the recording device (in this example, the video recorder), select the AV programme position (in most cases AV1).
- On the recording device, start a direct recording by pressing the appropriate button (**REC** or **OTR**, etc.).

The TV set is now set up so that the signal coming from the playback device is connected directly to the recording device.

33. Inserting/Removing CA Modules

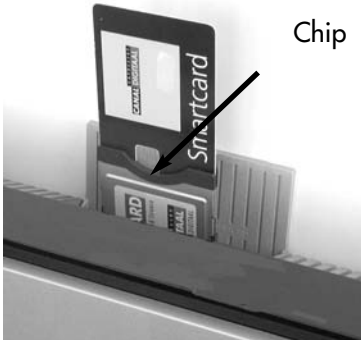

Front view

The LCD TV has two slots (CI1 / CI2) for CA modules at the top (card reader for smartcards or decoder cards).


To insert the CA module, open the lid on the top of the LCD TV and insert the CA module in one of the slots as shown in the pictures. Press the CA module down until the unlocking bar is lifted up.

Close the lid.

The LCD TV is now ready to decode the respective station.



Back/top view (without lid)

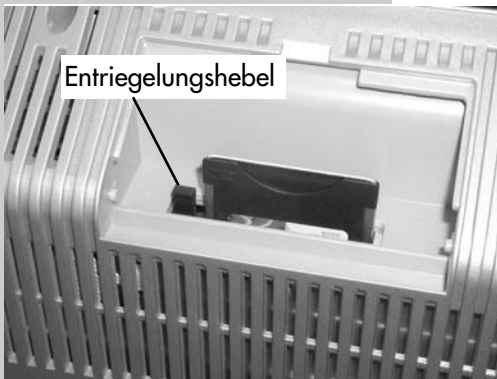

Back view (without lid)
with inserted module

34. Connecting a PC: PC [VGA] → TV set [DVI-A]

Start your PC and preset the resolution to 1024 x 768p 60 Hz. Exit windows and turn the PC off.

VGA → DVI-A setting

- Call up the TV menu with the **MENU** button.
- Open the "AV device" menu with the yellow **Ⓜ** button.
- Use the **▲** cursor key to select the "PC" AV device and then click the **OK** button. Use the **▲** cursor key to go to the "Signal types" menu option. The settings must be made as shown in Figure 1a. Exit the menu with the **EXIT** button.

Press the **AV** button for approx. 2 seconds and then select the AV device "PC".

Connect with a multimedia cable (VGA, 15pol. (Plugs) on DVI (Plug) (fig. 2) the VGA output of the graphics card of the PC's with the DVI entrance of your LCD-TV set).

- Switch the PC on. When the picture of the PC is shown on your TV for the first time, a box is displayed on the bottom edge of the screen with the resolution that has been set, e.g.:

Video: 1024 x 768 60Hz

👉 You can call up this information at any time by pressing the green **Ⓢ button.**

While Windows is starting, data is exchanged between the graphics card and the TV. The possible resolutions are determined in the process.

When the start-up procedure is finished, you can set the resolution as you wish (recommended = 1360 x 768 - 60 Hz.) in the Windows menu "Display characteristics".

For PC sound from the speakers of your TV, see page 129.

fig. 1b


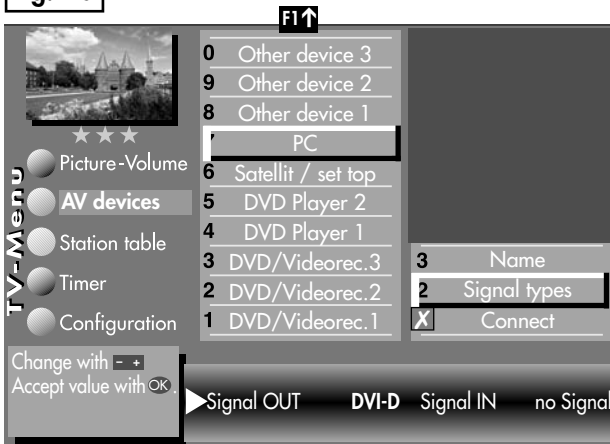


fig. 3

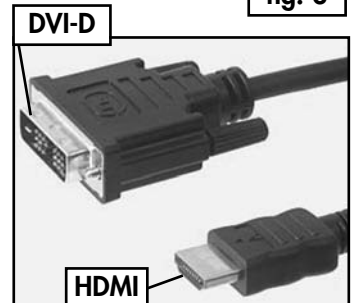

34. Connecting a PC: PC [DVI-D] → TV set [HDMI]

Start your PC and preset the resolution to 1024 x 768p 60 Hz. Exit windows and turn the PC off.

DVI-D → HDMI setting

- Call up the TV menu with the **MENU** button.
- Open the "AV device" menu with the yellow **Ⓜ** button.
- Use the **▲** cursor key to select the "PC" AV device and then click the **OK** button. Use the **▲** cursor key to go to the "Signal types" menu option. The settings must be made as shown in Figure 1b. Exit the menu with the **EXIT** button.

Press the **AV** button for approx. 2 seconds and then select the AV device "PC".

Use a commercial multimedia cable (DVI-D HDMI, fig. 3) to connect the DVI-D output of the graphics card of the PC to the HDMI input of your LCD-TV set.

☞ Use the HDMI connector shown in the AV menu.

Switch the TV on.

- Switch the PC on. When the picture of the PC is shown on your TV for the first time, a box is displayed on the bottom edge of the screen with the resolution that has been set, e.g.:

Video: 1024 x 768 60Hz

☞ You can call up this information at any time by pressing the green **Ⓜ button.**

While Windows is starting, data is exchanged between the graphics card and the TV. The possible resolutions are determined in the process.

When the start-up procedure is finished, you can set the resolution as you wish (recommended = 1360 x 768 - 60 Hz.) in the Windows menu "Display characteristics".

fig. 1b


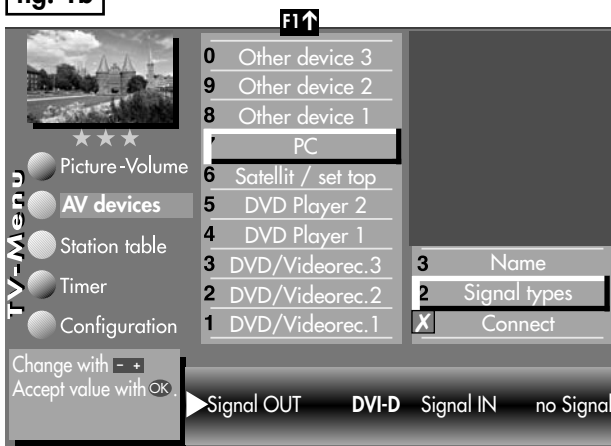


fig. 3

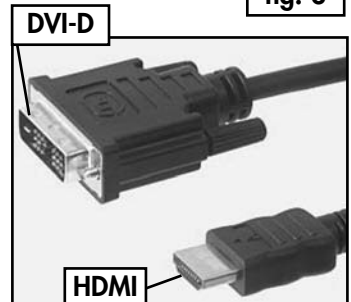


34. Connecting a PC: PC [HDMI] → TV set [HDMI]

If the graphics card of your PC has an HDMI output, then you can use it to connect to the TV. To do this, proceed as described in this chapter (connect PC [DVI-D] to TV [HDMI] and in the menu AV - PC - Signal Types - Signal OUT, select the HDMI setting).

34. 1 Connecting a PC: sound from the speakers of TV

Use a commercial audio cable with 3.5 mm stereo jack plugs to 2x cinch connectors to connect the Audio Line port of the sound card to the Audio-In cinch connectors of the TV.

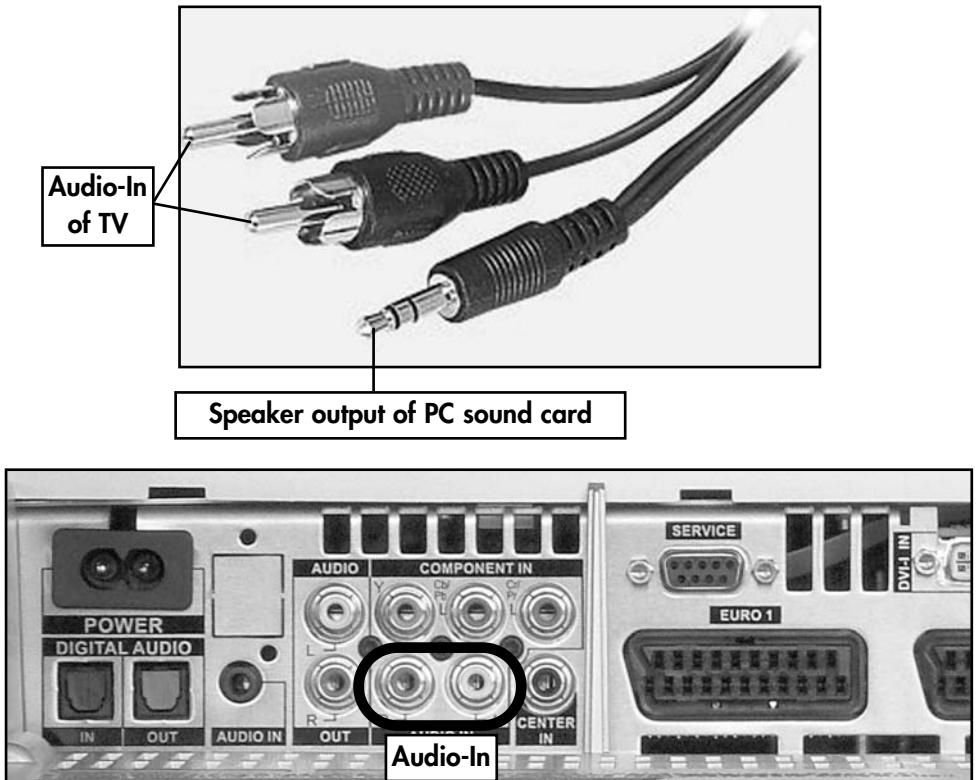

35. Glossary

Automatic zoom

When the automatic zoom function is active, programmes broadcast in "widescreen format" (such as those in the 16:9 format) are expanded to fill as much of the screen as possible.

If this function is inactive, the format of such programmes is not adjusted automatically.

AV programme position

AV devices have one or more connection sockets, depending on the model. The designations of these sockets are marked on the device (e.g. AV1).

On the AV device, you can select which socket you want to use. The selected socket is shown on the display of the AV device (e.g. A1 for socket AV1).

Base width

With stereo programmes, the base width (=spatial distance between the speakers) can be artificially widened in order to achieve a larger stereo triangle.

Motion compensation, movie

"Motion compensation, movie" improves the picture display for black and white or cinema movies. Motion becomes smoother and a more three-dimensional picture appearance results.

Motion compensation, video

"Motion compensation video" improves the picture display for studio recordings, e.g. the news or documentaries.

Picture position, vertical

With widescreen films, subtitles are sometimes transmitted in the black area at the bottom of the screen. You can move the picture upwards on the screen to ensure that these subtitles remain visible.

Picture profile

Standard: Compromise for all applications

Sports: Setting for sports stations or sports programmes

Brilliant: Setting for animated films, DVD players and Blue Ray players

Games: Preferred setting for recordings from game consoles

PC Monitor: Preferred setting for recordings from a connected PC.

User: Your self-configured picture profile

Code

The settings for the childlock function are protected by a four-digit code: you can enter any desired code, but you should note it for future use. If you have forgotten your code, please consult your local dealer.

Dyn. image sharpness

The "Dynamic image sharpness" setting facilitates an automatic increase to the sharpness of the picture in the event of a low level of sharpness.

35. Glossary

Dyn. Contrast

The „Dynamic contrast“ setting facilitates an automatic increase of the picture contrast in the event of a low level of picture contrast.

Fine search

During the station search with a stipulated symbol rate, the channels are synchronised at the centre of the channel. If this setting does not lead to a satisfactory result, fine tuning can then be set. The search operation takes considerably longer with the fine search set.

Backlighting

The backlighting (given in %) is the basic value that is set in accordance with the light conditions in the room in which the TV set is located. The basic setting should be carried out in a dark room so that black picture content is still black.

Image sticking

Images that remain unchanged for a long time (several hours), such as still pictures, result in „image sticking“, i.e. lasting shadow formation.

Such images should be avoided if at all possible. This effect is reversible and disappears again after a short time.

Tone settings

The tone can be set to either "Normal" or "Speech". In the setting "Speech", the bass and treble components of the sound signal are set to make speech as easy to understand as possible. The setting

"Normal" is recommended for music programmes.

Volume correction

The various stations broadcast their sound at different volumes. The TV set can automatically compensate for these differences in the volume. This function remains active even if the standard sound settings are recalled.


Standard values

The standard values are the settings (such as brightness, sound volume, colour, etc.) which are the same for all programme positions.

SRS-WOW

WOW is an audio system developed by SRS Labs, Inc. which provides a unique listening experience. The sound becomes fuller and the bass is deeper and more voluminous.

Activation of the WOW function allows you to hear a lot of spatial and environmental audio information which is lost in normal stereo mode.

In normal TV mode, the WOW function can be preselected by pressing the yellow key  and then switched on and off with the - + key.

 Is a registered trade mark of SRS Labs, Inc.

The SRS WOW technology is used by Metz under a licence from SRS Labs, Inc.

35. Glossary

Panorama

The panorama function can be used to expand "normal" TV programmes broadcast in the 4:3 format to fill the full width of a 16:9 screen. This is done by expanding the picture width accordingly.

Spatial sound

This function can be used to create an artificial stereo effect for programmes with sound in mono.

Noise reduction

This function allows you to improve the picture quality of "snowy" pictures which result from poor reception conditions. Various levels of noise reduction can be selected and the settings can be made separately for each programme position.

Symbol rate (baud rate)

The symbol or baud rate describes the data volume that is transmitted per second. The time required for the search function increases in proportion to the symbol rate..

VCR

The VCR function provides an optimal picture quality when playing back recordings from tape devices such as camcorders or video recorders.

Forced mono

It may happen that your TV set switches to stereo mode although the programme you are watching is not broadcast with stereo sound. This is normally due to the local reception conditions. If you set the selected programme position to "forced mono" all programmes received at this programme position are reproduced with mono sound.

36. Problem, Possible cause, Remedy

Problem	Possible cause	Remedy
TV set does not react to commands from the remote control	<ul style="list-style-type: none"> • No line of sight between the remote control and the TV set. • Sunlight is shining directly on the infrared window of the TV set. • Batteries of the remote control are exhausted. • TV set has been switched off with the main power switch. • Fault in the internal processor. 	<ul style="list-style-type: none"> • Remove any obstacles between the units. • Prevent sunlight from shining on the set. • Replace the batteries. • Switch on the TV set with the main power switch. • Switch off the TV set with the main power switch, wait a few seconds and then switch it on again.
The message "Enter code" is displayed when the TV set is switched on.	<ul style="list-style-type: none"> • The childlock is active and was programmed to disable all stations. 	<ul style="list-style-type: none"> • Enter the code you used when programming the childlock.
The TV set will not switch to a selected programme position. A teddy bear is displayed instead.	<ul style="list-style-type: none"> • The childlock is active and was programmed so that only the stations shown in the list beside the teddy bear may be selected. 	<ul style="list-style-type: none"> • Enter the code you used when programming the childlock.
You have switched off the TV set with the Ⓢ key, but the green LED remains on.	<ul style="list-style-type: none"> • EPG data are currently being collected from the programmed EPG station. 	<ul style="list-style-type: none"> • None. When all data have been collected, the TV set will switch itself off automatically.
No sound is output on the TV speakers	<ul style="list-style-type: none"> • "Speaker off" or „Speaker centre" is set in the "Configuration" – "Operation" – "Sound settings" TV menu. 	<ul style="list-style-type: none"> • In the "Configuration" – "Operating" – "Sound settings" TV menu, set "Speakers on"

36. Problem, Possible cause, Remedy

Problem	Possible cause	Remedy
Direct recording of an analogue terrestrial station (received via roof antenna or cable) with Data Logic does not work.	<ul style="list-style-type: none"> The Data Logic video recorder is not connected to the roof antenna or cable outlet with a suitable cable. 	<ul style="list-style-type: none"> Connect the Data Logic video recorder to the roof antenna or cable outlet with a suitable cable.
General problems with an external AV device connected to the TV set.	<ul style="list-style-type: none"> The AV device has not been registered in the TV set. 	<ul style="list-style-type: none"> Open the menu "AV devices", select the device with the cursor, set the signal types (OUT/IN) correctly and press the "OK" key. Make sure that you connect the AV device as shown in the connection diagram.
Data Logic does not work. AV device (video rec.) independently breaks off recording	<ul style="list-style-type: none"> The Data Logic video recorder with data transfer has not been registered correctly. The Scart cable does not have all pins connected through. Wrong data logic setting (see also ch. 31.1, page 116) 	<ul style="list-style-type: none"> Open the menu "AV devices" and register the Data Logic video recorder as video recorder 1 with "Data Logic On". Use a Scart cable in which all pins are connected through. Set the data logic setting to Mode 2 from Mode 1

36. Problem, Possible cause, Remedy

Problem	Possible cause	Remedy
A film in 16:9 format is played back from an AV device, but is displayed in 4:3 format.	<ul style="list-style-type: none"> The picture format for this programme position has not been set correctly in the TV menu. 	<ul style="list-style-type: none"> Select the AV programme position and set the picture format to 16:9 or "Automatic" (see page 22).
The menu of a connected AV device (such as a DVD player) is not visible on the TV screen.	<ul style="list-style-type: none"> The AV device has been registered in the TV menu with the signal type "Composite video". 	<ul style="list-style-type: none"> Register the AV device with the signal type "RGB" (see page 68).
When playing back using a connected AV device, the colours are displayed incorrectly, e.g. blue faces.	<ul style="list-style-type: none"> The AV device that is connected to the HDMI socket doesn't supply a signal that complies with the standard. 	<ul style="list-style-type: none"> Press the "AV button and select the respective AV device with the cursor. Call the TV menu and under the "Pict. setting, prog. posn." menu option select "UV shift" and set to "On" (see pg. 21).

37. Upgrade Kits

- **DVB-S2 digital retrofit kit 089 NN 236A,**

as 029 NM 1119 but for the reception of digital HDTV satellite stations for TV channels.

An additional HDTV module is needed if DVB-S reception in HDTV channels is required.

You do not need an additional remote control for this.

- **Hard disk recorder 093 NN 1408¹¹⁾ (250 GB)**

for the digital recording and playback of DVB channels (including HDTV). Also offers the option of postponing the TV schedule (timeshift mode).

Only possible in conjunction with an HDTV module.

- **Hard disk recorder 094 NR 1410¹¹⁾ (500 GB)**

for the digital recording and playback of DVB channels (including HDTV). Also offers the option of postponing the TV schedule (timeshift mode).

Only possible in conjunction with an HDTV module.

- **EC module 033 NN 1345 (encoder module)**

also enables the recording of analogue TV channels in conjunction with the hard disk recorder.

Only possible in conjunction with an HDTV module.

¹¹⁾ not possible for Axio 32TR16, 37TR16, 32TR29 and 37TR29

37. Upgrade Kits

- **Metz Soundsystem 80**
(014LR7043)

Active 2.1 Virtual Surround System for home theatre and hi-fi enjoyment

- **Metz Soundsystem 100**
(014LR9048)

Active 2.1 Virtual Surround System for home theatre and hi-fi enjoyment

- **Metz Soundsystem LS 5.1 W**
(014LR5143)

Active 5.1 Virtual Surround System for home theatre and hi-fi enjoyment

For further information and other retrofit kits, please contact your TV dealer.

You can also find further information on our homepage: www.metz.de.

38. Technical Data

Mains voltage:

230-240 VAC, 50Hz

Antenna input:

75 Ohms, unbalanced DIN 45325

Channel coverage:

Standard channels 2 - 12, 21 - 69
Special channels S1 - S20, S21 - S41,
S42 ... S46 (Belgium channels OIR)

Operating temperature range:

+5°C to +35°C at 75 % air humidity

Energy consumption per hour (Wh):

Multiply the power consumption in W by 1 hour

Stand-by < 0,9 W

38. Technical Data

Power consumption

	Power consumption**	Power consumption in eco mode (condition on delivery) (IEC 62087 Ed. 2)	Music output power to DIN 45324 into 4Ω (at 1 kHz) (sinusoidal power) *) into 8Ω
Talio 32 FHDTV 100 CTS2 Z	ca. 162 W	ca. 129 W	2 x 20 W (2 x 12 W)
Talio 37 FHDTV 100 CTS2 Z	ca. 186 W	ca. 149 W	2 x 20 W (2 x 12 W)
Puros 32 FHDTV 100 CTS2 Z	ca. 162 W	ca. 129 W	2 x 20 W (2 x 12 W)
Puros 37 FHDTV 100 CTS2 Z	ca. 186 W	ca. 140 W	2 x 20 W (2 x 12 W)
Linus 32 FHDTV 100 twin Z	ca. 160 W	ca. 123 W	2 x 20 W (2 x 12 W)
Linus 37 FHDTV 100 twin Z	ca. 186 W	ca. 149 W	2 x 20 W (2 x 12 W)
Sirius 37 FHDTV 100 twin R	ca. 186 W	ca. 143 W	2 x 20 W (2 x 12 W)
Sirius 42 FHDTV 100 twin R	ca. 217 W	ca.163 W	2 x 20 W (2 x 12 W)
Axio 32 FHD CT	ca. 145 W	ca. 109 W	2 x 20 W (2 x 12 W)
Axio pro 32 FHDTV 100 CT Z	ca. 157 W	ca. 124 W	2 x 20 W (2 x 12 W)
Axio pro 37 FHDTV 100 CT Z	ca.183 W	ca.146 W	2 x 20 W (2 x 12 W)
Axio 37 FHD CT	ca. 162 W	ca. 117 W	2 x 20 W (2 x 12 W)
Axio 42 FHD CT	ca. 199 W	ca. 140 W	2 x 20 W (2 x 12 W)
Primus 55 FHDTV 200 twin R	ca. 315 W	ca. 233 W	2 x 20 W (2 x 12 W)
DVB-Radio operated	ca. 29 W	ca. 25 W	—

38. Technical Data

** The power consumption was determined with the „Backlighting-Control off (see p. 26). Depending on the parameters set then, the value shown here can be lower and therefore mean saving power.

38. Technical Data

Supported Signal Standards

Video HDMI

SDTV	640x480p 60Hz
	720 (1440)x480i/p 60Hz
	720 (1440)x576i/p 50Hz
	720x576p 50Hz
HDTV	1280x720p 50/60Hz
	1920x1080i 50/60Hz
	1920x1080p 24/50/60Hz

Video DVI-I

640x480p 60Hz RGB (DVI-D, analog) PC
800x600p 60Hz RGB (DVI-D, analog) PC
1024x768p 60Hz RGB (DVI-D, analog) PC
1360x768p 60Hz (only HDTV-100 LCD-TV set)
1280x1024p 60Hz (DVI-D, analog) PC (only FHDTV LCD-TV set)
1920x1080p 60Hz (DVI-D) PC (only FHDTV LCD-TV set)

Video Scart (RGB):

720x576i 50 Hz
720x480i 60 Hz

Video Scart (Y/C, FBAS) / Front AV:

720x576i 50 Hz PAL / SECAM
720x480i 60Hz NTSC

Video Component IN:

720x576i/p 50 Hz
720x480i/p 60 Hz
1280x720p 50/60Hz
1920x1080i 50/60Hz

Audio HDMI:

Linear PCM Stereo 32 kHz
Linear PCM Stereo 44,1 kHz
Linear PCM Stereo 48 kHz

Audio S/PDIF:

Linear PCM Stereo 32 kHz
Linear PCM Stereo 44,1 kHz
Linear PCM Stereo 48 kHz

Audio Scart / Front AV, Comp Audio, DVI Audio:

Analog Stereo

Audio Center IN:

Analog mono

Battery disposal

Do not dispose of batteries with domestic rubbish! Please return spent batteries to collecting points should they exist in your country.

Please only return fully discharged batteries. Normally, batteries are fully discharged if the device they power

- switches itself off and indicates "batteries spent"
- they no longer function flawlessly after prolonged use.

To prevent short circuits, please cover the battery poles with adhesive tape strips.

These symbols can be found on batteries containing harmful substances:

Pb = the battery contains lead

Cd = the battery contains cadmium

Hg = the battery contains mercury

Li = the battery contains lithium



Your Metz product was developed and manufactured with high-quality materials and components which can be recycled and/or re-used.

 This symbol indicates that electrical and electronic equipment must be disposed of separately from normal garbage at the end of its operational lifetime.



Please dispose of this product by bringing it to your local collection point or recycling centre for such equipment.

This will help to protect the environment in which we all live.

Metz-Werke GmbH & Co KG
Postfach 1267
D-90506 Zirndorf/Germany

Fon: +49 911/97060
Fax: +49 911/9706340
www.metz.de
info@metz.de

Errors excepted. Subject to changes !

Index

- Automatic station search . . . 83,86,88,96
- Automatic zoom 49
- AV devices, connecting/registering 111,112
- AV devices, removing 123
- AV programme position 18
- AV playback, devices with switching voltage 17
- AV playback, devices without switching voltage 18
- Audio / language selection 80

- Batteries for the remote control** 8
- Brightness 9,20

- Camcorder, connecting** 111,113
- Childlock 50
- Childlock, activating 50
- Childlock, deactivating 51
- Childlock, permitted programmes . . . 51
- Cleaning 110
- Code for childlock 51
- Colour standard
- Connections on front and rear of set. . 111,112
- Copying recordings 124
- Country 80

- DataLogic video recorder** 115-117
- DataLogic settings 117
- DVI / HDMI 119
- Direct recording (OTR) 66,124
- Double font size 15
- DVD player, connecting 112-113
- DVD player, removing 123

- Electronic Programme Guide (EPG)** . . 72
- EURO sockets 17,112
- Equalizer 36
- External devices (playback) 17
- External devices, connecting . . 111,112

- Font size, double 15
- Forced mono 40
- Freeze frame 9

- Glossary** 130

- Headphones** 47,48,111
- HDMI / DVI 119
- Help 12
- HiFi output 42,112

- Info (Information)** 12
- Initial programme position 104
- Interests (by EPG) 77

- Language for TV menu** 80

- Marks in Teletext, clearing** 16
- Marks in Teletext, overview 16
- Marks in Teletext, scrolling by 15
- Marks in Teletext, setting 15
- Menu language 80
- Menu, menu control 13
- Multiple pages, sub-pages 14
- Mute 42

- Noise reduction** 23,130

- Off time** 53
- On time** 53
- Operating mode** 16


- Panorama** 30,68
- PC, connect 127
- Picture format 22,67,68
- Picture position 69
- Picture quality from video recorder. . . 19
- Picture settings 10,24-32
- Picture sharpness 24

Index

Playing back from ext. devices . . .	17,18	VCR function	19
Portal stations	100	Video recorder, connecting . . .	112-120
Programme guide	72	Video recorder, picture quality	19
Programme switching for AV devices. 18			
R		Teletext	14
Radio mode with DVB	106	Teletext, clearing marks	15
RGB	118	Teletext, font size	15
Recording with the EPG	79	Teletext, overview of marks	16
Reminder	52	Teletext, scrolling by marks	15
Riddle key		Teletext, setting marks	15
S		Volume correction	28
Signal type (Euro sockets)	118-120	Volume correction, automatic	35
Sleep timer	53	Winter time	54
Sound 1, Sound 2	48	YUV	120
Sound corrections	41	Zoom	30
Sound effects	37		
Sound settings	10,33		
SRS-WOW	34		
Standard picture settings	10,24-32		
Standard sound settings	33		
Station logo	101		
Station search, automatic . 83,86,88,96			
Station search, manual	87,89,97		
Station selection	11		
Station table	11		
Stations, moving, copying, . . .	102,103		
, sorting, deleting	102,103		
Summer time (see time settings).	54		
Switching off	6,8		
Switching on	6,8		
Switching voltage, devices with	17		
Switching voltage, devices without	1618		
T			
Thunderstorms	7		
Timer control	53		
Timer, setting manually	54		
TV menu	13		
TV standard	82		



- 1 Service Centre
- 2 Training Centre
- 3 Administration and development
- 4 Storage/Dispatch
- 5 Mecablitz production
- 6 TV production
- 7 Plastics technology

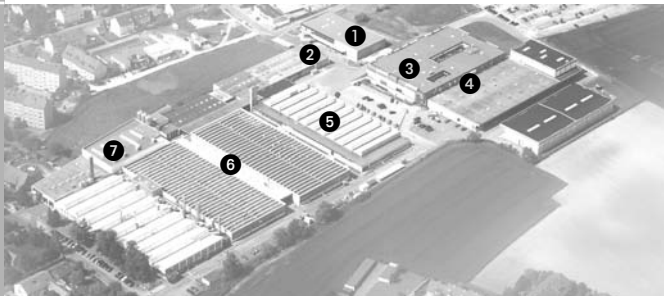

Metz - Werke GmbH & Co. KG - Zirndorf near Nürnberg

Core competence in the areas of electronics and plastics technology to form the basis of the excellent reputation of the Metz Werke that has been built up throughout the world over a period of many decades.

Metz offers quality made in Germany:
Consumer electronics, mecablitz flash units,
plastics technology and industrial electronics.

Metz-Werke GmbH & Co. KG
Postfach 1267, D-90506 Zirndorf

Fon: +49 911 - 97060
Fax: +49 911 - 9706340

www.metz.de
info@metz.de

Errors excepted. Subject to changes.

© Printed in Germany

Metz - always first class.