

OPERATING INSTRUCTIONS
for LCD TV sets Axio pro, Linus, Caleo,
Primus, Sirius with Chassis 610



Foreword

Dear customer,

Thank you for selecting a Metz LCD TV set.

We have equipped this TV set with a menu system which uses "file cards" and believe that this will provide you with a user interface that is easy to understand.

If you have any problems, you can press the **(INFO)** key to display a help function that will assist you in setting up your TV set.

However, you should read at least sections 1 to 8 of the Operating Instructions before putting your new TV set into service.

HDTV

integriert

TV sets with the type designation "HDTV" provide the possibility of showing HDTV programmes.

In the box

- TV set
- Remote control RM16 for TV sets without digital recorders, or remote control RM17 for TV sets with digital recorders.
- 2 AAA batteries
- Power cord
- Back panel cable cover
- Operating instructions

Your METZ-WERKE

Contents

1. Installation	4
1.1 Proper use	4
1.2 Connecting and switching on	5
2. Safety notes	6
3. The Remote Control	8
4. Daily Operation	14
5. Station selection	15
... management of program position	15
... via program table	15
6. User help (Information)	16
7. Menu Control	17
8. Teletext	18
9. Selecting Operating Mode	20
10. AV Playback	21
... automatic program change	21
10.1 ... , VCR-function	23
10.2 ... , MPEG noise reduction	24
10.3 ... , Picture profile adjustment	25
10.4 ... , Picture Format	26
10.5 ... , Noise reduction	27
11. General Picture Settings	28
... , Select power options	29
... , Configure picture profiles	31
... , Assign selected picture profile	32
... , adjust border colour	33
... , setting zoom/panorama mode	34
11.1 ... , Programs via TV-Menu	35
11.2 ... , Programs via station table	36
12. General Sound Settings	37
12.1 ... , for Progr. via TV Menu	42
12.2 ... , for Prog. via the Stat. Table	44
12.3 ... , Mute function	45
12.4 ... , HiFi-Amplifier, HiFi output	46
12.5 ... , Sound via speaker/hi-fi surround	47
12.6 ... , Overview	48
12.7 ... , connecting headphone	51
12.8 ... , Sound 1, Sound 2	51
13. Automatic zoom	52

Contents

14. Childlock	53	... , Unicable	95
15. Timer Control	55	... , LNB supply voltage	96
15.1 Setting the Time and Date	56	... , DiSEqC System	97
15.2 Recording Control	57	... , selecting Satellite	98
16. Special Functions,	59	20.5 ... DVB-S Search Settings	99
... , Picture-in-Picture	59	... , automatic station search	99
... , Normal/Speech	60	... , manual station search	100
... , JPEG Photograph Display	61	20.6 ... , Updating the Data	102
... , viewing time shift mode	64	20.7 DVB-Prog.-Info, Signal quality	103
... , Recording a progr. with a timer	66	20.8 DVB-C and DVB-S Portal stations	104
... , Direct Recording (OTR)	68	21. Station Logo	105
... , Picture format	69	22. Sorting Stations	106
... , Picture position	71	23. Initial Program Position	108
... , Audio language selections	72	24. Display Configuration	109
... , Select subtitle	73	25. DVB Radio Mode	110
... , display subtitle	74	26. Operation without the Remote Control	110
17. Programming the Function Keys ...	75	27. Scope of Operation	112
18. EPG (Electronic Program Guide) ...	76	28. Cleaning the TV Set	114
18.1 Activating the EPG	76	29. Connections to the Set	115
18.2 Collecting EPG Data	78	... on the Front	115
18.3 Using the EPG	80	... on the Rear	116
... , selecting a program,	81	30. Registering AV Devices	117
... viewing,	81	30.1 ... , Data Logic	119
... reminder	81	30.2 ... , Setting the signal types RGB	121
... , Program info (now showing..)	82	... , Setting the signal types DVI / HDMI	122
... , recording a program	83	... , Setting the signal types YUV	123
19. Setting the Country and Language ..	84	30.3 Connecting a Hifi Amplifier/AV Receiver	124
20. Setting Stations,	85	30.4 Removing AV Devices	126
... , reception mode	85	31. Copying between AV Devices	127
20.1 ... , TV-Standard	86	32. Inserting/Removing CA Modules	129
... , Analogue -TV	87	33. Connect PC	130
... , Colour standard	88	33.1 Connect PC, sound from TV-speaker	132
20.2 ... DVB-T, Antenna suply voltage ..	89	34. Glossary	133
... , automatic station search	90	35. Problem, Possible cause, Remedy ..	136
... , manual station search	91	36. Upgrade Kits	139
20.3 ... DVB-C, automatic station search ..	92	37. Technical Data	141
... , manual search	93	Battery disposal	145
20.4 Set-up satellite system,	94	Index	146
... , Antenna system	94		

1. Installation

- Take care that no bright artificial light or sunshine falls directly on the screen. This could cause reflections which have a negative effect on the brilliance of the picture.
- The best viewing distance is five times the screen diagonal, i.e.
 - Approx. 2 m (6.3 ft) for 26" screens
 - Approx. 2.4 m (7.6 ft) for 32" screens
 - Approx. 2.8 m (9 ft) for 37" screens
 - Approx. 3.2 m (10.3 ft) for 42" screens
 - Approx. 3.5 m (10.3 ft) for 47" screens
 - Approx. 4.2 m (10.3 ft) for 55" screens
- The antenna cable and any other components (such as a video recorder) connected between the antenna socket in the wall and the TV set must comply with the European standard EN 60966-2-4.
- The antenna cable used for connecting the TV set must have a screening attenuation of at least 75 dB.
- The use of non-approved cables will invalidate the operating permission for the TV set.
- Only use Metz bases as a stand for the LCD TV.
- Use the Metz wall bracket (item no. 604 99 0286.A3) or a suitable Omni-Mount wall bracket to hang the LCD TV on the wall.
- Smoking at the installation location of the LCD TV can lead to nicotine and soot deposits behind the panel glass and thus to an impairment of the image quality. Such deposits can only be removed by a specialist. In extreme cases the panel may be damaged permanently, which may require to replacing the panel. The cleaning and / or the replacement of the panel is not covered by warranty claims.

1.1 Proper use

This TV set is exclusively designed for the reception and replay of picture and sound signals.

The TV set is designed for dry rooms (living rooms and offices).

The room climate should be in a range from +5°C to +35°C with 75% air humidity.

The TV set must not be used in rooms with higher air humidity (e.g. bathroom, sauna, etc.).


The TV set must not be used in rooms with a high concentration of dust (e.g. a workshop).

If, as an exception, you operate the TV set outdoors, then please make sure that it is protected against moisture (rain, water spray, dew).

1.2 Connecting and switching on


Power connector

Connect the TV set to the wall socket with the supplied power cord.

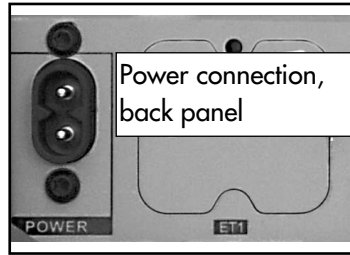



Antenna connector

Connect the TV set to the antenna socket with an antenna cable.

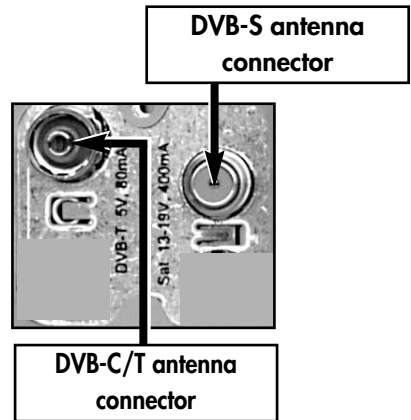

Switching on

Switch on the TV set with the main switch.

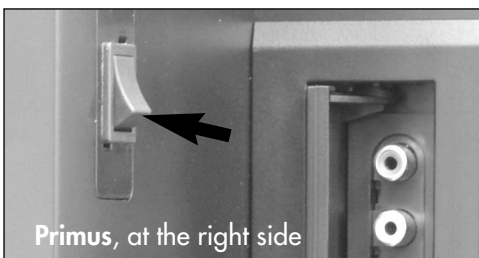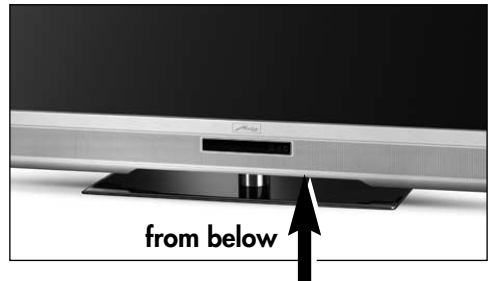


1.2 Connecting and switching on

The TV set is now in standby mode and the red standby indicator lights.


After about 25 seconds, the TV set switches to program position 1 or to the programmed initial program position (see page 108).

If you press no further keys on the remote control a window requesting that you do so is displayed after about 10 minutes. If you do not do this, the TV set switches back to the standby state.

Switching on from the Stand-by

Use the numeric keys to select any desired program position. Pressing the  or **TV** key selects program position 1 or, if it is programmed, the initial program position (see page 108).

Switching off

Press the  key to switch the TV set to standby mode. If you do not intend to use the TV set for a longer period switch it off with the main power switch.

2. Safety notes

- Always place the monitor on a solid, stable surface.
- If a cold TV set is moved to a warm room, always allow any condensation on the screen to evaporate before switching it on.
- The TV set is intended for use in a dry room. If, in exceptional circumstances, you use it outdoors, take care that it is protected against moisture (rain, splashed water, dew).
- Do not expose TV set to dripping or splashes (e.g. rain)!
- TV sets need adequate ventilation. Never cover the openings on the rear of the set with curtains, doilies, newspapers, etc. Also take care that the slits in the bottom of the case are freely accessible so that the intake of the cooling air is not hindered.
- If you place the TV set in a wall unit leave sufficient space on all sides for the circulation of cooling air.
- Do not place the TV set close to a radiator, since this would effect adequate cooling.

2. Safety notes

- Do not place burning candles or vessels containing liquids (vases, etc.) on top of the TV set, since any hot wax or water dripping into the set could cause serious damage to the electronic components and could also jeopardise the electrical safety of the set.
- Lightning can damage electrical equipment. A lightning flash entering the power cable or the aerial cable can damage the TV set even if it is switched off. You should therefore disconnect the power cable and aerial cable from their outlets or from the TV set in the case of a thunderstorm.
- The monitor may be opened and repaired only by a qualified person.

CAUTION! HIGH VOLTAGES CAN KILL !

If repairs should be necessary, consult your local dealer.

- Always switch off the TV set before cleaning it.
- Do not hold the remote control directly in front of your eyes and press a button. The remote control emits infrared radiation!
- Do not place rechargeable batteries in the battery compartment of the remote control. Use only two 1.5 V dry batteries of the type LR03/AM4/AAA (Micro).
- The TV set is intended only for the reception and reproduction of picture and sound signals.

- The TV set may be operated only from a mains voltage of 230-240V VAC, 50 Hz. Australia: 240 VAC.
- Do not damage the power cord or plugs. In the event of repair or maintenance the power cord must be able to be easily disconnected.
- Lay the power cord so that there are no objects resting on it and no-one can trip over it!
- Do not display still images, logos, 4:3 pictures with stripes etc. over an extended period. These still images can result in marks on the screen.
- Lay the power cable so that nothing stands on it and no-one can trip over it.
- Keep candles and open flames away from this product at all times to prevent fire spreading.
- Grime and dust deposits can accumulate behind the front panel glass of the LCD TV set without a visible source being present. These grime and dust deposits are also known as „fogging“ or „magic dust“. There are scattered instances of this phenomenon, but especially during the warm-up period and after renovation work or in new constructions. Various factors can cause the above mentioned phenomena, see also reports on the Internet. In such cases cleaning or replacement of the panel is excluded from the guarantee, since it does not involve a set defect, but rather an external influence.

3. The Remote Control



The **RM 16** is included with all TV sets delivered **without** digital recorders.



The **RM 17** remote control is included with all TV sets delivered **with** digital recorders.

3. The Remote Control

The remote control sends commands to the TV set by means of an infrared signal. You must point it towards the TV set when using it. Note that the remote control may interfere with the operation of other devices which use infrared signals (such as infrared headphones).

i Sunlight falling directly on the TV set may interfere with the operation of the remote control, since the TV set cannot detect the infrared signals from the remote control under these conditions. The TV set must be switched on with the main power switch before it can be controlled with the remote control.










Do not insert rechargeable batteries in the battery compartment of the remote control.

Use only two dry batteries of the type LR03/ AM4/AAA 1.5V.

The batteries that are used must not be exposed to excessive heat such as sunshine, fire or the like.







3.1 The Remote Control (RM 16)











-  ON at program position 1 or at the programmed start program position.
OFF, enter stand-by setting.
-  Call "Information".
Back to table of contents in "Information".
-  In TV mode: Start time shift
When set to Play: Still picture/Pause
Hold down when set to Play: Slow motion
-  Switch to TV -> Radio¹⁾ / Radio¹⁾ -> TV
-    Function keys

Press briefly: for factory programming

Hold down: display of the special functions selection


-  Select AV device
 -  Select picture settings
In TV menu: Adjust the settings for "picture and sound"
 -  Select sound settings
In TV menu: Adjust the settings "AV devices"
 -  Select program table,
In the TV menu: Adjust the settings "Program table" or station features
 -  Display date, time info on program
In the TV menu: Adjust the settings "Time settings"
In video text: Scroll by markers
When set to time shift: Display playback position
 -  In the TV menu: Adjust the settings "Configuration"
In video text: Set or delete marker
Mark TV program for recording in EPG
- V+** volume + / In the menu: Change value
+P Progr. + / In the menu: Change value
V- volume - / In the menu: Change value
-P Progr. - / In the menu: Change value

3.1 The Remote Control (RM 16)


-  Cursor control key
-  Confirmation key
In the menu: Save
-  Mute/sound stop
-  Back to last program
In the menu: Delete
-  Exit menu without saving any changes that have been made
-  Select video text
In video text: Scroll by markers
-  Select the electronic program guide
-  Select the TV menu.
In the menu: Return to main menu point





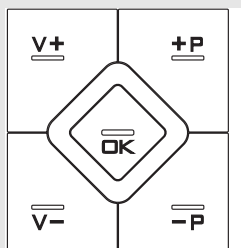



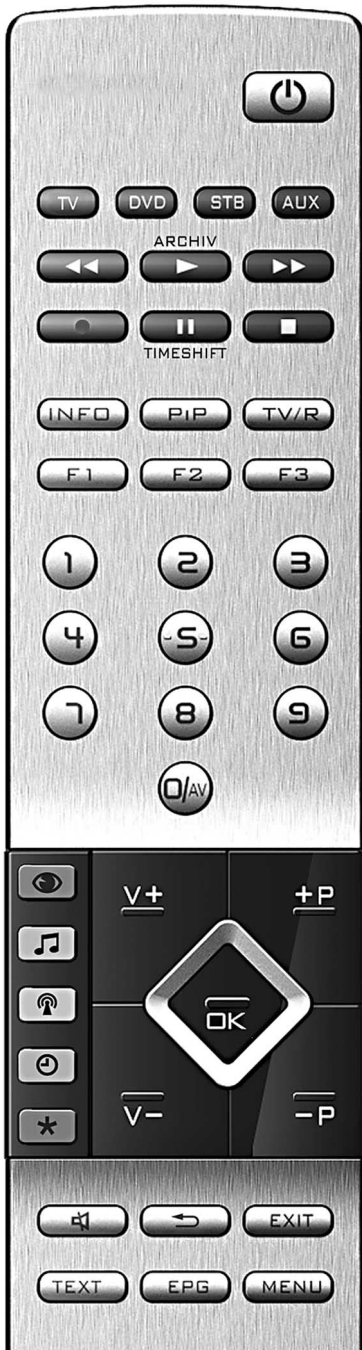






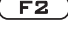



Note:

In the following sections of these operating instructions the term **+ - Key** is used. This refers to the value adjustment within the TV menu with **V+ / +P** or **V- / -P**.















3.2 The Remote Control (RM 17)










-  ON at program position 1 or at the programmed start program position.
OFF, shut down digital recorder & switch to stand-by setting.
-  Switch to Metz-TV
-  Switch to DVD
-  Switch to STB (Set Top Box)
-  Switch to AUX (audio devices)
-  When set to Play: Rewind
When set to time shift: Skip backwards 20 seconds
-  Open archive / in archive: Play
-  When set to Play: Fast forward
When set to time shift: Skip forwards one minute
-  Start direct recording / EPG direct recording
-  In TV mode: Start time shift / when set to Play: Still picture/Pause
When set to Play: hold down: Slow motion.
-  Stop (when set to Play: Return to archive / when set to time shift: Switch to "Live")
-  Select "Information" / In "Information" back to table of contents
-  Picture in picture on/off
-  Switch to TV -> Radio / Radio -> TV
PVR stop and back to TV picture
-    Function keys
- Press briefly:** for factory programming
- Hold down:** display of the special functions selection.
-  Select AV device
-  Select picture settings
In TV menu: Adjust the settings "picture and sound"
In "File Manager": Switch from USB stick to digital recorder

3.2 The Remote Control (RM 17)

-  Select sound settings
In TV menu: Adjust the settings "AV devices".
In "File Manager": Mark file / Remove marking.
-  Select program table in the TV menu:
Select "Program table" or station features.
In the PVR archive: Sort recordings according to complete, partial & unseen.
-  Display date, time info on program.
In the TV menu: Select "Time settings".
In video text: Scroll by markers.
When set to playback / time shift: Display playback position.
In the PVR archive: Show recording according to the category.
-  In the TV menu: Adjust the settings "Configuration".
In video text: Set or delete marker.
In the PVR archive: Sort the recordings from A-Z.
In EPG : Mark TV program for recording.
- V+** volume + / In the menu: Change value.
- +P** Progr. + / In the menu: Change value.
- V-** volume - / In the menu: Change value.
- P** Progr. - / In the menu: Change value.
-  Cursor control key.
-  Confirmation key / In the menu: Save.
-  Mute / sound stop.
-  Back to last program.
Back to last program.
-  Exit menu without saving any changes that have been made to save.
-  Select video text.
In video text: Scroll by marks.
-  Select the electronic program guide.
-  Select the TV menu.
In the menu: Return to main menu point.



Opening the menu

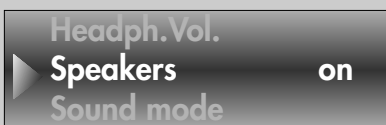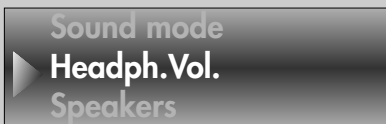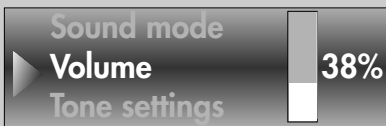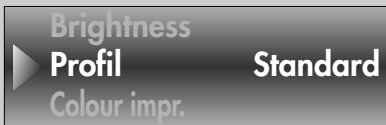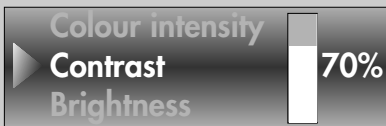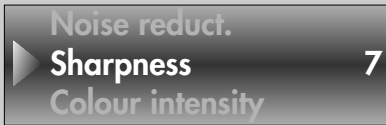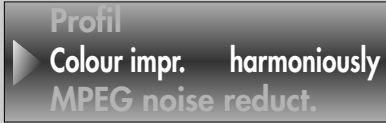

4. Daily Operation

Changing picture settings

The picture settings can be accessed with the blue button . The settings box with the individual functions (see picture) appears on the bottom left of the screen.

Select the desired function with the cursor key and adjust it with the **V-** / **V+** key.

The individual picture characteristics can also be saved as default values for all programs. See Chapter 11 for this.

Volume settings

Use the **V-** / **V+** key to change the volume.

Changing the sound settings

The sound settings can be accessed with the yellow button . The settings box with the individual functions (see picture) appears on the bottom left of the screen.

Select the desired function with the cursor key and adjust it with the **V-** / **V+** key.

The individual sound characteristics can also be saved as default values for all programs. See Chapter 12 for this.

The settings that are made here are only temporary and are not saved. If the TV set is switched to stand-by mode or switched off, all settings will be reset to the preset default values.

5. Station Selection

Station selection and management of program positions

The TV set can store the settings for up to 2000 TV stations and 2000 radio stations in so-called program positions. You can select any of these program positions with the numeric keys, with the oval rocker key "P+/P-" or from the station table.



If you use the numeric keys for station selection, the first digit you enter is normally the "thousands" digit. If less than






1000 program positions are occupied, it automatically becomes the "hundreds" digit.


If less than ten program positions are occupied, the first digit you enter automatically becomes the "units" digit.

After pressing any numeric key, you have three seconds to press further numeric keys

5. Station Selection via program table

The program table can be called up with the white key  2 x  in the TV or radio mode.

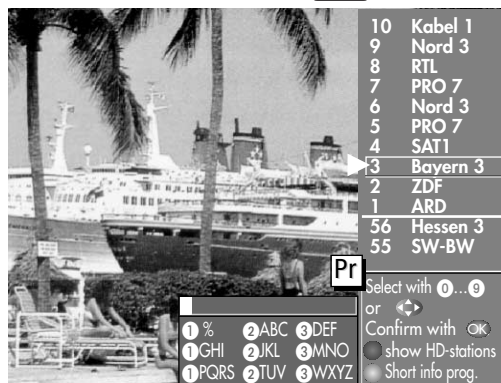

- Programs can be selected with the cursor key or numeric keys in the table displayed. It is possible to skip to the next or last 15 programs with the cursor control key. You can display the program selected with the key .
- A key pad is displayed as a result of repeated pressing of the white key . The station table can be ordered alphanumerically with the corresponding key.
- All HD stations saved in the station table are displayed by pressing the blue key . By renewed pressing of the blue key  all stations are once again displayed in the station table.
- By selection with the cursor control key of another station and pressing the green key , you can see the short information of the station on the program and the start and end times (**only DVB stations, not analogue stations**).
- By using the joker character % you can look for text characters inside the station name. For example, enter "%FER" and all station names in which the character string "FER" occurs, e.g. "hr-fernsehen", "SWR Fernsehen".






10	Kabel 1
9	Nord 3
8	RTL
7	PRO 7
6	Nord 3
5	PRO 7
4	SAT1
3	Bayern 3
2	ZDF
1	ARD
56	Hessen 3
55	SW-BW


Pr


1	%	2	ABC	3	DEF
4	GHI	5	JKL	6	MNO
7	PQRS	8	TUV	9	WXYZ

Select with ...

or  

Confirm with 

 show HD-stations

 Short info prog.

Opening the Info

6. User Help (Information)

INFO

During the design of this TV set, we have made every effort to make it as easy as possible for you to use it and we hope that you will enjoy familiarising yourself with your new TV set.

With the "Information" menu, the TV set is able to answer the many questions which may come up during installation and setup.

To display this menu, simply press the **INFO** key for the table of contents.

The "Information" menu (user help)

Information Contents

Index

Station selection

Picture settings

Sound settings

AV playback

Recording facilities:

- Timer recording

- Direct recording

- AV copying


Teletext

Function keys

DVB radio mode

Electronic Program Guide (EPG)

Select the underlined text with the cursor..

 : further information **INFO** : table of contents

Visited pages:  back  forward

In the table of contents or the index, you can select the item of interest with the cursor control key.

Use the cursor-right key **▶** to scroll forwards through the contents or index ...

Use the cursor-left key **◀** to scroll backwards through the contents or index ...


Use the cursor-up key **▲** to select the last underlined item ...

Use the cursor-down key **▼** to select the menu lines...

... and then press the **OK** key to display the explanation of the selected item.

You can select any underlined word in the table of contents, the index or the explanation of a selected item with the cursor. Pressing the **OK** key then displays the explanation for this word.

You can also scroll forwards and backwards through previously displayed pages with the aid of the red ***** and green **⌂** keys.

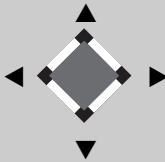

7. Menu Control

Opening the menu

With the "TV menu", we provide you with an assistant to help you find your way through the many possible settings of the TV set.

Don't be afraid to change any settings in the various menus. No changes will be saved unless you press the **OK** key to confirm them. If you are not sure whether you want to keep a changed setting, you can exit from the menu at any time, without saving any changes, by pressing the **EXIT** key.

Within the TV menu, you can return to the previous main menu item at any time by pressing the **MENU** key. If you are not sure what a menu item does, press the **INFO** key for more information.


In order to return to the menu, press the **INFO** key twice.

You can open each of the five main sections of the menu with the key of the corresponding colour. The "card file" which is then displayed is subdivided into Subjects (on the left) and Sections (on the right), and you can select these by moving the red, triangular cursor with the oval cursor control key or with the numeric keys.

When you press the **OK** key, the current setting for the selected item is shown in the "Setting window" below the card file and can be adjusted with the **V-** / **V+** key.

You can save the new setting by pressing the **OK** key, which also returns you to the list of sections. If you do not want to save the new setting, press the **MENU** key to return to the corresponding main menu item or press the **EXIT** key to close the menu.

You can delete any incorrect inputs with the **↵** key.

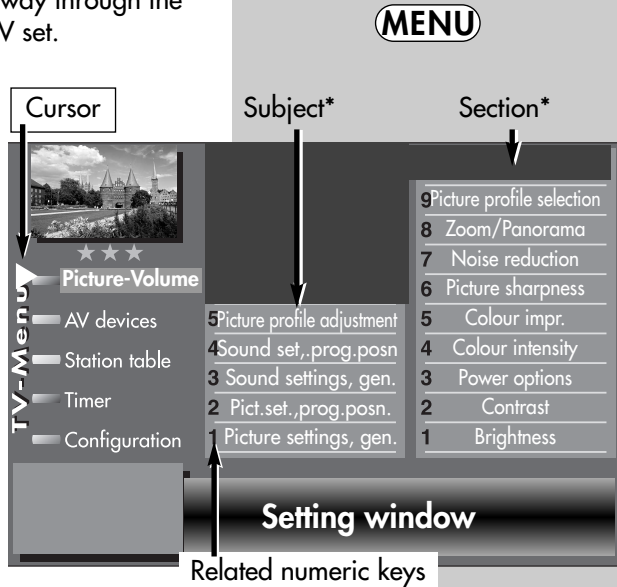

MENU

Cursor

Subject*

Section*



Picture-Volume

- AV devices
- Station table
- Timer
- Configuration

- 5 Picture profile adjustment
- 4 Sound set., prog. posn
- 3 Sound settings, gen.
- 2 Pict. set., prog. posn.
- 1 Picture settings, gen.

- 9 Picture profile selection
- 8 Zoom/Panorama
- 7 Noise reduction
- 6 Picture sharpness
- 5 Colour impr.
- 4 Colour intensity
- 3 Power options
- 2 Contrast
- 1 Brightness

Setting window

Related numeric keys



EXIT

* The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

Opening the menu

TEXT




8. Teletext

i Teletext is an additional service provided free of charge by many TV stations. It is an “electronic magazine” through which you can browse in various ways.

Opening Teletext:

- Press the “TEXT” key. If the selected station offers “TOP-Text”, a “card file” is displayed (see the picture on the left). If “TOP-Text” is not available, Teletext page 100 is displayed (see the picture below).
- In the TOP-Text card file, you can select the desired cards with the cursor control key or with the numeric keys.
- Press the **OK** key to open the selected card.

Controlling Teletext with pages displayed:

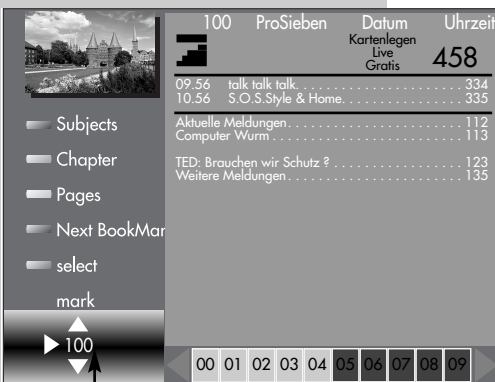

Blue key – next subject.

Yellow key – next section.

White key – next page.

After pressing the coloured pre-selection key, you can step through the subjects, sections or pages with the cursor control key or with the numeric keys.

If you wish to select a specific page, enter its page number on the numeric keys.

If sub-pages exist for the selected page, the page numbers are displayed in black. In the example shown here, there are five sub-pages.

You can step through these sub-pages with the cursor control key.

8. Teletext

Double font size

You can double the size of the font used for Teletext pages with the **F1** key. Pressing this key once displays an enlarged picture of the upper third of the page. Pressing it a second and third time displays the centre and lower thirds of the page. Pressing a fourth time displays the entire page again.

Riddle key (display hidden text)

Function key **F2** is programmed in the factory to display hidden text, such as the answers to riddles.

Back to the last index page

You can return directly to the last index page you have displayed by pressing the numeric key **0**.

Stop page scrolling

The **II** key or the "OK" key can be used to stop the automatic scrolling executed by some pages, and to enable this again.

Page selection with the cursor

Press the **OK** key to stop page scrolling. The cursor **▶** is now positioned at the top left corner of the page and you can use the cursor control key **◀ ▶ ▲ ▼** to position it anywhere on the displayed page. This function is useful on index pages (such as pages 100, 200, etc.) in order to select a page you want to see. After positioning the cursor on the desired page number, press the **OK** key to display its contents.

Setting marks in Teletext⁶⁾

As a user of Teletext, you will probably want to visit certain pages (such as stock-market news, news pages or the weather forecast) regularly.

In order to find these pages quickly, you can set marks to suit your personal requirements.

To do this, open a page for which you want to set a mark.

- Press the red ***** key for "Set" to place a mark on this page. The number of the mark you have just set is displayed above the window containing the number of the Teletext page. In the case of multiple pages, the mark is always set and displayed for the currently displayed sub-page.

 **Up to 10 marks can be set for each program position.**

Scrolling through marked Teletext pages⁶⁾

With the Teletext window open, you can step sequentially through the marked pages with the green **⏪** key.

An even easier method is by pressing the **TEXT** key while the TV program is displayed. Each time you press this key, the next marked page is displayed. After the last marked page, the TV picture is displayed again.

6) Not possible with an external receiver !

8. Teletext

Displaying all Teletext marks ⁶⁾

If you have set marks for a program position, you can display an overview of these marks by pressing the **F3** key. The displayed list shows where the marks are set. Press **F3** again to hide the list.

You can select the individual marks in the list with the numeric keys.

Clearing Teletext marks ⁶⁾

Open the Teletext page whose mark is to be deleted and press the red ***** key "Delete" to delete the mark.

Subtitles in Teletext

Your TV set is capable of displaying subtitles. When a program for which subtitles exist starts, the TV station displays a box showing the Teletext page on which these can be found.

- Press the **TEXT** key to open Teletext.
- If this is a "TOP-Text" station, the card file is displayed. Press the **OK** key and open any available page.
- Use the numeric keys to enter the number of the page containing the subtitles.

Split-Screen

In Teletext mode, the TV-Programm window in the upper left corner can be enlarged to half of your screen by pressing the "TV" button.

If you press "TV" button again, it will be used to the original size.

6) Not possible with an external receiver !

9. Selecting operating mode

You can switch the TV set between its various operating modes with the keys **TV/R** and **0/AV**. You can also switch from standby mode to the desired operating mode with these keys.

TV/R = TV mode /DVB Radio mode ¹⁾

0/AV = TV mode with input from AV devices (e.g. video tape recorder, DVD player, etc.)

TV/R

0/AV

1) Possible only in DVB mode

6) Not possible with a set top box

10. AV Playback

Opening the menu

AV playback

(devices with switching voltage)

- ☞ **Before they can be used, AV devices must be registered and assigned to the appropriate input sockets in the menu "AV devices".**

Playing back a recording from a video cassette, DVD, etc. on a connected AV device is called AV playback.


In order to see the picture, you must program your TV set to execute an automatic program change at the EURO socket to which the AV device is connected.

Programming a program change

- ☞ **This menu item is not available in a 2** menu (see Section 27, Scope of Operation).**
- ☞ **The automatic program change is set in the factory to "ON" for all EURO sockets.**

- Press the **MENU** key.
The TV menu appears on the screen.
- Press the red key *****. The menu "Configuration" is displayed.
- Use the corresponding numeric key (in this example: **8**) to select the menu item "EURO sockets".
- Use the cursor control key to select "EURO 1" or "EURO 2²⁾".
- Press the **OK** key and then, in the setting window, use the **V-/V+** key to select "Program change on".
- Press the **OK** key to save the new setting.
- Press the **EXIT** key to close the TV menu.

MENU

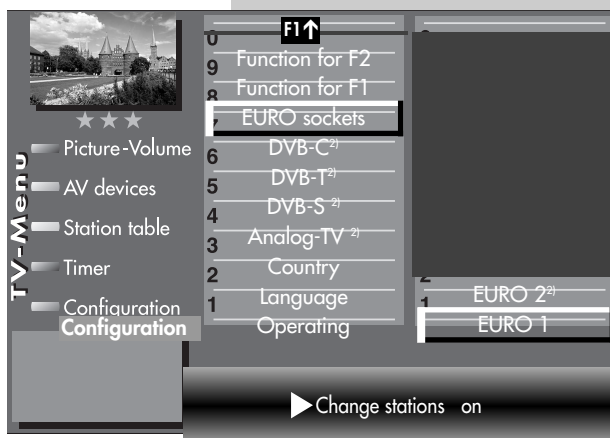

EXIT

The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

2) Possible only on sets equipped with this function.



If you now start to play back a recording on the connected AV device, the TV set changes automatically from any other program position to the playback mode.

AV playback

(devices without switching voltage)



Before they can be used, AV devices must be registered and assigned to the appropriate input sockets in the menu 30. "AV devices".

- Press key briefly - the function programmed for AV devices (see Chapter 17 "Programming function buttons") is executed. Press button or approx. 3 seconds - the max. possible selection is displayed.

- Use the corresponding numeric key to select the AV device you want to use.
- The TV set now changes from the current program to the selected playback device.
- Start the replay function on the AV device. This AV selection remains active until you switch to any other program position.
- After watching the film from the AV device, press the key to return to normal TV mode.

If the same AV device is to be selected quite often, then the AV button can also be programmed for that AV device. See Chapter 17. "Programming Function Buttons".

10.1 AV Playback VCR function


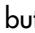



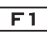
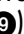
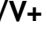


Opening the menu

 **The menu item "VCR" is not available in a 2 ** menu (see Chap. 27) .**

Picture quality when playing back from tape devices

The VCR function ensures an optimum picture quality when playing back recordings from tape devices such as video cassette recorders or camcorders.

Setting the VCR function

- Press key  briefly - the function programmed for **AV devices** (see Chapter 17 "Programming function buttons") is executed. Press button  for approx. 3 seconds - the max. possible selection is displayed.
- Select the AV device that is to provide the picture with the numeric keys.
- Press the  key to open the TV menu.
- Press the blue key . The menu "Picture and sound" and the menu item "General picture settings" are pre-selected.
- Use the corresponding numeric key (in the example: ) to select the menu item "Pict.set.tings for Pr."
- Press the  key to display the entire selection.
- Use the corresponding numeric key (in the example: ) to select the menu item "VCR".
- Use the  key to select "Opt.1". If this setting does not produce a satisfactory result, you can try using "Opt.2".
- Press the  key to save the new setting.
- Press the  key to close the TV menu.












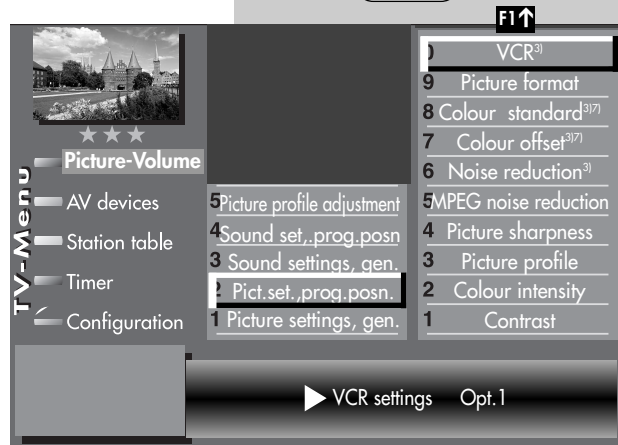







The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

3) See glossary for an explanation.

7) Available only for analogue stations!

Opening the menu

10.2 AV Playback

MPEG noise reduction



MENU




2

In AV mode, when playing back digitally encoded films, system-related digital picture faults that can be seen as a rectangular pattern (formation of tiny blocks) in moving areas can be reduced with the help of MPEG noise reduction.

The rectangular pattern (formation of tiny blocks) can be corrected in the "MPEG Noise Reduction" menu option.

Set MPEG noise reduction:

- Select the AV level by pressing the **AV** button and using the numeric buttons to select the AV device that is to provide the picture..
- Select the TV menu with the **MENU** button.
- Press the blue key . The menu "Picture and sound" and the menu item "Picture settings, gen." is pre-selected.
- Use the corresponding numeric button (in the example **2**) to select the menu item "Pict. set., prog.posn."

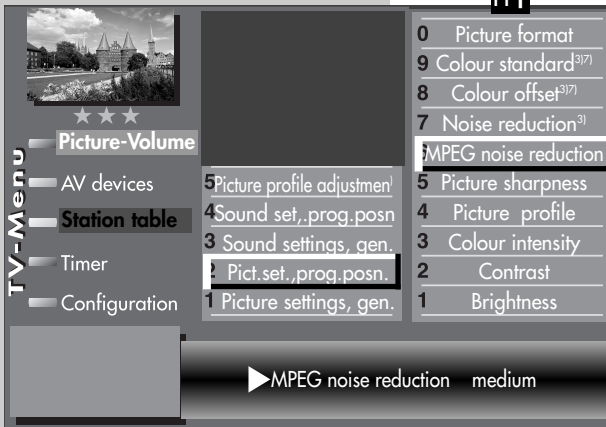

6



EXIT

- Use the corresponding numeric button (in the example: **6**) to select the menu item "MPEG noise reduction".
- Set the "MPEG noise reduction" with the **V-/V+** button.
- Save the setting by pressing the **OK** button.
- Clear the TV menu with the **EXIT** button.

3) See glossary for an explanation.
7) Available only for analogue stations!


10.3 AV Playback


Picture profile


Opening the menu

The picture profiles (see p. 31) can be assigned for individual AV programs.

Assigning a picture profile

- Press key **0/AV**.
- Select the AV device that is to provide the picture signal with the numeric keys.
- Press key **(MENU)**.
The TV menu is displayed.
- Press the blue key **()**. The menu "Picture and sound" and the menu item "General picture settings" are pre-selected.
- Use the corresponding numeric button (in the example **2**) to select the menu item "Brightness".
- Use the corresponding numeric button (in the example **4**) to select the menu item "Picture profile".
- Use the **V-/V+** key to change the settings for "Picture profile selection".
- Save the changed setting with the key **OK**.
- Close "TV menu" with the key **(EXIT)**.


 **The picture profile can also be temporarily changed during a program without the change being saved. See Chapter 4 for this.**

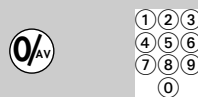 

(MENU)



2

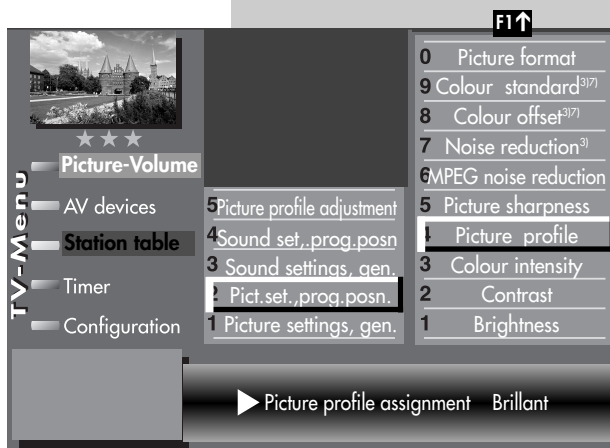

4



(EXIT)

3) See glossary for an explanation.
7) Available only for analogue stations!

Opening the menu



MENU




2

10.4 AV Playback Picture Format

*Some of the following menu items are not available on a 2 ** menu.*

Setting the picture format:

- Select the AV program position which delivers the picture by pressing the **AV** key and then pressing the numeric key corresponding to the device you want to use.
- Press the **MENU** key. The TV menu appears on the screen.

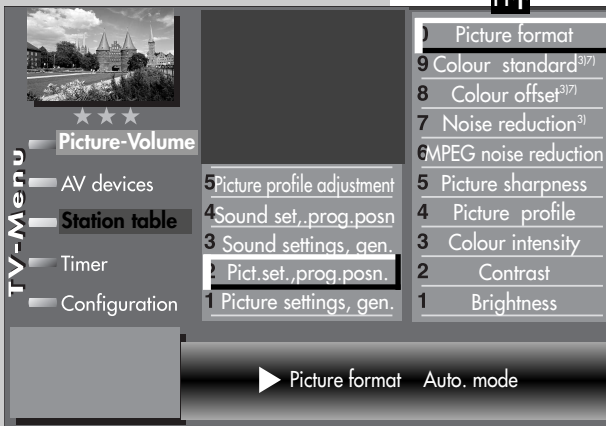

- Press the blue key to open the menu "Picture and sound". The menu item "General picture settings" is preselected.
- Press **numeric key 2** to select the menu item "Pict. settings for Pr."
- Use the corresponding numeric key (in the example: **9**) to select the function "Picture format".
- Use the **V-/V+** key to set the picture format setting to "Automatic".

0



EXIT

- Press the **OK** key to save the new setting.
- Press the **EXIT** key to close the TV menu.

The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

3) See glossary for an explanation.

7) Available only for analogue stations!

10.5 AV Playback Noise reduction


Opening the menu


 **Some of the menu items are not available in a 2 ** menu.**

 There may be a “noisy” picture, among other things, when playing back from AV devices.

Noise reduction can be enabled to compensate for a “noisy” picture.

Setting the noise reduction:


- Select the program position whose picture settings you wish to change.
- Press the **MENU** key.
- Press the blue key . The menu “Picture and sound” and the menu item “Picture settings, gen.” is pre-selected.
- Use the corresponding numeric button (in the example **2**) to select the menu item “Brightness”.
- Use the corresponding numeric buttons (in this example it is **7** for noise reduction), to select the individual menu items.
- In the setting window, change the setting with the **V-/V+** button.
- Press the **OK** button to save the new settings.
- Clear the “TV menu” with the **EXIT** button.

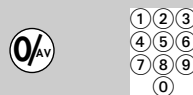

MENU



2

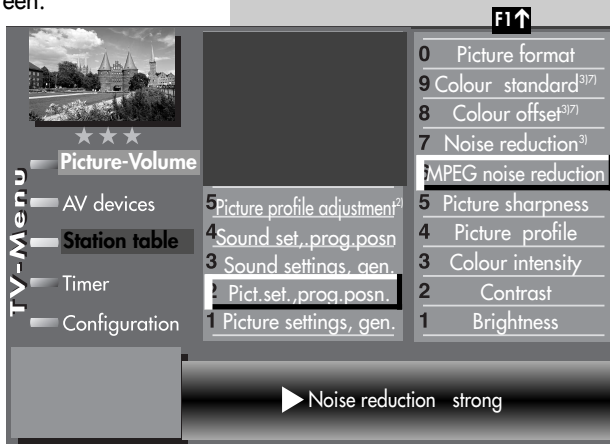

7



EXIT

3) See glossary for an explanation.

7) Available only for analogue stations

Opening the menu

11. General Picture Settings

MENU




Some of the menu items are not available in a 2 ** menu.

The picture settings brightness, contrast, colour intensity, sharpness and noise reduction can be set generally for all program positions and saved as **standard values** which can be recalled at any time by pressing the key.

Opening the picture settings menu:

This example describes how the brightness is adjusted. The other picture settings can be adjusted in a similar manner.

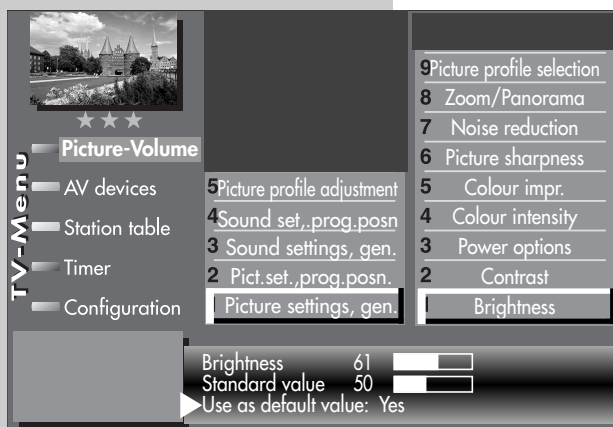

- Press the key. The TV menu appears on the screen.
- Press the blue key . The menu "Picture and sound" and the menu item "General picture settings" are pre-selected.
- Use the cursor control key to select the menu item "Brightness".
- Press button.
- In the setting window, use the key to change the setting.



EXIT

- Use the cursor control key to select the third line "Save as standard values".
- If you wish to save the new setting, use the key to select "Yes".
- Press the key to save the changed setting as a standard value.
- Press the key to close the TV menu.

If the standard values do not provide a satisfactory picture in some program positions, you can make settings for these positions which differ from the standard values. See the next sections. 11.1 and 11.2.

The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

11. General Picture Settings

Select power options

Opening the menu

Three different power options can be set in the "Power options" menu option.

Eco Mode

The "Eco Mode" setting is a good compromise between energy consumption and picture quality. In addition, the TV set switches to stand-by mode if no buttons are pressed for 4 hours. "Eco Mode" is the preferred setting for normal home operation.




Presentation

The "Presentation" setting is optimised for presentation rooms; it involves higher energy consumption, however. Automatic change-over to stand-by mode is not enabled.

Picture quality

In this mode, all controls can be used for picture maximisation in order to meet the needs of all individual conditions.


Setting the power options:

- Automatically after the initial start-up after pressing the red button . See "Important information", or
- Press the **MENU** key. The TV menu appears on the screen
- Press the blue key . The menu "Picture and sound" and the menu item "General picture settings" are pre-selected.
- Use the cursor control key  to select the menu item "power options" and press the **OK** button

MENU



3

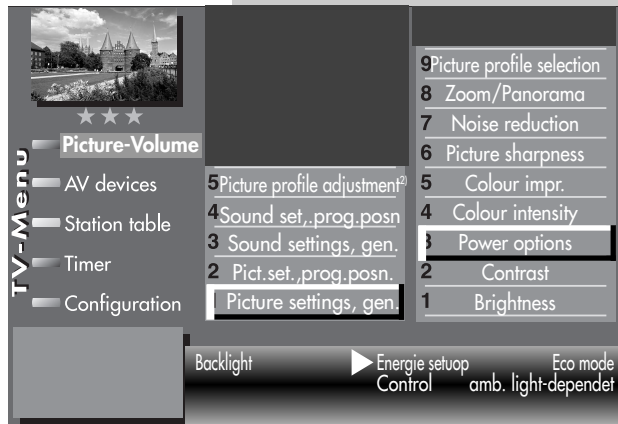

The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

Opening the menu



11. General Picture Settings

Select power options

- Use the **V-/V+** key to select the “Eco Mode”, “Presentation”, or “Picture Quality” setting.
- Save the set power option by pressing the **OK** button.

For the “Presentation” or “Picture Quality” settings,

the types of control described under a) to e) can be set as well.

a) Off: the backlighting is set to maximum. (highest level of power consumption).

b) ambient light-dependent: The backlighting is governed by the room light and always provides the same picture appearance regardless of changes in room lighting.

c) Picture content-dependent⁹⁾: The backlighting is governed by the picture content. In the case of dark picture content, the brightness of the backlighting is reduced to increase contrast.

d) Manual: The backlighting is set to a fixed value in the menu.


e) Automatic⁹⁾: Combination of b) room light dependent and c) picture content dependent

The level control indicates the level of backlighting brightness currently in operation.

The backlighting (lamps that light up the screen) is adjusted automatically depending on the power option selected.

The brightness of the lamps has an influence on the device’s power consumption.

- Press the **(EXIT)** key to close the TV menu.

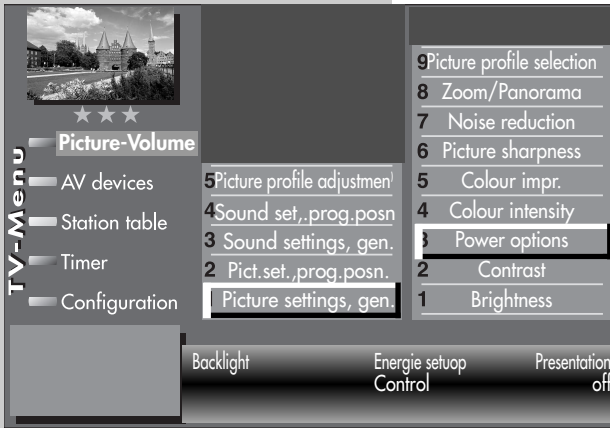

EXIT

The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

11. General Picture Settings configure picture profile²⁾



Opening the menu

Picture profiles are a combination of very special picture parameters that make it possible to always create the best picture reproduction quality for different types of programs or for replaying from different video sources.

The "Standard" picture profile is a good compromise for all types of transmission, and is set at the factory. However, in order to obtain the maximum picture reproduction quality, it is useful to assign the appropriate picture profile to a specific application.

If you are technically inclined, you also have the possibility of adjusting each individual picture profile yourself, as well as to create a separate additional picture profile according to your individual taste.


Picture profile²⁾ settings:

- Press the **(MENU)** key.
The TV menu appears on the screen.
- Press the blue key . The menu "Picture and sound" and the menu item "Picture settings, gen." are pre-selected.
- Press the numeric key **5** to select the "Picture profile settings" menu option.
- Use the assigned numeric key to access the picture profile that is to be changed.
- Use the cursor control key  to access the menu option that is to be changed.
- Change the setting with the **V-/V+** key.
- Press the **OK** button to save the new settings.
- Press the **(EXIT)** key to close the TV menu.

(MENU)



5

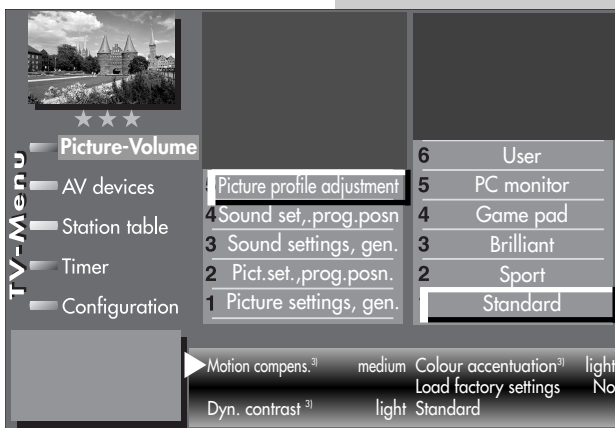

(EXIT)

3) See glossary for an explanation.

Opening the menu


MENU





11. General Picture Settings selected picture profile²⁾

The picture profiles that were set up earlier can now be generally assigned to all or only individual program positions.

Selected Profile Standard²⁾:

- Press the **MENU** key.
The TV menu appears on the screen
- Press the blue key . The menu "Picture and sound" and the menu item "Picture settings, gen." are pre-selected.

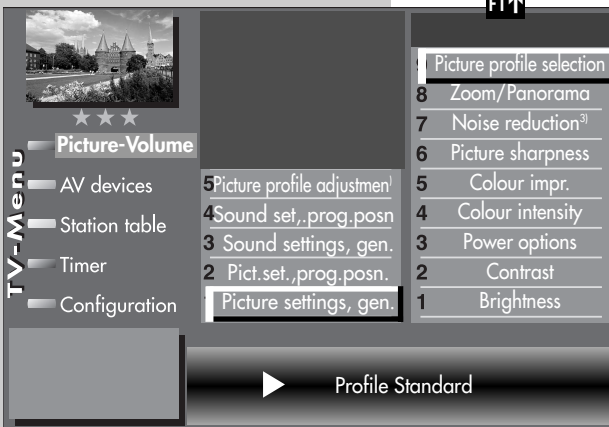

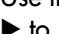
- Use the cursor control key  to select the "Brightness" menu option.
- Use the assigned numeric key **9** to select "Picture profile selection".
- Use the **V-/V+** key to change the settings for "Picture profile selection".
- Press the **OK** button to save the new settings.
- Clear the "TV menu" with the **EXIT** button.

9



EXIT

 *The picture profile can also be temporarily changed during a program without the change being saved. See Chapter 4 for this.*


The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

3) See glossary for an explanation.

11. General Picture Settings

Adjust border colour



Opening the menu


 **Some of the menu items are not available in a 2 ** menu.**

Displays that do not fill the screen produce black border. These border can be changed to a grey tone to avoid "image sticking"⁽³⁾.


Displaying the picture in 4:3 format, for example, produces these black borders at the left and right.

Adjust border colour:

- Press the **(MENU)** key.
The TV menu appears on the screen.
- Press the blue key . The menu "Picture and sound" and the menu item "General picture settings" are pre-selected.
- Use the cursor control key  to select the menu item "Brightness".
- Use the corresponding numeric keys (in this example: **8** for Zoom/Panorama) to select the desired menu items.
- Use the cursor control key to select the desired menu items.
- Use the **V-/V+** key to change the settings for "Border colour".
- Press the **OK** key to save the new settings.
The picture shows the factory settings.
- Press the **(EXIT)** key to close the TV menu.

 **The setting is only possible if the function "Panorama" is set to "No".**

(MENU)

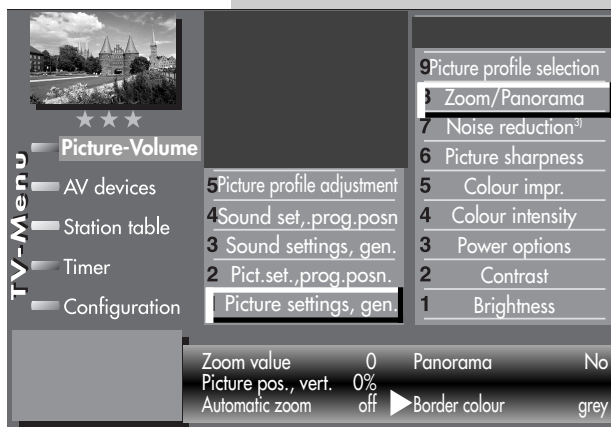

8




(EXIT)

The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

3) See glossary for an explanation.

Opening the menu

MENU

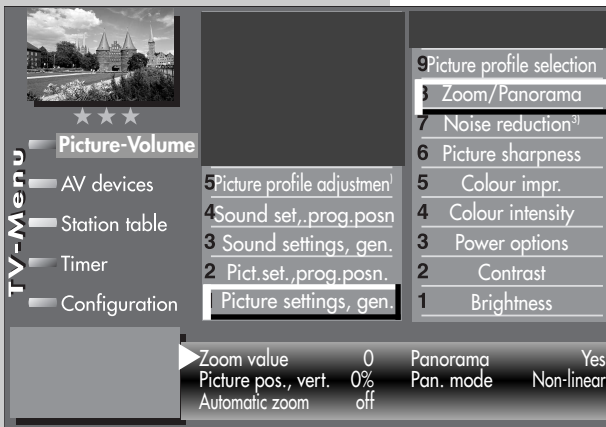

8



EXIT

11. General Picture Settings Setting Zoom/Panorama

*Some of the menu items are not available in a 2 ** menu.*

The picture settings zoom, vertical position, automatic zoom and panorama can be set and saved as general settings for all program positions.

Setting the zoom/panorama mode:

- Press the **MENU** key.
The TV menu appears on the screen.
 - Press the blue key . The menu "Picture and sound" and the menu item "General picture settings" are pre-selected.
 - Use the cursor control key to select the menu item "Brightness".
 - Press the corresponding numeric key to select **8** "Zoom/Panorama".
 - Use the cursor control key to select the desired menu items.
 - Use the **V-/V+** key to change the settings for "Zoom/Panorama".
 - Press the **OK** key to save the new settings.
The picture shows the factory settings.
 - Press the **EXIT** key to close the TV menu.
- The functions "Panorama" and "Zoom" can be combined with each other.*

The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

3) See glossary for an explanation.


11.1 Picture Settings for Programs via TV Menu

Opening the menu

 **Picture settings for individual program positions are not available in a 2 ** menu.**

If the standard values do not provide a satisfactory picture in some program positions, you can make different settings for these positions which override almost all of the general picture settings. These individual settings apply only to the program position for which they are made, and they cannot be overwritten with the standard values. In addition to the general picture settings, the individual settings also include the settings colour offset, colour standard and VCR.


Individual picture settings for a program position:

- Select the program position whose picture settings you wish to change.
- Press the **MENU** key.
The TV menu appears on the screen.
- Press the blue key . The menu "Picture and sound" and the menu item "General picture settings" are pre-selected.
- Use the corresponding numeric keys (in this example: **2** for noise reduction) "Pic. settings for Pr.".
- Use the corresponding numeric keys (in this example: **5** for noise reduction) to select the desired menu items.
- In the setting window, use the **V-/V+** key to change the setting.
- Press the **OK** key to save the new setting.
- Press the **EXIT** key to close the TV menu.

MENU



2

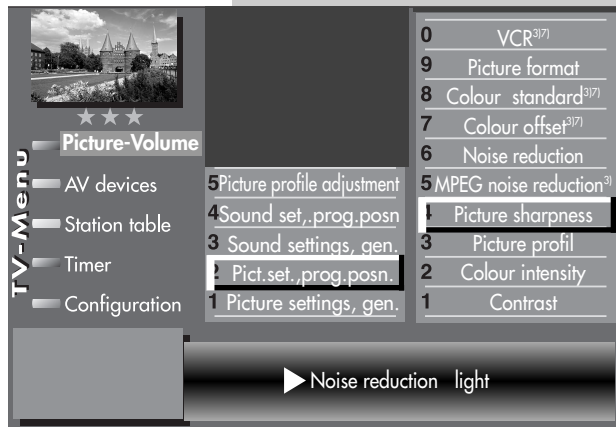

5



EXIT

3) See glossary for an explanation.
7) Available only for analogue stations

Opening the menu

MENU




F2



11.2 Picture Settings for Program via Station Table

Individual picture settings for a program position:

- Select the program position whose picture settings you wish to change.
- Press the **MENU** key.
- Press the white key . The station table is displayed with the currently active program position highlighted.

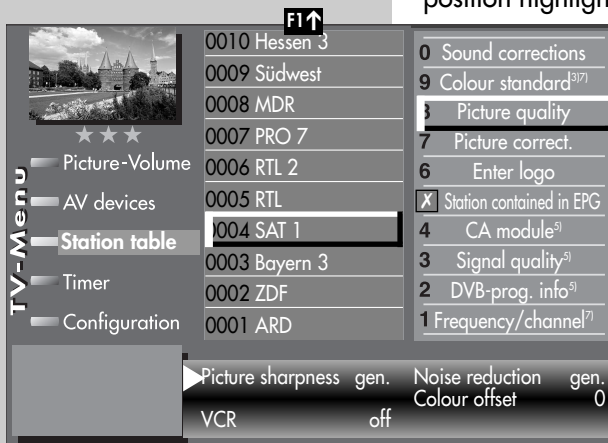

EXIT

- Press the **F2** key to enable editing of the station table.
- Press the cursor control key to move to the subject side.
- Use the corresponding numeric keys (in this example: **8** for the picture quality) to select the desired menu items.
- In the setting window, use the cursor control key to select the desired function.

- Use the **V-/V+** key to change the setting. "gen." means here that the new setting will overwrite the related general picture setting (see page 28).

The individual settings made here which differ from the general settings remain saved.

- Press the **OK** key to save the new settings.
- Press the **EXIT** key to close the TV menu.

The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.


5) Available only for DVB stations!

7) Available only for analogue stations










12. General Sound Settings


Opening the menu

 **Some of the menu items are not available in a 2 ** menu.**

The sound settings (volume) stereo wide and spatial sound can be set generally for all program positions and saved as standard values which can be recalled at any time by pressing the  key.

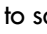Opening the sound settings menu:


- Press the  key.
The TV menu appears on the screen.
- Press the blue key . The menu "Picture and sound" and the menu item "General picture settings" are pre-selected.
- Use the corresponding numeric key (in the example: ) to select "General sound settings".
- Use the corresponding numeric keys to select the desired menu items in the right-hand column.
- Press the  key to open the selected menu item for editing.
- In the setting window, use the  key to change the setting.
- Use the cursor control key  to select the third line "Save as standard value".
- If you wish to save the new setting, use the  key to select "Yes".
- Press the  key to save the new settings as standard values.
- Press the  key to close the TV menu.

 **If the standard values do not provide satisfactory results for some program positions, you can make different individual settings for these positions. See sections 12.1.**







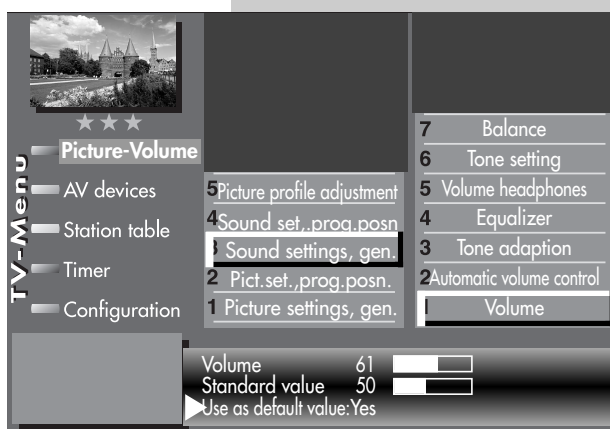




3) See glossary for an explanation.

Opening the menu

MENU



3

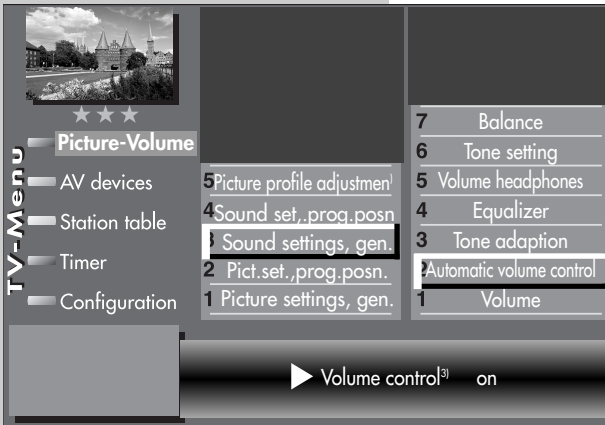

2



EXIT

The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

3) See glossary for an explanation.

12. General Sound Settings

Automatic volume correction

Some TV stations transmit their commercials at a higher sound volume than that for the normal program. In order to save you from adjusting the volume each time with the remote control, you can activate automatic volume correction.

With this function active, there is little difference in the volume levels for the normal program and the commercials.

The setting made here applies to all program positions.

Opening the volume correction menu:

- Press the **MENU** key. The TV menu appears on the screen.
- Press the blue key . The menu "Picture and sound" and the menu item "General picture settings" are pre-selected.

- Use the corresponding numeric key (in the example: **3**) to select "General sound settings".
- Use the corresponding numeric key (in the example: **2**) to select "Volume correction".
- In the setting window, use the **V-/V+** key to change the setting.
- Press the **OK** key to save the new setting.
- Press the **EXIT** key to close the TV menu.

The function "Volume correction" in the menu "General sound settings" does not overwrite the function "Volume correction" in the menu "Sound settings for Pr..."

12. General Sound Settings

Opening the menu

 *Some of the menu items are not available in a 2 ** menu.*

Sound adjustment


The sound playback can be changed with this menu item. The following sound adjustment can be set:


Normal: sound playback in normal mode.

mecaSound: virtual output increase and improved spatial playback..

mecaSurround: virtual surround sound.

Select sound adjustment

- Press the **(MENU)** key.
The TV menu appears on the screen.
- Press the blue key . The menu "Picture and sound" and the menu item "General picture settings" are pre-selected.
- Use the corresponding numeric key (in the example: **3**) to select "General sound settings".
- Use the corresponding numeric key (in the example: **3**) to select "Tone adaption".
- In the setting window, use the **V- / V+** key to change the setting.
- Press the **OK** key to save the new setting.
- Press the **(EXIT)** key to close the TV menu.

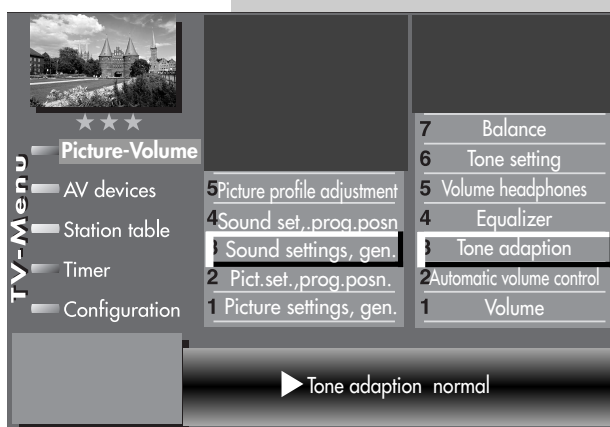

(MENU)



3

3



(EXIT)


3) See glossary for an explanation.

Opening the menu

MENU



3

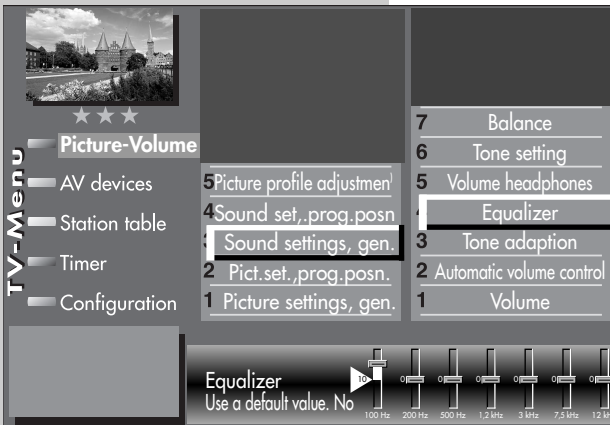

4



EXIT

3) See glossary for an explanation.

12. General Sound Settings

*Some of the menu items are not available in a 2 ** menu.*

Audio frequencies can be individually adjusted to your personal tastes in the "Equalizer" menu.

Adjust Equalizer:

- Press the **MENU** key.
The TV menu appears on the screen.
- Press the blue key . The menu "Picture and sound" and the menu item "General picture settings" are pre-selected.
- Use the corresponding numeric key (in the example: **3**) to select "General sound settings".
- Use the corresponding numeric key (in the example: **4**) to select "Equalizer".
- Press Cursor control key and adjust each slider in turn.
- Change the setting with the **V-/V+** key.

- With the cursor control key activate the line "As standard".
- To save the new value press the **V-/V+** key and select "Yes".
- Press the **OK** key to save the new setting.
- Press the **EXIT** key to close the TV menu.


12. General Sound Settings

Opening the menu

 **Some of the menu items are not available in a 2 ** menu.**

The headphone volume can be set to a volume which can also be adopted as a standard value.


Adjusting the headphone volume:

- Press the **MENU** key.
The TV menu appears on the screen.
- Press the blue key . The menu "Picture and sound" and the menu item "General picture settings" are pre-selected.
- Use the corresponding numeric key (in the example: **3**) to select "General sound settings".
- Use the corresponding numeric key (in the example: **5**) to select "Volume headphones".
- To save the new value press the **V- / V+** key and select "Yes".
- Press the **OK** key to save the new setting.
- Press the **EXIT** key to close the TV menu.

MENU



3

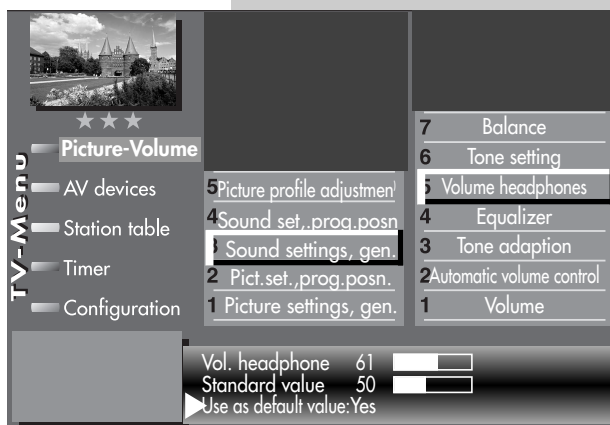

5



EXIT


3) See glossary for an explanation.

Opening the menu

MENU



4

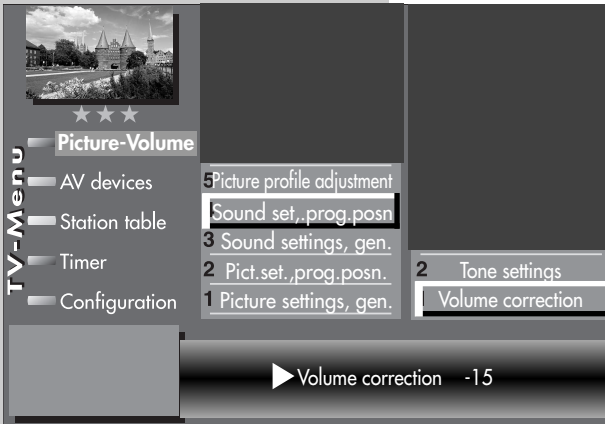

EXIT

12.1 Sound Settings for Programs via TV Menu

*Some of the menu items are not available in a 2 ** menu.*

Volume correction

Various TV stations broadcast their programs with different sound volumes. This volume difference can be minimised by correcting the volume. This adjustment remains active even if the standard sound values are recalled.

Adjusting the volume correction:

- Press the **MENU** key. The TV menu appears on the screen.
- Press the blue key . The menu "Picture and sound" and the menu item "General picture settings" are pre-selected.
- Use the corresponding numeric key (in the example: **4**) to select "Sound settings for Pr."

- Press the **OK** key and then, in the setting window, use the **V-/V+** key to change the setting.
- Press the **OK** key to save the new settings.
- Press the **EXIT** key to close the TV menu.

Individual sound settings can also be made in the station table.

12.1 Sound Settings for Programs via TV Menu



Opening the menu

 *Some of the menu items are not available in a 2 ** menu.*

Tone setting

The tone setting can be set to "Normal" or "Speech". The setting "Speech" should be used primarily for stations which broadcast mainly programs with a lot of speech, such as news stations. The setting "Normal" is better for music programs.


Adjusting the tone setting :

- Press the **MENU** key.
The TV menu appears on the screen.
 - Press the blue key . The menu "Picture and sound" and the menu item "General picture settings" are pre-selected.
 - Use the corresponding numeric key (in the example: **4**) to select "Sound settings for Pr."
 - Use the corresponding numeric key (in the example: **2**) to select "Tone settings".
 - In the setting window, use the **V-/V+** key to change the setting.
 - Press the **OK** key to save the new settings.
 - Press the **EXIT** key to close the TV menu.
-  *Individual sound settings can also be made in the station table.*

MENU



4

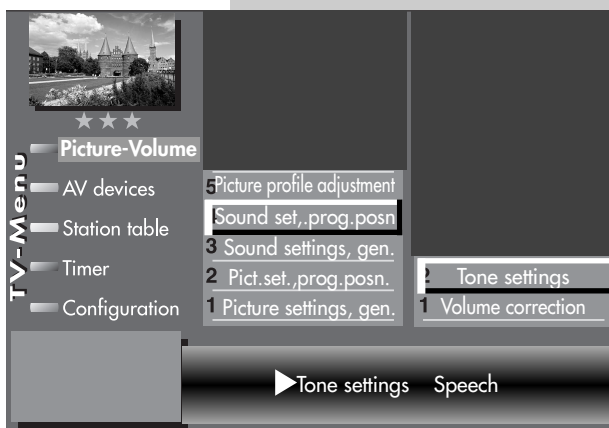


2




EXIT

Opening the menu

12.2 Sound Settings for Prog. via the Station Table

 *Some of the menu items are not available in a 2 ** menu.*

Making sound corrections:

- Select the program position whose sound settings you wish to change.
- Press the **MENU** key.
The TV menu appears on the screen.
- Press the white key . The station table is displayed with the currently active program position highlighted.


MENU




F2



F1 ↑

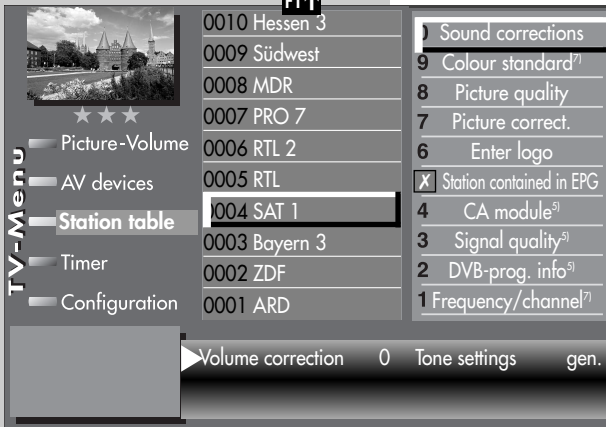

- Press the **F2** key to enable editing of the station table.
- Use the cursor control key  to move to the subjects side.
- Use the corresponding numeric keys (in this example: **0** for sound corrections) to select the desired menu items.
- In the setting window, use the cursor control key to select the desired functions.

0



EXIT

The use of the **V-/V+** key to change the selected setting. "**gen.**" means here that the new setting will overwrite the **general** sound settings (see pages 26).

 *The individual settings made here, which differ from the standard values, remain saved.*

- Press the **OK** key to save the new settings.
- Press the **EXIT** key to close the TV menu.


5) Available only for DVB stations!

7) Available only for analogue stations



12.3 Sound Settings


Mute Function


In the menu "Sound settings", you can activate a two-stage mute function.

When this function is active, the volume in TV mode can be reduced in two stages with the mute key .

Activating the mute function

- Press the **MENU** key to open the TV menu.
- Press the red key  to open the "Configuration" menu.
- Press the **OK** key to move to the right side of the menu.
- Use the cursor control key  or the corresponding numeric key (in the example: **4**) to select the menu item "Sound settings".
- In the setting window, use the **V-/V+** key to set the function "Mute (2-stage)" to "On".
- Press the **OK** key to save the setting.
- Press the **EXIT** key to close the TV menu.


In normal TV mode, the mute key  is used as follows:

- Press it once to reduce the volume by 12 scale divisions.
- Press it again within five seconds to reduce the volume to "00".
- Pressing the  key once again restores the volume to its original level.

During films for the blind, the scenes are described in the dialogue intervals. Under "**Dual channel**", select "Audio 2" if you want to receive films for the blind (with audio descriptions).

Opening the menu

MENU

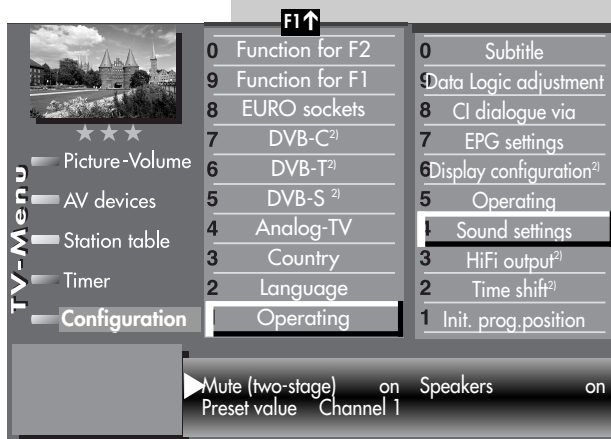


4



EXIT

2) Possible only on sets equipped with this function.


Opening the menu

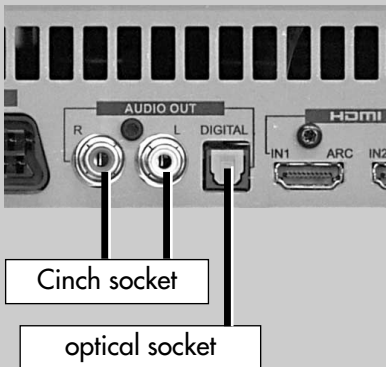

MENU



3

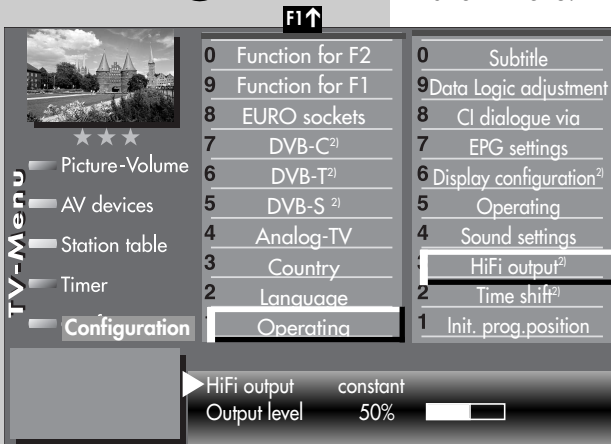

EXIT

12.4 Sound Settings HiFi-output

On the back of the TV set, there are audio sockets (see picture and page 116 of the user's guide) with which you can connect an AV device to the TV set.

Settings in the "Hi-fi output" and "Sound settings" menu options are then only necessary if the TV set will be connected to an AV device, for example a hi-fi receiver, radio headphones, Surround decoder etc.

The "Hi-fi output" and "Sound settings" menu options are linked to each other. The link is described on pages 48-50.

The sound can be output via a **RCA cable** or an **optical audio cable** ("Toslink", available in an accessories shop).

HiFi output settings

- Press the **MENU** key to open the TV menu.
- Press the red button to open the "Configuration" menu.

- Use the cursor control key to access "Init. prog. position".
- Select the menu option "hi-fi output" with the assigned numeric key. In the example it is **3**.
- Set the desired parameters in the settings window with the **V-/V+** key.
- Press the button to save the new settings.
- Press the **EXIT** key to close the TV menu.


For normal TV mode, the yellow button and the **V-/V+** key can be used to set "Speaker on".

2) Possible only on sets equipped with this function.

12.5 Sound Settings Speakers


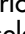


Opening the menu

There are audio sockets (see picture and page 116 of the user's guide) on the back of the TV set with which you can connect an AV device to the TV set.


 **Settings in the "hi-fi output" and "Sound settings" menu options are only necessary if the TV set will be connected to an AV device, for example a hi-fi receiver, radio headphones, Surround decoder etc.**

The "hi-fi output" and "Sound settings" menu options are linked together. The link is described on pages 48-50.

Speaker settings

- Select the TV menu with the **MENU** button.
 - Use the red button  to open the "Configuration" menu.
 - Press the **OK** button and change to the right column.
 - With the cursor control key  or the assigned numeric key **4** (in the example), select the "Sound settings" function.
 - In the settings window, use the cursor control key  to access the "Speakers" menu option.
 - Set "Centre speaker" with the **V-/V+** key.
 - Press the **OK** button to save the new settings.
 - Clear the TV menu with the **EXIT** button.
- For TV mode, the yellow button  and the **V-/V+** key can be used to set "Speakers" temporarily.

MENU

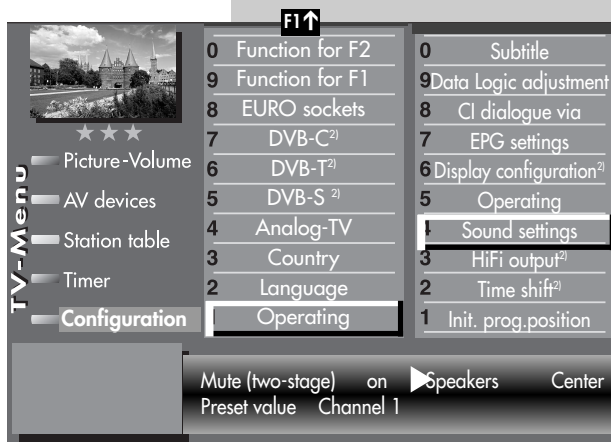


4



EXIT


2) Possible only on sets equipped with this function.


12.6 Sound Settings, Overview

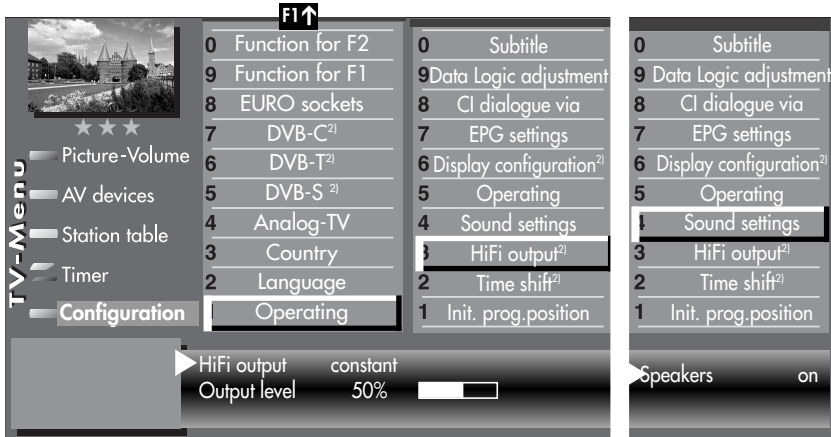


"HiFi output"	"Sound settings"	
HiFi output "constant"	Speakers "On"	The volume on the "AUDIO OUT sockets" on the back of the TV set remains "constant" at the % value set in the menu. The sound is also output via the speakers of the TV set. The volume of the TV set speaker can be changed with the V-/V+ button of the remote control.
	Speakers "Off"	The volume on the "AUDIO OUT sockets" on the back of the TV set remains "constant" at the % value set in the menu. The sound is <u>not</u> output via the speakers of the TV set. The symbol for the mute setting appears on the screen. The volume cannot be changed with the V-/V+ button of the remote control.
	Speakers "Center"	The sound of an AV device connected to the "CENTRE IN socket" (e.g. Surround decoder) is output through the speaker of the TV set. The speakers of the TV set are thus used as "centre speakers"

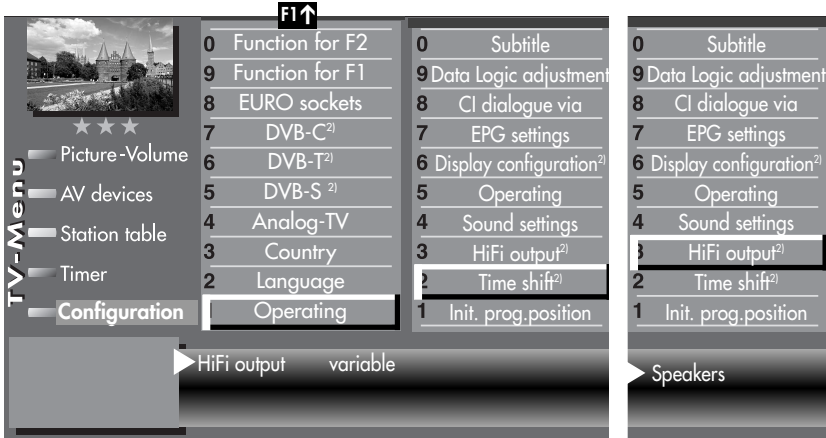

12.6 Sound Settings, Overview



"HiFi output"	"Sound settings"	
HiFi output "variable"	Speakers "On"	The volume on the "AUDIO OUT sockets" on the back panel of the TV set is adjustable. The sound is also output via the speakers of the TV set. The volume of the TV set speakers and the volume on the "AUDIO OUT sockets" can be changed with the V-/V+ button of the remote control.
	Speakers "Off"	The volume on the "AUDIO OUT sockets" on the back panel of the TV set is adjustable. The sound is not output via the speakers of the TV set. The symbol for the mute setting appears on the screen  The volume on the "AUDIO OUT sockets" can be changed with the -+ button of the remote control.
	Speakers "Center"	The sound of an AV device connected to the "CENTRE IN socket" (e.g. Surround decoder) is output through the speaker of the TV set. That way, the speakers of the TV set are used as "Centre speakers".

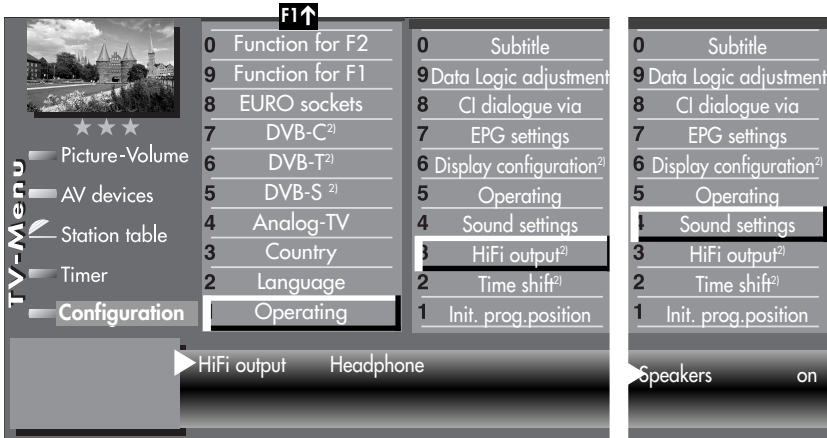12.6 Sound Settings, Overview



"HiFi output"	"Sound settings"	
HiFi output "Headphone"	Speakers "On"	The volume on the "AUDIO OUT sockets" on the back panel of the TV set is adjustable. The sound is also output via the speakers of the TV set. The volume of the TV set speakers can be changed with the V-/V+ button of the remote control. Changing the volume on the "AUDIO OUT sockets": - press the yellow button  . - press cursor button ▲ or ▼ and select "Headph. vol.". . - use the V-/V+ button to change the volume. The headphones output on the front or side will also be changed.
	Speakers "Off"	The volume on the "AUDIO OUT sockets" on the back panel of the TV set is adjustable. The sound is not output via the speakers of the TV set. The symbol for the mute setting appears on the screen  . The volume on the "AUDIO OUT sockets" can be changed with the V-/V+ button of the remote control. The headphone output on the front or side will also be changed.
	Speakers "Center"	The sound of an AV device connected to the "CENTRE IN socket" (e.g. Surround decoder) is output through the speaker of the TV set. The speakers of the TV set are thus used as "Centre speakers"

12.7 Connecting Headphones

For the **Axio pro**, **Linus** and **Sirius**, the headphones connector is located behind a flap. See page 115. Press ●●● to open the flap.

The headphones connector is located behind a flap on the left side for the **Axio pro** and **Linea**. See page 115. Press | | | in order to open the flap.

The headphones connector is located behind a flap on the right side of the Primus. See page 115.

Radio headphones can also be connected to the AUDIO OUT sockets on the back of the TV set. Also see page 116.

The sound settings for the radio headphones should then be set as described on page 50.

We recommend headphones with impedance that is not less than 32 Ohm.

For headphones with less impedance (approx. 8 Ohm), the dynamic range is smaller.


The headphones volume can be saved as a default value (see Chapter 12.)




Setting the volume too high when using headphones or ear-phones can result in damage to the ears - including the complete loss of hearing.

12.8 Sound 1, Sound 2

When receiving a dual-language program, you can switch between the two sound channels.


In TV mode, press and hold the yellow key  until the sound function "Sound mode" is selected.

Then use the **V-/V+** key to select Sound 1 or Sound 2.

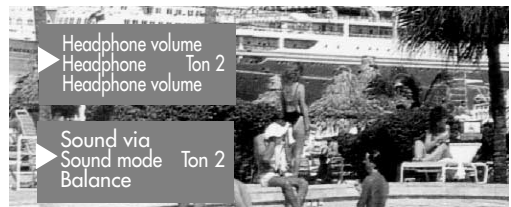

Opening the menu

MENU

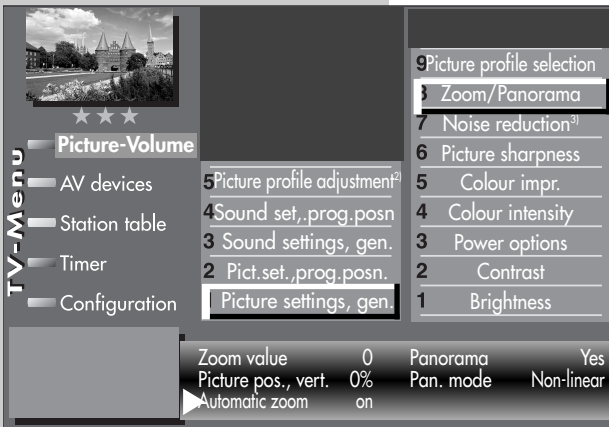

8



EXIT

13. Automatic zoom

The menu item "Automatic zoom" is not available in a 2 ** menu.

When the automatic zoom function is active, programs in a "widescreen" format (such as programs in 16:9) are expanded to fill as much of the screen as possible.

If the function is inactive, the programs are displayed in their original format.

Activating the automatic zoom ²⁾

- Press the **MENU** key. The TV menu appears on the screen.
- Press the blue key . The menu "Picture and sound" and the menu item "General picture settings" are pre-selected.
- Use the cursor control key to select the menu item "Brightness".
- Use the corresponding numeric key (in the example: **8**) to select the function "Zoom/Panorama".
- Use the cursor control key to select the menu item "Automatic zoom".

- Use the **V-/V+** key to change the setting.
- Press the **OK** key to save the new setting.
- Press the **EXIT** key to close the TV menu.

14. Childlock




Opening the menu

With the aid of the childlock function, you can determine whether or not the TV set can be switched on and which stations may be selected at which times. The childlock can be set such that:

- it is always active,
- one to six TV, radio or AV programs (Prog A ... Prog F) are exempted from the locking function (permitted programs), or
- all programs, or programs which are not locked, may be viewed during a permitted time period (TV start – TV end).


The childlock must be saved once with a 4-digit "code" (password).

a) Activating the childlock

- Press the **MENU** key.
The TV menu appears on the screen.
- Press the green key  to open the menu "Timer".
- Use the cursor control key  to select "Settings" and press the **OK** key.
- In the setting window, use the cursor control key to select the menu item "Activate" and then use the **V-/V+** key to set the childlock to "Active".
- Use the cursor control key  to select "Code" and enter your personal 4-digit code with the numeric keys.
Make a note of this code!
- Press the **OK** key to save the new setting.
- Press the **EXIT** key to close the TV menu.

b) Permitted programs:

MENU

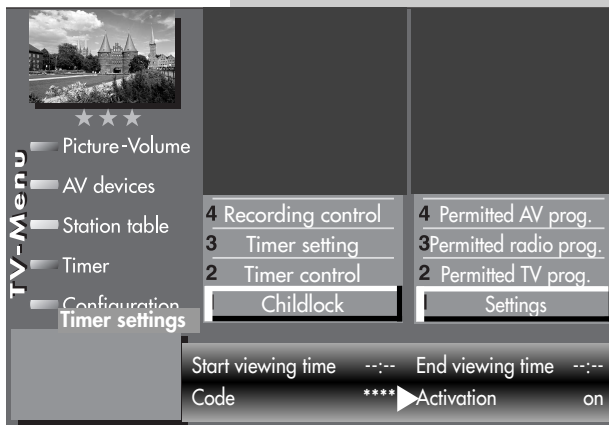

EXIT

The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

14. Childlock

Activate the childlock as described in step a).

Use the corresponding numeric key to select the menu item "Permitted xx progs." (xx = TV, radio or AV). Press the **OK** key and, in the setting window, enter the program positions with the numeric keys or use the **V-/V+** key to select the desired program positions.

- Press the **OK** key to save the new settings.

c) TV start – TV end


Activate the childlock as described in step a). In the setting window, use the cursor control key to select the start and end times and enter the desired times with the numeric keys. Press the "OK" key to save the settings.

Protecting the childlock settings with your code

- Use the cursor control key to select "Code" and enter your personal code (password) with the numeric keys.
- ☞ **Make a note of this code, since the child lock can be deactivated only if the correct code is entered !**
- Press the **OK** key to save the settings.
- Press the **(EXIT)** key to close the TV menu.
- Switch off the TV set with the **(P)** key.
- ☞ **The childlock is not fully activated until the TV set is switched off.**

Deactivating the childlock

If the childlock is active, a window requesting your personal code is displayed each time the TV set is switched on. Entering the correct code enables the TV set and it can then be used normally until it is switched off again. To cancel the childlock function, proceed as described in step a), above, and set the childlock to "Inactive".

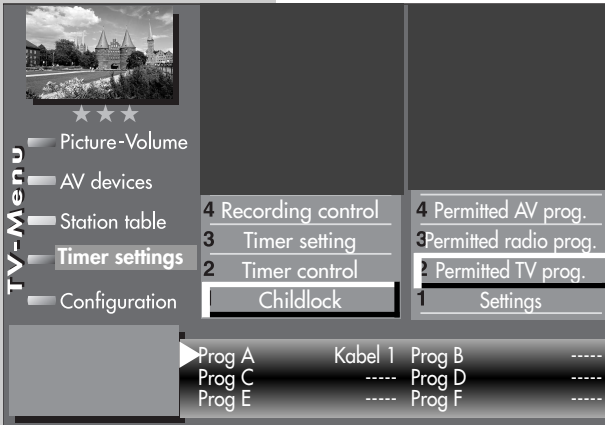

Factory setting
Code: 0000

15. Timer Control

Opening the menu

 **The menu items "On time" and "Off time" are not available in a 2 ** menu.**


In the menu item "Timer control", you can program a switch-on time, a switch-off time and a sleep timer (switch off after ...).

The **switch-on time** is the time at which the TV set is to be switched on automatically.



The **switch-off time** is the time at which the TV set is to be switched off automatically.

The **sleep timer** (switch off after...) switches off the TV set after a program delay (which can be set in steps of 15 minutes).

Setting the on time and off time

- Press the **MENU** key to open the TV menu.
- Press the green key  to open the "Timer" menu.
- Press the numeric key **2** to select "Timer control".
- Press the **OK** key and then, in the setting window, enter the desired time (four digits) with the numeric keys.
- Press the **OK** key to save the setting.
- Press the **EXIT** key to close the TV menu.


At the programmed on time, the TV set is switched on from the standby state (red LED lights). You must confirm this automatic action by pressing any key on the remote control. If this is not done, the TV set will switch back to the standby state after 10 minutes. This ensures that the TV set does not stay on if you are not at home.

 **If you do not want to have the TV set switch itself on each day, you must clear the on and off times in the menu by pressing the  key.**

MENU



2

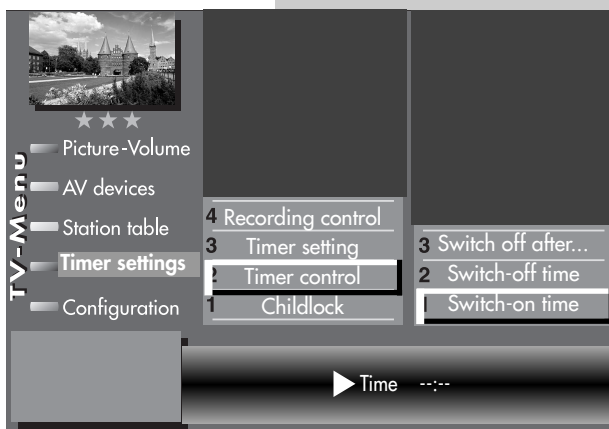

0

9



EXIT


The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

Opening the menu

MENU



3

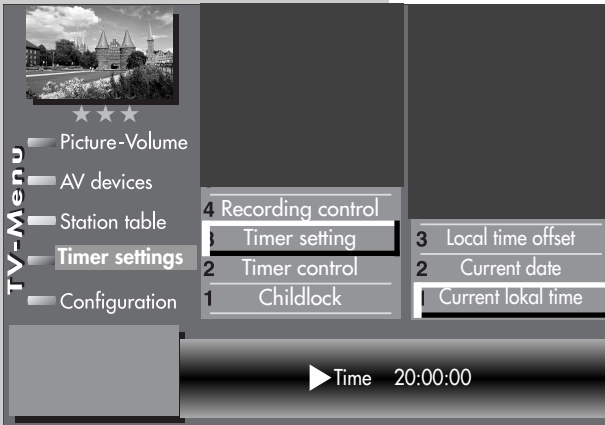

0

...

9



EXIT

The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

15.1 Setting the Time and Date

Normally, the TV set will determine the current date and time from the Teletext signals of the currently selected station (providing this station sends Teletext).


Note: For this the device must be turned on with the mains switch.

If this is not the case, or if an incorrect date or time is displayed, you can set the date and time manually.

In almost all cases, you will not need to do this.

Even the changeover between winter time and summer time is executed automatically.

Setting the time and date manually:

- Press the **MENU** key to open the TV menu.
- Press the green key  to open the "Timer" menu.
- Press the numeric key **3** to select "Time settings".
- Press the **OK** key and then, in the setting window, enter the current time with the numeric keys.

- You can then start the internal clock precisely by pressing the **OK** key when the time you have entered is reached.
- Press the numeric key **2** to select "Current date".
- In the setting window, enter the date with the numeric keys.
- Press the **OK** key to save the settings.
- Press the **EXIT** key to close the TV menu.


The **local time offset** is the difference between the local time where the TV set is installed and Greenwich Mean Time (GMT). The TV set

i normally detects this time offset and also the additional changeover to summer time.

The time needs to be set manually only if it is not detected automatically.

15.2 Recording Control

Opening the menu


 **This menu item is not available in a 2 ** menu.**

In the menu item "Recording control", you can set a lead time and an overrun time for timer recordings.

The TV set is automatically switched to the program position from which the recording is to be made at a time which is the number of minutes programmed as the **lead time** before the programmed starting time for the recording.

At the end of the programmed recording time, the TV set remains set to this program position for the period programmed as the **overrun time**.

Setting the lead time, VPS lead time and overrun time

- Press the **MENU** key to open the TV menu.
- Press the green key  to open the "Timer" menu.
- Use the corresponding numeric key (in the example: **4**) to select the menu item "Recording control".
- Use the cursor control key to select the desired menu item.
- Press the **OK** key and then, in the setting window, use the **V-/V+** key to set the desired lead or overrun time.
- Press the **"OK"** key to save the settings.
- Press the **"EXIT"** key to close the TV menu.



MENU



4



EXIT

The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

15.2 Recording Control

Application example:

You wish to record a program received via DVB-T. The program starts at 22:45 hours, ends at 23:40 hours and is broadcast on ITV.


Set up a "manual timer" as described in Section 16, "Special Functions 2" or set a timer with the aid of the EPG as described in Section 18.3 "Using EPG, Recording a Program".

Set the lead time to 3 minutes and the overrun time to 10 minutes.

At the programmed start time minus the programmed lead time of three minutes, the TV set is either:

- switched on from the standby state (red LED lights) with the program position for ITV selected, whereby the screen remains dark but the program is sent via the EURO socket to your recorder, or
- In the case of TV sets with a receiver (tuner): If you are already watching television, the program will be switched to SAT 1 if recording requires this setting..

At the programmed end of the recording (at 23:40 hours) the program position for ITV remains selected for the programmed overrun time of 10 minutes.


 ***It is not possible to switch to another program position during the programmed lead and overrun times.***

16. Special Functions

Picture-in-Picture²⁾

Opening the menu

In the case of TV sets with **two receivers**, it is possible to display a DVB program and to open a window to show a different analogue program or DVB program from the second receiver or from the AV program position.

 **In principle only one HDTV program can be shown. An HDTV picture can therefore not be shown as a PIP.**

Activating the PIP function

- Press the **F1** key (RM16) or **PIP** (RM17). A small window will appear. If an HDTV program is shown as the main picture, the AV program position AV1 will always appear as the PIP.
If either a DVB program or an analogue program is shown as the main picture, the same station will always appear again as the PIP.
- By using the numeric keys or the **+P -P** rocker switch, it is possible to select a different AV program position or a program that is received with the second receiver as a PIP.
- You can use the cursor control keys **◀ ▶** to move the PIP picture on the screen. The last position to which this picture was set is saved.
- By pressing the **OK** key, you can set the frame of the PIP picture to active (red) or inactive (white).
- The contents of the PIP picture can be changed only if its frame is active (red).

If you wish to display the picture from a connected AV device as a picture-in-picture, press the **AV** key and then use the **numeric keys** to select the desired AV device.


If you wish to display the picture from another station, use the numeric keys to select the desired program position.

F1

RM16

PIP



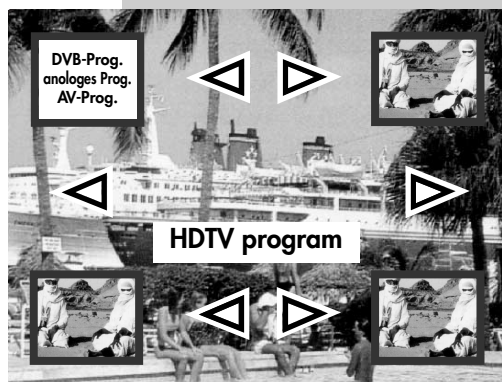

RM17



Opening the menu



16. Special Functions Picture-in-Picture

- Pressing the red key  swaps the contents of the two pictures.
 - Pressing the green key  causes the PIP picture to expand to fill the screen and terminates the PIP function.
 - To close the PIP picture, press the  key.
-  ***If a recording has been programmed in the timer menu, activating the PIP function displays the program which is being recorded.***

16. Special Functions

JPEG Photograph Display

Opening the menu

The JPEG photograph display is an image viewer for JPEG formats. The automatic image resizing and a full-picture mode ensure smooth, pleasant display.

Starting the photograph viewer²⁾:

- Insert the memory stick in the USB socket on the TV (see page 115). The photograph display overview appears on the screen. The JPEG photograph display can also be started as follows:

- Press the **F2** key for approx.. 2 seconds. The maximum possible selection appears.

- Press the numeric key **4** to Select the JPEG photograph display. The JPEG photograph display menu appears on the screen.

- Use the cursor control keys **▼▲◀▶** to select the desired image folder.
- Press the **OK** key to open the image folder.
- Use the cursor control keys **▼▲◀▶** to select the individual images.

- Press the **OK** key to open the selected image.
- Using the green key **⌚**, the selected image can be rotated clockwise; with the red key **★**, it can be rotated counter-clockwise.

Note: *It may not be possible to turn or display pictures that have already been processed on a PC. When processing pictures on a PC, turn off "JPEG progressive".*

- If you want to delete a picture, press the key **⏏** and answer the security question with **Yes**.

Press the **EXIT** key to exit the photograph viewer.

F2

4




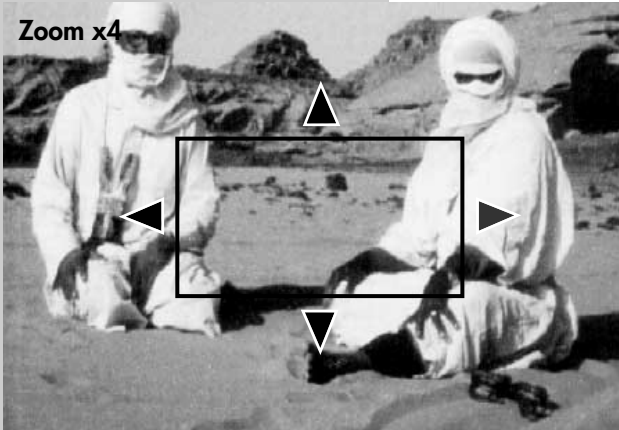
EXIT

Opening the menu

16. Special Functions JPEG Photograph Display

Starting the zoom function²⁾:

- When an image is displayed, the zoom function can be activated with the + key. A red outlined quadrangle appears in the image.
- Use the V-/V+ key to select the zoom factor (x2, x4, x8).
- Use the cursor control keys ◀▶ ▲▼ to move the red zoom quadrangle in the image in order to determine the image section to be magnified.
- Press the  key for a magnified display of the selected image section.



- Use the cursor control keys ◀▶ ▲▼ to scroll the magnified image section.
- To return to the full screen, press the - key repeatedly until the “zoom” message disappears.



16. Special Functions

JPEG Photograph Display


Opening the menu

Starting the slide show:

- Use the cursor control keys ◀▶▲▼ to select the desired image folder.
- Press the **OK** key to open the selected image folder.
- Press the **F2** key and select the "Slide Show" function.
- The display of the individual images (display time 3 - 60 seconds) can be adjusted with the **V-/V+** key.
- Press the **OK** key to start the slide show.
- During the slide show, the **II** key has the "Pause" function. Press the **II** key to resume the slide show.
- When the slide show is finished or stopped with **OK** (RM 16) or **■** (RM 17) or **EXIT**, the photograph viewer appears again.



F2

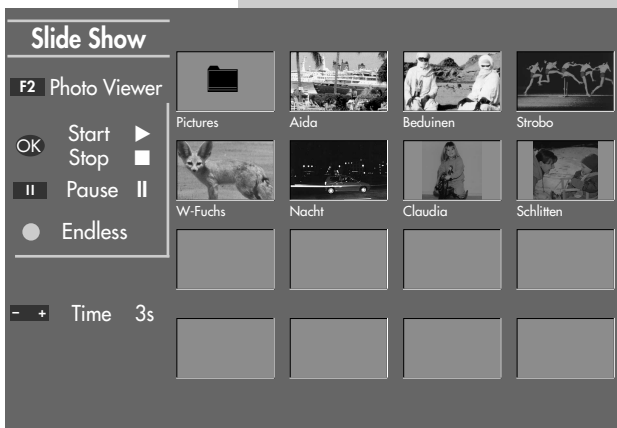

Press **EXIT** to return to the TV picture.



Prior to unplugging the USB memory stick, be sure to exit the photo display with the **EXIT key!**

There is otherwise a risk of losing data on the memory stick.



RM16

ARCHIV



RM17

EXIT


Opening Timeshift

16. Special Functions viewing-time shift mode


The TV set stores the recordings in temporary digital storage (time shift buffer).

The temporary digital storage is sufficient for recording approx. 130-300 min (SD) and 70-120 min (HD=HDTV programs).

This information only represents approximate values, which can vary depending on the volume of data in the recording.

- Pause the program with the  button.


The program is recorded in the temporary storage.


The name of the "paused" program appears in the upper left corner of the screen. The green button 

can be used to make the status display, which gives you information about the current position in time shift mode, visible.


The time since the program was "paused" or alternatively recorded (05:50:00 in the example) is shown on the left below the bar display.

The time since the program was "paused" or alternatively recorded (05:50:00 in the example) is shown on the left below the bar display.

During pause mode, you can also change to a different program position¹²⁾, to watch the news for example. Then, in addition to the name of the program, the symbol  appears as a sign that the program is "parked".

When the news is over, you can press the  button again to continue the previously paused program without having missed anything.

The time shift bar fills in with colour in accordance with the length of the pause. After a fill level of approx. 98%, the time shift bar is shown in red.

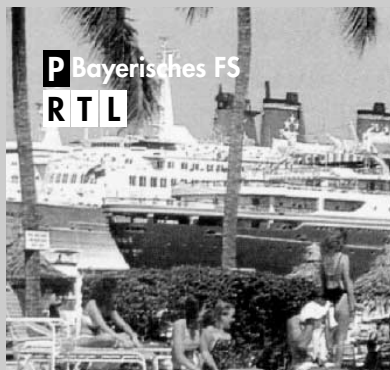

¹²⁾ depending on the built-in tuners

16. Special Functions viewing-time shift mode

Opening Timeshift

Everything that is further in the past than the set time will be lost.

- Press the **||** button again to continue watching the paused and recorded program.
- Press the green button **⏪** and show the play bar (see picture below).
- By briefly pressing the cursor control keys repeatedly **◀▶** (RM16) or the fast forward - **▶▶** (RM17) and rewind key **◀◀** (RM17) the playback can be forwarded in increments of +1 minutes and rewind in increments of -20 seconds.
- By holding down the cursor control keys **◀▶** (RM16) or fast forward **▶▶** (RM17) and rewind key **◀◀** (RM17) the forward/rewind mode is activated at twice the speed. By repeated pressing the recording can be forwarded and rewind at up to 32-times normal speed.



RM16



RM17

If you want to return to the current status of the program ("Live") from time shift mode, then press the green button **⏪** to cause the status display to appear (play bar, see display insert in picture) and then press the key **OK** (RM16) or **■** (RM17) for the "LIVE picture" of the current program.

The amount of time that the program has been "paused" is shown on the left beside the bar display (-08:25 minutes in the example). The time that the replay lags behind the live broadcast is shown below the bar display (05:50 min in the example).

👉 If the TV set is in stand-by mode or switched off, the recording will be lost.

Opening the menu

16. Special Functions

Recording a program with a timer

If you wish to record a program which your video recorder or DVD recorder cannot receive directly because it does not have a suitable tuner (such as DVB-T or DVB-C), you can use the "Timer overview" to make such programs available to the recording device.


Setting a timer manually for a recording:

- Press the **F2** key. If you press **F2** briefly, the function programmed for **F2** (see Section 18. "Programming the function keys") is executed.
If you hold down **F2** for about two seconds, all possible selections are displayed.
- If all possible selections are displayed, press the corresponding numeric key (in the example: **9**) to open the timer menu.
- If a timer already exists, press the **F1** key.
- The cursor is located at the left of the first line "Record". The number of subjects and sections depends on the selected scope of operation.

F2

9

F1

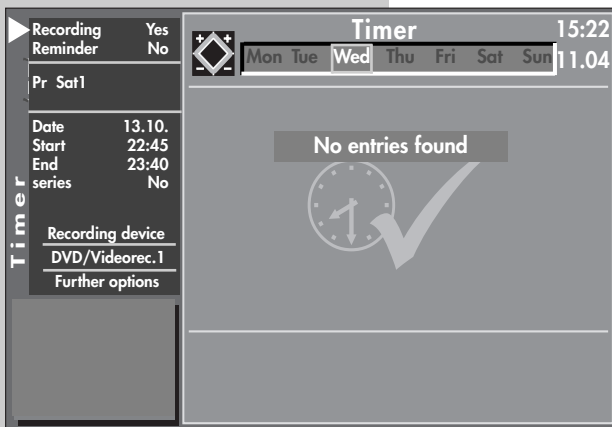




Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently. Use the **V-/V+** key to set this menu item to "Yes".

- If desired, press cursor control key **▼** and use the **V-/V+** key to activate the reminder function. If the reminder function is active, a reminder window is displayed on the screen one minute before the start time programmed for the timer.
- Use the **numeric keys** to select the program position (see the station table of the TV set) which is to



16. Special Functions

Recording a program with a timer

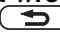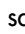make the program available for recording.

- Press the cursor control key ▼ and use the **numeric keys** to enter the date, start time and end time of the program you want to record..
- ☞ *If you inadvertently enter a wrong time, you can delete it with the  key or overwrite it with the numeric keys.*
- Press the cursor control key ▼ and use the **V-/V+** key to select the recording device connected to the TV set which is to be used for the recording.
- Press the  key to save the programmed settings. The settings are stored in the timer memory.
- Press the  key to close the TV menu.

Clearing a timer:

- Press the  key.
- Press numeric key **9** to open the timer menu.
- Use the cursor control key to select the timer you wish to clear and press  to mark it for deletion. A window is displayed on the screen, asking whether you really want to clear this timer. Confirm the intended action by pressing the appropriate key.

Opening the menu



Opening the menu

F2

0



16. Special Functions

Direct recording of a program

If you wish to record the program you are currently watching, you can start a direct (one-touch) recording to make the current program available to a recording device connected to the EURO sockets.


Starting a direct recording:

- Press the **F2** key.
If you press **F2** briefly, the function programmed for F2 (see Section 17. "Programming the Function keys") is executed.
If you hold down **F2** for about two seconds, all possible selections are displayed.

Recording	Yes
Reminder	No
Pr Sat1	
Date	13.10.
Start	22:45
End	23:40
series	No
Recording device	
DVD/Videorec.1	
Further options	

- Press numeric key **0** to open the timer menu window.
The timer menu window displays the program position, the date and the EPG data for the current program or for the next two hours.
- If there is more than one AV device connected to your TV set, use the cursor control key **▼** to select the proposed recording device and use the **V-/V+** key to select the desired device.

- Press the **OK** key to save the settings.

 **On the recording device (e.g. video recorder), select the AV program position and start the recording by pressing the appropriate button (REC, OTR, etc.).**



16. Special Functions

Picture format

Opening the menu

Adjusting the picture format:

- Press the **F3** key.
If you press **F3** briefly, the function programmed for F3 (see Section 17. "Programming the Function keys") is executed.
If you hold down **F3** for about two seconds, all possible selections are displayed.
- Press numeric key **1** to select the function "Picture format menu".
- Use the **▼▲** rocker key to select the desired function. After selection of a picture format, you can also adjust the zoom setting by pressing the **V+ V-** key within five seconds.
- The settings made here (except for the automatic zoom set in the TV menu) remain active until you switch to a different program position or switch off the TV set.

Zoom / Picture position

After selecting the function "Zoom", you can adjust the zoom factor with the **V+ V-** key. In addition, you can move the picture position 4) up and down on the screen in order, for example, to keep the station logo or the subtitles visible. To change the picture position, press and hold the **F3** key until the selection is displayed. Then press numeric key **2** and use the **V+ V-** rocker key to move the picture.

Standard 4:3

This is the standard setting for all programs in the 4:3 picture format.

F3



Special functions 3

- 1 Picture format
- 2 Pic. form., vertikal

1



V+

V-



Opening the menu

16. Special Functions Picture format



Panorama

With the aid of the panorama function, you can expand programs broadcast in 4:3 format to fill the screen of a 16:9 TV set. The picture is expanded uniformly in the horizontal direction. You can also zoom the picture. The panorama function can be activated and deactivated in the menu item "General picture settings" of the menu "Picture and sound".



16:9 Full picture

This function serves to display pictures from external devices (such as a 16:9 video recorder) with the correct aspect ratio.

16. Special Functions Picture Position

Opening the menu

If desired, the picture can be shifted up or down in order, for example, to make subtitles visible or to hide “ticker” displays.

F3

2


Adjusting the picture position:

- Press the **F3** key.
If you press **F3** briefly, the function programmed for **F3** (see Section 17., “Programming the Function keys”) is executed.
- Press numeric key **2** to select the function “Picture position vertical”.
- You can now use the **V+ V-** key to move the picture up and down on the screen so that, for example, the station logo or the subtitles are visible.



Special functions 3

- 1 Picture format
- 2 Pic. form., vertikal


 ***This setting is not saved. If you wish to save it as a global setting, use the procedure described in Section 11 to set it.***


V+

V-

Opening the menu

16. Special Functions Audio/language selection

Various programs are transmitted with several audio channels (e.g. multilingual or ).

If you are receiving a multilingual program the information box on the bottom left of the screen features the  logo.



Pr 30
arte
05.04.07

Stereo

Press **F2** to see the list of available languages.

F2

Open menu:



Special fuctions 2

- 2 Language of progr.
- 4 Photo Viewer
- 5 File manager
- 9 Timer overview
- 0 Direct recording

- Press **F2**.
- Press **F2** briefly to run the function programmed for the key (see Chapter 17. "Programming function keys").

Press **F2** for approx. 3 seconds and the max. possible selection is displayed.

- Press numeric key **2** and select the "Program language" function.

- Select a language with the cursor control key **▲▼**.


2

- 1 German
- 2 France



 Symbol in grey:

Other audio options e.g. dd = "Dolby digital" are available but are not selected.

 Symbol in white:

One of the audio options has been selected.

16. Special Functions

Select Subtitle⁵⁾

Opening the menu


People with a hearing impairment can make use of the subtitles function.

By default, the "Subtitles" function has to be activated first of all via the TV menu.

Activating subtitles

- Select the TV menu with the key. **MENU** .
- Use the red button ***** to open the "Configuration" menu.
- Use the cursor control key **▶** to switch to the menu item "Initial program position".
- Use the respective numeric key to select the "Subtitles" menu item.
- In the settings window, use the **V-/V+** key to set the "Subtitles" function to "on".
- If desired, a language can be selected here.
- Save the changed setting with the key. **OK** .
- Close "TV menu" with the key. **EXIT** .

MENU

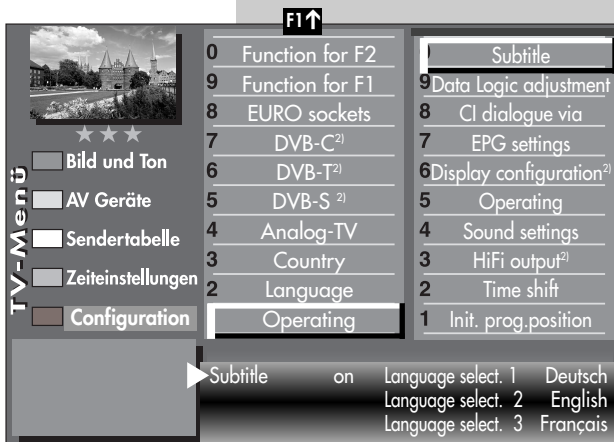

Displaying subtitles - see next page.




EXIT

2) Possible only on sets equipped with this function.

Opening the menu

16. Special Functions Subtitle displayed⁵⁾

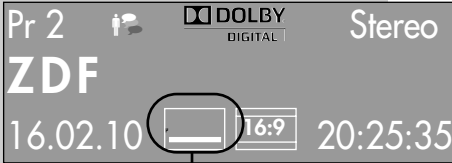

If a TV program has subtitles, they can be displayed by pressing the green button.




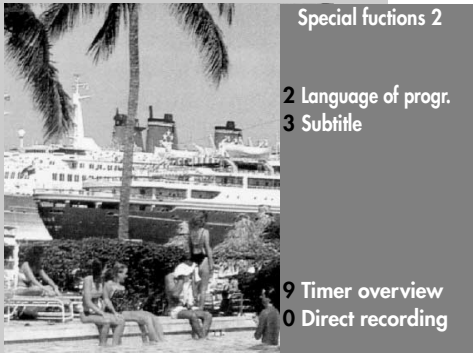
A program marked in this manner comes with subtitles.

F2

3

Displaying subtitles:

- Press key **F2** briefly - the programmed function (see Chapter 17. "Programming function keys") is executed. Press key **F2** for approx. 3 seconds - the max. possible selection is displayed.
 - Use the numeric key **3** to call up the "Subtitles" function.
 - Use the cursor control keys **▼▲** to make a selection if this is offered by the station or the program.
-  **The station or program is exclusively responsible for offering and displaying subtitles.**



1 OFF
▶ 2 German
3 English

⁵⁾ Can only be selected for DVB stations.

17. Programming the Function Keys

Opening the menu

The remote control has four function keys: F1, F2, F3 and **AV**. You can program these function keys with any of the available functions.

If you press and hold any function key, a window with the available functions is displayed. The picture on the right shows the functions available for the F2 key.

Programming function key F1, F2, F3 or AV with a function

- Press the **MENU** key, to open the TV menu.
- Press the red key ***** to open the "Configuration" menu.
- Use the cursor control key **▼▲** or the corresponding numeric keys to select the desired "Function for.." (in this example: F2).
- Press the **OK** key and then use the cursor control key to select one of the available functions.
- Press the **OK** key to assign this function to the selected function key (the selected function is marked with "X").
- Press the **EXIT** key to close the TV menu.

If a function key is programmed with a function, this function can be called by briefly pressing the function key. Pressing and holding the function key displays a list of all available functions.

F1 ↑

0	Function for F3
1	Function for F2
8	Function for F1
7	EURO sockets
6	DVB-C
5	DVB-T
4	DVB-S
3	Analog-TV
2	Country
1	Language

6	Direct recording
5	Timer overview
<input type="checkbox"/>	Film manager
<input checked="" type="checkbox"/>	Photo Viewer
<input type="checkbox"/>	Subtitle
<input type="checkbox"/>	Language of prog

▶ Function for F2 Timer overview

F2

Special fuctions 2

2 Language of progr.

4 Photo Viewer

5 File manager

9 Timer overview

0 Direct recording

MENU



2) Possible only on sets equipped with this function.

Opening the menu

EPG

MENU



The screenshot shows a TV menu with a 'TV-Menu' sidebar on the left and a main menu area. The sidebar includes options like 'Picture-Volume', 'AV devices', 'Station table', 'Timer', and 'Configuration'. The main menu has two columns of options. The 'Operating' option is highlighted in the bottom right. Below the main menu, there is a summary bar for the 'EPG' settings.

0	Function for F2	0	Subtitle
9	Function for F1	9	Data Logic adjustment
8	EURO sockets	8	CI dialogue via
7	DVB-C	7	EPG settings
6	DVB-T	6	Display configuration ²⁾
5	DVB-S	5	Operating
4	Analog-TV	4	Sound settings
3	Country	3	HiFi output ²⁾
2	Language	2	Time shift
1	Operating	1	Init. prog.position

EPG NextView & DVB-SI Pr selection in stationtable retain
DVB-SI selection TV

18. EPG

EPG (Electronic Program Guide) is an electronic TV guide covering all major channels.

So-called DVB-SI data is transmitted with the TV picture in the TV signal (DVB-S or DVB-C).

DVB-SI (Digital Video Broadcasting-Service Information) is a service provided by different broadcasters. Program details are broadcast digitally by each broadcaster exclusively for those programs it offers.

18.1 Activating the EPG

Factory EPG settings:

- EPG On
- DVB-SI selection TV
- Prog. selection in the channel table all free slots*

*) In the menu, "retain" is displayed, i.e. when you make an adjustment, this change is displayed in plain text after it is confirmed by selecting **OK** in the menu. "Retain" is then displayed in the menu as an indication that the previously confirmed setting has been retained.


Not possible with a set top box

18.2 Collecting EPG data

EPG data is broadcast by each station for its program contents. Information will therefore vary accordingly.

Switch on your TV, so that EPG data can be compiled and/or updated.

While data is being compiled the **orange** LED is lit or "EPG" lights in the display.

 ***After switching on the TV set or if a recording timer has been programmed, the collection of data is interrupted until a switch back occurs to stand-by mode or the recording timer is terminated.***

Please note

All free- to-air stations found are listed in the TV set's station table and shown in the program guide unless you make a different selection in the station table.

The data collection operation is interrupted if:

- the Teletext function is called;
- a recording is programmed in the menu "AV recording";
- a "timer recording" is active or will start within one hour;
- the Teletext function "Subtitles" is activated.

If you switch the TV set to the standby state during the data-collection operation, the green LED lights or "EPG" is displayed to indicate that data collection is still running.

Not possible with a set top box

Opening the menu


18.2 Collecting EPG data

Exclude stations from the EPG TV guide:

You can decide which channels should appear in the EPG program guide.

As a rule, the collection process gathers data for all free channels. The following options are available to exclude selected channels from the EPG program guide:

Solution 1:

- Press the **MENU** key. The TV menu appears on the screen.
- Press the white key  The menu channel table appears with the active program slot selected.
- Press **F2** to permit editing of the channel list.
- Press **▶** to switch to the menu page.
- Using **▲** and **▼** select "Include channel in EPG" and dedeselect rows marked (x) with **OK**.


MENU



F2



F1 

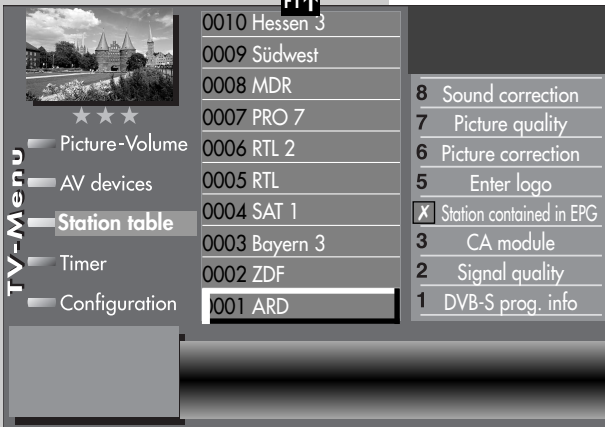


- To exclude other channels from the EPG program guide, use **◀▶▲▼** to select the channel and repeat the procedure.

Not possible with a set top box

18.2 Collecting EPG data

Solution 2:

- Press the **MENU** key  . The TV menu appears on the screen.
- Press the white key. The menu channel table appears with the active program slot selected.
- Follow the steps described under "22. Sort channels" to sort and save your favourite channels so that they appear at the top of the list, for example sort 1-50 and save them.
- Select "EPG Settings" from the Configuration menu and under "Prog. select. in the channel table", select "Channels 1-50" using the **V-/V+** key and save by pressing **OK** .

Not possible with a set top box

Opening the menu

18.3 Using the EPG

EPG

The screenshot shows the EPG menu interface. On the left, there is a vertical 'EPG' label and a list of filter options: 'All programs' (selected), 'Interest', and 'Record'. The main area displays a grid of programs for the week of 03.03. The grid has columns for days (Mo, Di, Mi, Do, Fr, Sa, So) and times. The programs listed are:

	Mo	Di	Mi	Do	Fr	Sa	So	03.03.
	15:00	15:30		16:00		16:30		15:45
1	Das Erste	15:10 - 16:00						Sturm der Liebe
2	ZDF	15:15 - 16:00						Tierisch Kölsch
3	BR 3	15:30 - 16:00						Wir in Bayern
4	RTL	15:00 - 16:00						Verdachtsfälle
5	SAT 1	15:00 - 16:00						Richterin Babara Salesch
6	RTL 2	15:30 - 16:30						Hinterm Sofa
7	PRO 7	14:00 - 16:00						We are Family
8	VOX	15:05 - 16:05						Gilmore Girls
9	Kabel 1	15:30 - 16:00						King of Queens
10	arte	14:45 - 16:55						Kirschblüten
11	N-TV	15:40 - 16:00						Telebörse

When the complete data is available, the EPG TV guide appears after pressing the "EPG" button and shows the program that is currently running in that program position.

F1 Sort the display by station list.

F2 Sort a station by the timetable.

F3 Sort all stations by time

☞ *The last display to be selected is retained after exiting the EPG display*

▲ ▼ Select program.

◀ ▶ Scroll page forwards - backwards

OK Watch the selected program set a reminder

+P/-P Scroll time of day forwards/backwards

After pressing the **F2** button, the station can be changed with the **+P/-P** button.

0-9 Enter a time. Programs can be selected as of the time entered.

blau : Program selection of all programs

gelb : User can set interests – or – program selection in accordance with the set interests of the user

weiß : in F1 status, scroll time of day forwards, In F2 status, scroll stations forwards.

grün : in F1 status, scroll time of day backwards, In F2 status, scroll stations backwards.

rot : The selected program is ready to be recorded (see pg. 89)

EXIT Back to TV picture.

V+ / V- Day of week forwards/backwards.

EXIT

Not possible with a set top box

18.3 Using the EPG

Opening the menu

Select, watch, remind program

A program can be selected in the TV guide with the cursor control key.


- Press the **OK** button and
 - watch the selected program if the program is already running.
 - or set a reminder for it, if the starting time is still in the future. A green checkmark appears behind the starting time.
- Press the **(TEXT)** button to show or hide the content description of the program. It is not possible to display the content description for all programs.

Interests settings

Areas of interest can be set in the EPG TV guide.

To do this:

- Press the yellow button **(M)** or if you want to change interests, press the button **(M)** twice.
- use the cursor control key or the assigned numeric key to access one of the themes.
- Use the cursor control key **▶** to change to the other page.
- Use the cursor control key to access the theme and mark it with the **OK** button (**X**).
- The markings (**X**) can be deleted again with the **OK** button.

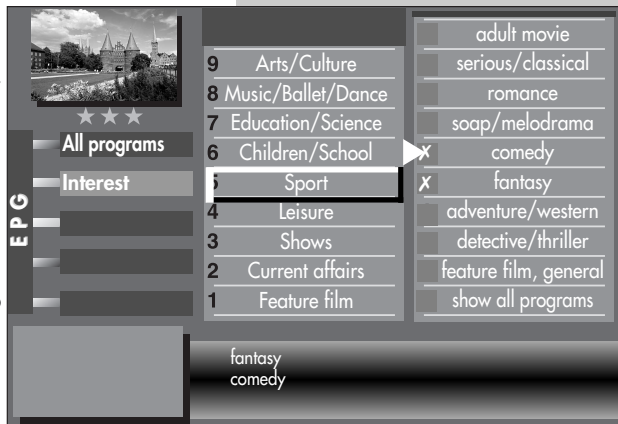

Not possible with a set top box

Opening the menu

18.3 Using the EPG


Program Information (Now Showing: ..)


After switching to a channel, a box is displayed at the bottom of the screen as shown in the picture.



This box contains the following information:

- Channel number (in this example: Pr4).
- Audio mode (stereo/mono).
- Start/end time of the program
- The time bar shows the elapsed program time.
- Broadcasting station
- Program title
- Date and time
- Time details and title of the following program

Press the green key  to view additional information about the programme currently showing, provided the selected station broadcasts such information.

Repeatedly press the green key  to view additional information about the following program, provided the selected station broadcasts such information.



EXIT

This information can also be accessed while a program is running.

To hide the information, press **EXIT**.

Not possible with a set top box

18.3 Using the EPG Recording a Program


Opening the menu

Selecting a program for recording:


If you have a video recorder with the dialogue system (QLink, Easylink... see page 119), the EPG permits you to start a recording by pressing a single key.

- Press the "EPG" key to open the EPG.
- Use the cursor control key to select the programme you wish to record.


If a **video recorder with dialogue system** is connected (see also Section 30):

- Switch on the video recorder.
- Insert a cassette.
- Press the red key  on the remote control.

If a **normal video recorder** is connected:

- Switch on the video recorder.
- Insert a cassette.
- Press the red key  on the remote control to program the TV timer (see also "Direct recording OTR").
- On the AV program position of the video recorder, program a timer with the data and time of the program which will be provided by the TV timer.

EPG

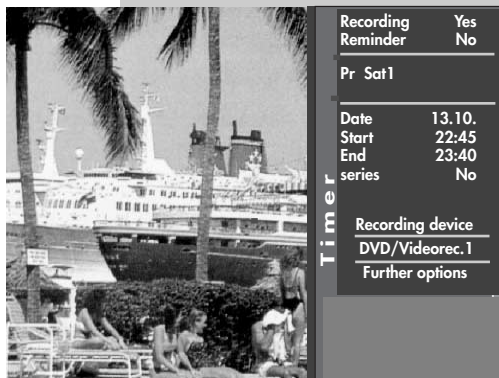

Not possible with a set top box

Opening the menu

MENU



2



19. Setting the Country and Language

The menu items "Language" and "Country" are not available in a 2 ** menu.

Selecting the language in the TV menu



You can select any of the available languages for the TV menu. All texts in the menu and in the help screen (Information) are then displayed in the selected language.

Setting the country

After installation of the TV set, you must enter the country in which it is installed (such as Great Britain) in order to assign certain basic settings (such as the channel assignments, the order in which the stations are stored, etc.).

Setting language and country:

- Press the **MENU** key to open the TV menu.
- Press the red key to open the menu "Configuration".
- Use the corresponding **numeric keys** to select "Language" or "Country".
- Press the **OK** key and then use the cursor control key to select the desired language or country.
- Press the **OK** key to confirm your selection.

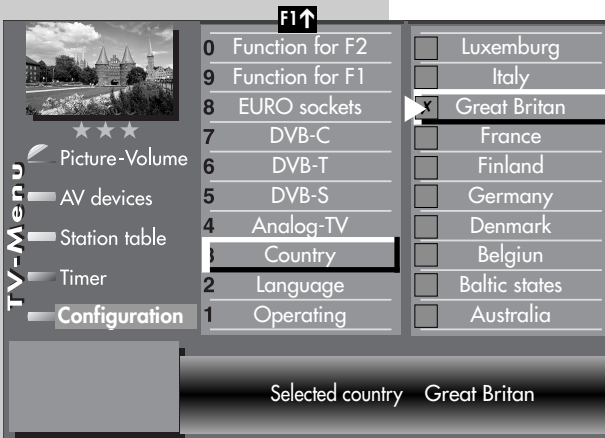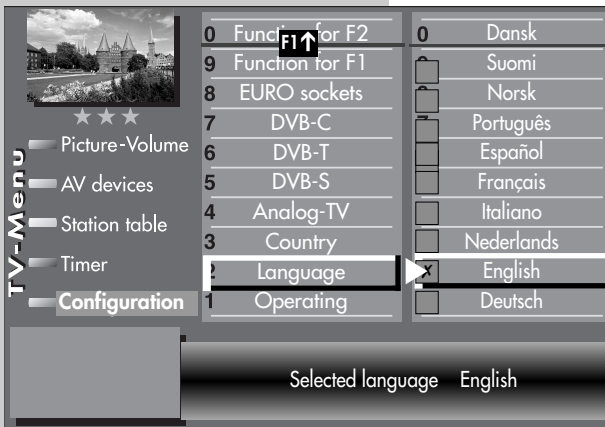

EXIT

- Press the **EXIT** key to close the TV menu.

20. Setting Stations

Setting the reception mode

This TV set is equipped for up to four different types of reception, depending on the configuration or retrofitting:

Analogue TV: The broadcasting technology which has been used for many years. The signals can be received via a rooftop antenna or a cable.

DVB-T: The new digital broadcasting technology whose signals can be received via an existing (analogue) rooftop antenna or an indoor antenna (depending on the strength of the available signal). For more details, please consult your local TV dealer or search for "DVB-T" in the Internet.

DVB-C: The new digital broadcasting technology whose signals are received via a cable connection. For further details, please consult your local cable provider or TV dealer or search for "DVB-C" in the Internet.

DVB-S: The digital broadcasting technology that can be received via a satellite. Ask your local TV dealer about it, or find out more at "www.lyngsat.de".


Select the reception mode to match the broadcasting technology available in your area.

Setting the reception mode

- Press the **(MENU)** key to open the TV menu.
- Press the red key **(*)** to open the menu "Configuration".
- Use the corresponding numeric key to select the appropriate reception mode "Analogue TV", "DVB-T", "DVB-C" or "DVB-S".

Opening the menu

(MENU)

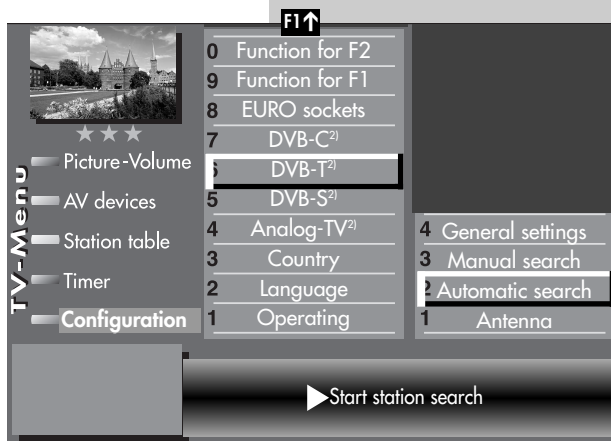


2) Possible only on sets equipped with this function.

Opening the menu

MENU



4

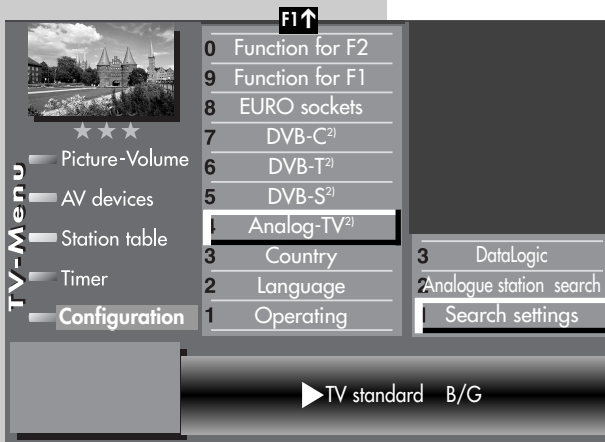

EXIT

20.1 Setting Stations

TV-Standard²⁾ for analogue stations

Various TV standards for picture and sound are used in different countries. If the wrong TV standard is selected, you will not be able to hear the sound, or it will be distorted. The TV standard "L" also uses a different standard for transmission of the picture. The TV standard must therefore be set before you execute a station search.

The TV set is set in the factory to the TV standard B/G.

Setting the TV standard²⁾

- Press the **MENU** key to open the TV menu.
- Press the red key to open the menu "Configuration".
- Use the corresponding numeric key (in the example: **4**) to select "Analogue TV".

- The menu item "Search settings" is already selected.
- Press the **OK** key and, in the setting window, use the **V-/V+** key to select the desired TV standard.
- Press the **OK** key to confirm your selection.
- Press the **EXIT** key to close the TV menu.

The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

2) Possible only on sets equipped with this function.

20.1 Setting Stations

Analogue TV

Opening the menu

Terrestrial station search

The terrestrial station search automatically searches the entire range of available reception frequencies for stations. All stations which are found are placed in the station table which is displayed at the end of the search operation. If you are not satisfied with the order in which the stations are displayed, you can move them to other positions or delete unwanted stations (see Section 22., "Sorting stations").


Executing a terrestrial station search

- Press the **MENU** key to open the TV menu.
- Press the red key ***** to open the menu "Configuration".
- Use the corresponding **numeric key** (in the example: **4**) to select "Analogue TV".
- Use the corresponding **numeric key** (in the example: **2**) to select "Terr. station search".
- Press the **OK** key and, in the setting window, confirm the menu item "Start station search" by pressing the **OK** key.
- The TV set starts to search for available stations. A station table with the newly found stations is displayed on the left half of the screen. If a station table already existed before the search, the newly found stations are automatically appended after the last existing station.
- After completion of the search, all stations which have been found are sorted.
- You can delete any unwanted stations from the station table by selecting them with the cursor control key and pressing the **↵** key.

MENU



4

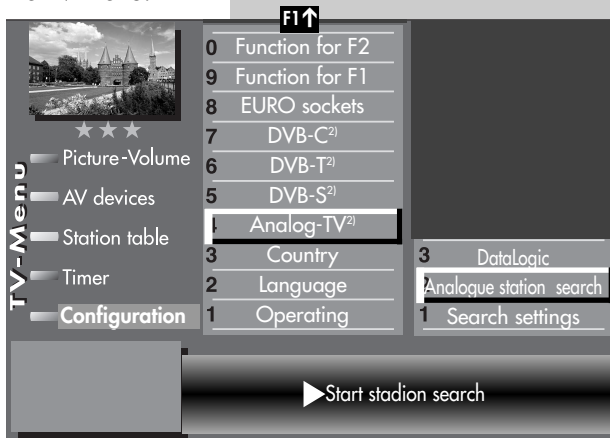

2



The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

2) Possible only on sets equipped with this function.

Opening the menu


MENU



F2



6

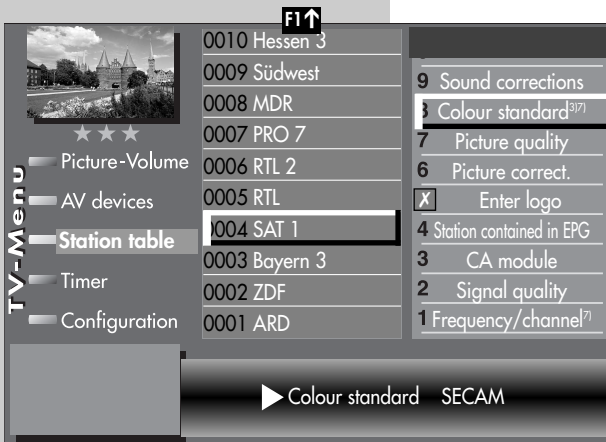

EXIT

The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

20.1 Setting Stations



Colour standard for analogue stations

The TV set will normally detect the colour standard automatically.

If this automatic selection does not provide satisfactory results (which should happen only rarely), you can select the colour standard manually for each program position.

The colour standard is set in the factory to "Automatic".

Setting the colour standard

- Press the **MENU** key to open the TV menu.
- Press the white key  to open the station table.
- Press the **F2** key to enable editing of the station table.
- Use the cursor control key to select the program position whose colour standard you wish to change.
- Press the cursor control key  to move to the left column.
- Use the corresponding numeric key (in the example: **9**) to select "Colour standard".
- Use the **V-/V+** key to select the desired colour standard, or to step through the available colour standards until the picture is displayed clearly.
- Press the **OK** key to confirm your selection.
- Press the **EXIT** key to close the TV menu.

3) See glossary for an explanation.

7) Available only for analogue stations

20.2 Setting Stations

DVB-T, Antenna supply voltage²⁾

With this menu item, you switch the supply voltage for a DVB-T antenna on or off.

On: The antenna supply voltage is constantly on (Select this setting if you have a TV-Set with two DVB-T-Tuners but only one active antenna or if you receive also analog stations via the active antenna).

Switched: The antenna supply voltage is only active for DVB-T programs (e.g. for controlling a relay to switch between DVB-T-antenna and broadband cable, if they coexist).

Off: For a passive antenna or a community antenna

Setting the antenna supply voltage

- Press the **MENU** key to open the TV menu.
- Press the red key ***** to open the "Configuration" menu.
- Use the corresponding numeric key (in the example: **6**) to select the function "DVB-T".
- Press the **OK** key and, in the setting window, use the **V-/V+** key to select the antenna supply voltage.
- Press the **OK** key to save the new settings.
- Press the **EXIT** key to close the TV menu.

Opening the menu

MENU



6



EXIT

²⁾ Possible only on sets equipped with this function.

Opening the menu

20.2 Setting Stations

Automatic DVB-T station search²⁾

The DVB-T station search operation searches the entire frequency band for **TV and radio stations**. All stations which are found are placed in separate TV and radio station tables. See Section 25. for details of DVB radio mode.

If you are not satisfied with the order in which the stations are displayed, you can move them to other positions or delete unwanted stations (see Section 22. Sorting stations).

MENU



6

Executing the automatic station search

- Press the **MENU** key to open the TV menu.
- Press the red key to open the menu "Configuration".
- Use the corresponding **numeric key** (in the example: **6**) to select "DVB-T".



- Make a selection with the assigned numeric key, in the example **2** "Automatic search".

- Press key **OK** and confirm the question about the station search with the corresponding numeric key:

1 free-to-air programs³⁾

2 all programs³⁾

3 free + CICAM programs³⁾

2



After pressing the corresponding numeric key the program search begins.

2) Possible only on sets equipped with this function.
3) See glossary for an explanation.

20.2 Setting Stations

Manual DVB-T station search²⁾

Opening the menu

For a manual station search, you must know the channel number or the frequency of the station you wish to find.

Executing the manual search

- Press the **MENU** key to open the TV menu.
- Press the red key ***** to open the menu "Configuration".
- Use the corresponding **numeric key** (in the example: **6**) to select "DVB-T".
- In the setting window "Antenna", you can switch the supply voltage for an antenna on or off with the **V-/V+** key (see also page 89).
- Make a selection with the assigned numeric key (in the example **3**), "Manual search".
- Enter the channel number or frequency in the setting window with the numeric keys. If additional data of a program is known, then select the "Mod- parameter" menu item and change the setting to "manual" using the **V-/V+** key. Additional data can now be entered.

- After entering the program data with the cursor control key, select "Start program search".
- Press key **OK** and confirm the question about the station search with the corresponding numeric key:

1 free-to-air programs³⁾

2 all programs³⁾


3 free + CICAM programs³⁾.

After pressing the corresponding numeric key the program search begins.

MENU



6

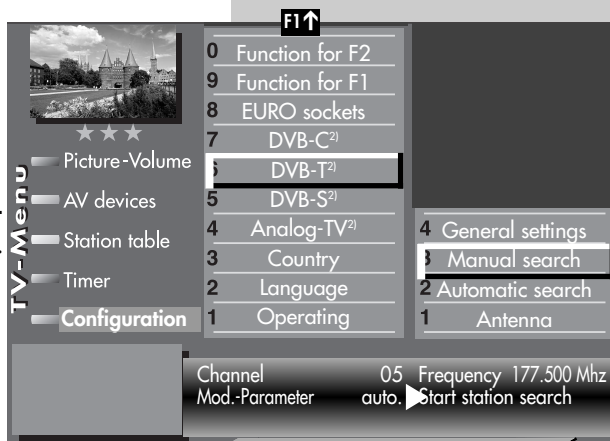

Transmission 8k Mode Modulation 64 QAM
Mod. Parameter manuell Guard Intervall 1/8
Code rate 3/4 Start station search

3



2) Possible only on sets equipped with this function.
3) See glossary for an explanation.

Opening the menu

20.3 Setting Stations

Automatic DVB-C station search²⁾

The DVB-C station search operation searches the entire frequency band for **TV and radio stations**. All stations which are found are placed in separate TV and radio station tables. See Section 25 for details of DVB radio mode.

If you are not satisfied with the order in which the stations are displayed, you can move them to other positions or delete unwanted stations (see Section 22.Sorting stations.

Executing the automatic search

- Press the **MENU** key to open the TV menu.
- Press the red key ***** to open the menu "Configuration".

- Press the numeric key **7** to select "DVB-C".
- The cursor is on the menu line "Automatic search".
- Press key **OK**. The cursor is on symbol rate 1.

ⓘ *The most common symbol rates³⁾ were set in the factory. Changing the setting is normally unnecessary. If this setting of the symbol rates does not lead to the desired result, other symbol rates must be set and saved*


*with the key **OK**. Ask your cable network provider or the person setting up the system about this. Fine search is required if the stations are not tuned to the channel centre.*

- Select the menu line "Start program search" with the cursor control key **▶**.
- Press key **OK** and confirm the question about the station search with the corresponding numeric key:
 - ① free-to-air programs³⁾
 - ② all programs³⁾
 - ③ free + CICAM programs³⁾.After pressing the corresponding numeric key the program search begins.

MENU



7

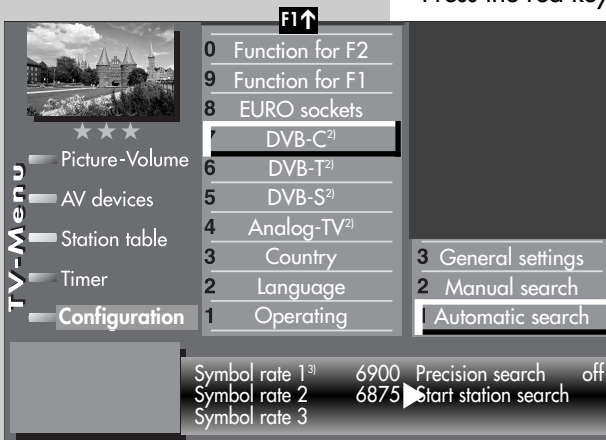

²⁾ Possible only on sets equipped with this function.
³⁾ See glossary for an explanation.

20.3 Setting Stations


Manual DVB-C station search²⁾

Opening the menu

For a manual station search, you must know the channel number or the frequency of the station you wish to find.

Executing the manual search

- Press the **MENU** key to open the TV menu.
- Press the red key ***** to open the menu "Configuration".
- Use the corresponding **numeric key** (in the example: **7**) to select "DVB-C".
- Make a selection with the assigned numeric key, in the example **2** "Manual search".
- The cursor is on "Channel".
- Enter the channel number or special channel number or frequency in the setting window with the numeric keys. If additional data of a program is known, then select the corresponding menu items "Modulation" and "Symbol rate" and change the setting using the **- +** key or with the numeric keys.

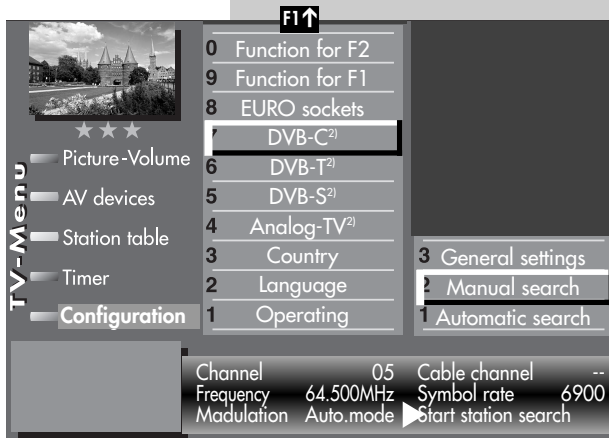

- Select "Start program search" with the cursor control button in the setting window.
- Press key **OK** and confirm the question about the station search with the corresponding numeric key:
 - 1 free-to-air programs³⁾
 - 2 all programs³⁾
 - 3 free + CICAM programs³⁾
 After pressing the corresponding numeric key the program search begins.

MENU



7

2




2) Possible only on sets equipped with this function.
3) See glossary for an explanation.

Opening the menu

MENU



5

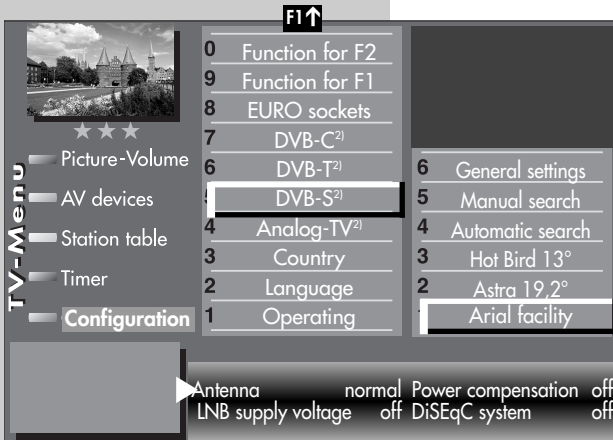

EXIT

20.4 Set-up of Sat System Antenna system²⁾

i The sat. antenna system must be selected for the TV set in the "Configuration" menu.

Antenna

Normal

In the "Normal" setting, the DVB-S receivers in the LCD TV set each have a separate antenna cable.

Tandem

In the "Tandem" setting, the two DVB-S receivers have one feed line and are connected together with a splitter.

Single Cable (Single Cable Distribution SDC)

With the "Single cable" setting, the DVB-S receivers have one feed line. The program selection is preset according to the structural conditions of the satellite system.

No antenna control signals can be sent over the feed line.

Unicable

The antenna system with a channel router feeds one cable and is designed to receive the full program selection. For this purpose, each receiver is assigned one specific frequency in the satellite frequency range (950-2150 MHz). The channel router has multiple fixed frequencies (SCR-Freq.) saved in a frequency bank. See the user's guide for the channel router.


👉 *The satellite antenna splitter 010ZR1199 is required for all satellite single cable solutions.*

²⁾ Possible only on sets equipped with this function.

20.4 Set-up of satellite system Unicable²⁾


Opening the menu


Each DVB-S receiver must be assigned a subscriber number (SCR no.) and the associated subscriber frequency (SCR freq.) from the frequency bank (see channel router or its user's guide)

 **Each subscriber number and subscriber frequency may only be assigned once.**

The DVB-S receiver in the TV set requests the data for the desired program from the channel router.

Setting the SCR no. and SCR freq.

- Call up the TV menu with the **(MENU)** button
- Use the red button  to open the "Configuration" menu.
- Select the menu option "DVB-S" with the assigned numeric buttons. In the example it is **5**.
- Press the **OK** button and the "Atrial facility" setup window opens.
- Use the cursor control buttons to select "Antenna" and then the **V-/V+** button to select "Unicable".
- Use the cursor control buttons to select the SCR data for each receiver.
- Enter the required data with the numeric buttons.
- Confirm the setting by pressing the **OK** button.
- Clear the "TV menu" with the **(EXIT)** button.

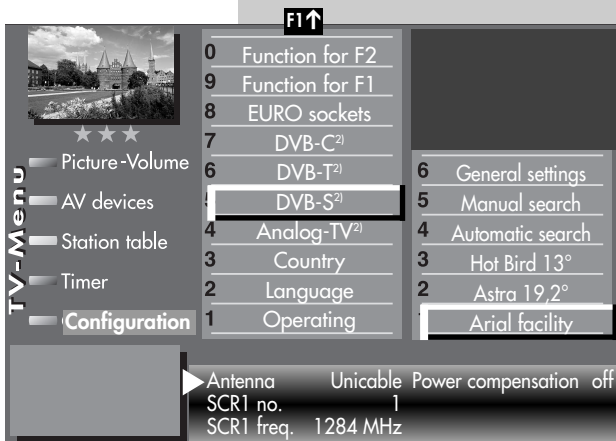

(MENU)



5

F1↑



(EXIT)


²⁾ Possible only on sets equipped with this function.

Opening the menu

MENU



5

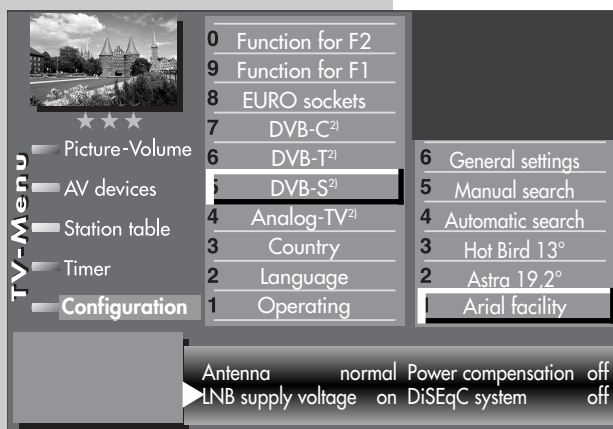

EXIT

20.4 Set-up of satellite system LNB supply voltage²⁾

The settings of the satellite antenna system must be entered in the menu "Configuration" so that the TV set knows them.

- i These settings should always be made in the order in which they are shown in the right-hand column of the menu, starting at the bottom, i.e. LNB supply voltage, DiSEqC system, etc.

LNB supply voltage

The LNB voltages for selection of the polarisation (horizontal H = 18V, vertical V = 14V) are already set and do not normally need to be changed.

If the cable to the satellite antenna is very long, the voltages reaching the LNB may be too low. In such cases, the voltages can be increased by 1 V by activating the line-compensation function.

If any changes should be necessary, they can be made as follows.

Change settings

- Call up the TV menu with the **MENU** button.
- Use the red button ***** to open the "Configuration" menu.
- Select the menu option "DVB-S" with the assigned numeric buttons. In the example it is **5**.
- Press the **OK** button and the "Aerial facility" setup window opens.
- Use the cursor control buttons to select "LNB supply voltage" and then use the **V-/V+** button to set the LNB supply voltage on or off.
- Confirm the setting by pressing the **OK** button.
- Press the **EXIT** key to close the TV menu.

☞ If the TV set is connected to a community antenna, the LNB supply voltage must always be set to "Off".

²⁾ Possible only on sets equipped with this function.

20.4 Set-up of satellite system DiSEqC system²⁾

Opening the menu

Section 21.4 only in the case of corresponding equipment or conversion.

"DiSEqC" makes it possible to control the satellite antenna digitally via the existing antenna cable and is a prerequisite for the reception of signals from more than two satellites (e.g. Astra, Eutelsat, Hotbird).

If you wish to receive signals from at least three satellites (e.g. ASTRA 19.2°, Eutelsat 16°, Hotbird 13°) the antenna system can be controlled only with the aid of "DiSEqC".

This menu item is not available in a 2 menu.**


Switching DiSEqC on and off

- Press the **(MENU)** key to open the TV menu.
- Press the red key to open the menu "Configuration".
- Press the appropriate numeric key (in this example **5**) to select "DVB-S".
- Press the **OK** button and the "Ariel facility" setup window opens.
- Use the cursor control buttons to select "DiSEqC" and then use the **V-/V+** button to set DiSEqC on or off.
- Press the **OK** key to confirm the new setting.
- Press the **(EXIT)** key to close the TV menu.

(MENU)



5

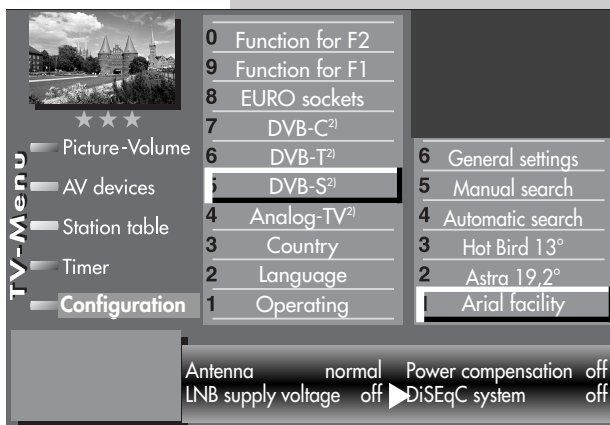

(EXIT)

²⁾ Possible only on sets equipped with this function.


Opening the menu

MENU



5

2

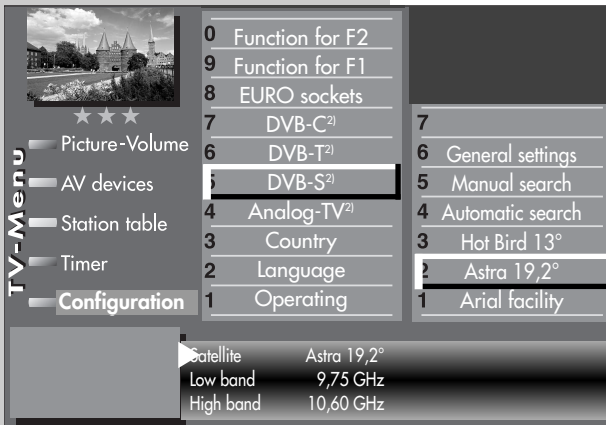

EXIT

20.4 Set-up of satellite system Selecting satellites²⁾

Section 20.4 only in the case of corresponding equipment or conversion.

You can set up to four satellites in the menu "Configuration". No satellite is set in the factory.


The LNB frequency is used to switch between the high and low frequency bands. The default frequencies **Low band 9.75 GHz** and **High band 10.60 GHz** are set in the factory.

Selecting satellites

- Press the **MENU** key to open the TV menu.
- Press the red key to open the menu "Configuration".
- Press the appropriate numeric key (in this example **5**) to select "DVB-S".
- Press the appropriate numeric key (in this example **2**) to select "Satellite A".
- Use the **V-/V+** key to select the desired satellite. The common satellites are called up in order and the accompanying symbol rates set automatically.
- Use the cursor control key to select "Low band" or "High band". The settings depend on the components installed in the satellite antenna. For the correct settings, please consult the data sheet or the label of the LNB(s) being used.
- Press the **OK** key to confirm the new settings.
- Press the **EXIT** key to close the TV menu.


²⁾ Possible only on sets equipped with this function.

20.5 Setting the stations automatic search²⁾



 **Section 20.5 only in the case of corresponding equipment or conversion.**

The reception area is searched for TV and radio stations in the DVB-S program search. The programs found are stored in a TV and radio station table. See Chapter 25 for DVB radio mode.

You can move or delete stations that are found if you are not satisfied with the order. See Chapter 22 "Sort stations".

 **The search only works properly if the LNB frequencies have been correctly set and saved.**

Carry out automatic search

- Call up the TV menu with the key **MENU**.
- Use the red button  to open the "Configuration" menu.
- Make a selection with the assigned numeric key **5**, in the example "DVB-S".
- Make a selection with the assigned numeric key **4** in the example "Automatic search".
- Select the desired satellites in the setting window with the **V-/V+** key if a selection is possible.
- Select the menu line "Start program search" with the cursor control key .
- Press key **OK** and confirm the question about the station search with the corresponding numeric key:
 - 1 free-to-air programs³⁾
 - 2 all programs³⁾
 - 3 free + CICAM programs³⁾.

After pressing the corresponding numeric key the program search begins.

Opening the menu

MENU



5

4



EXIT

2) Possible only on sets equipped with this function.

20.5 Setting the stations Automatic search²⁾

A search is carried out for the programs and presented in a station table.

If necessary, the stations can also be sorted, moved, or deleted. See Chapter 22 for this.

20.5 Setting the stations Manual search²⁾

For the manual search, you must know the frequency, the symbol rate and the polarisation of the station for which you want to search.


Executing the manual search

- Press the **MENU** key to open the TV menu.
- Press the red key ***** to open the menu "Configuration"
- Press the appropriate numeric key (in this example **5** to select "DVB-S".
- Select the menu option "Manual search" with the assigned numeric keys. In the example it is **5**.
- The cursor then moves to "Satellite". If more than

20.5 Setting the stations Manual search²⁾

one satellite is available, use the **V-/V+** key to select the desired satellite.

- In the setting window, use the cursor control key **▶** to select the menu line "Frequency".
- Use the numeric keys or the **V-/V+** key to set the frequency.

 **For a HD station search, the information for the DVB system (e.g. DVB-S2) must also be entered.**

- If all the data has been entered, use the cursor control key to access the "Start program search" menu item and confirm with the key **OK**.

- Press key **OK** and confirm the question about the station search with the corresponding numeric key:

- 1 free-to-air programs³⁾
- 2 all programs³⁾
- 3 free + CICAM programs³⁾.

After pressing the corresponding numeric key the program search begins.

If necessary, the stations can also be sorted, moved, or deleted. See Chapter 22 for this.


Opening the menu

MENU



5

5

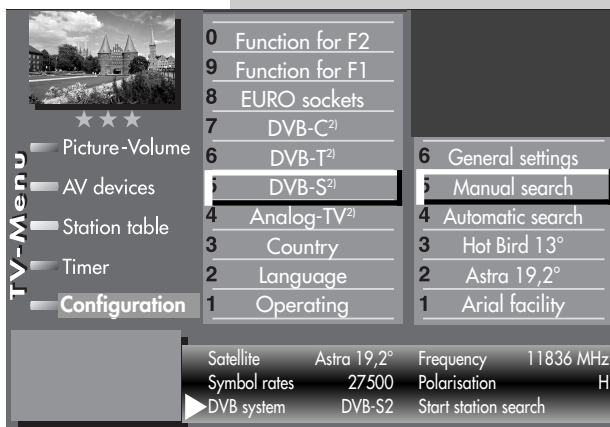

EXIT

2) Possible only on sets equipped with this function.

3) See glossary for an explanation.


Opening the menu

MENU



5

6

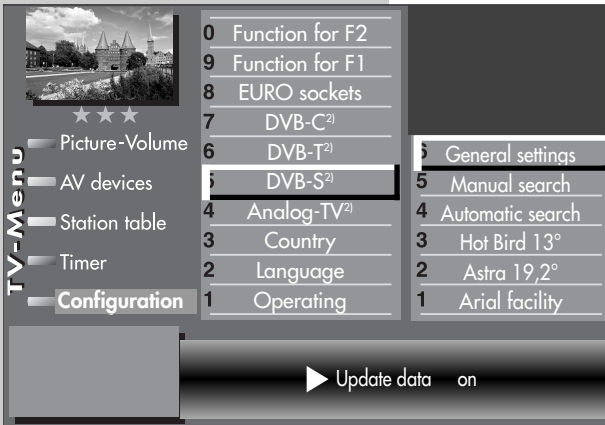


EXIT

20.6 Setting the stations Updating the data²⁾

With the menu item, "General settings", you can specify whether or not the data are to be saved in the non-volatile memory of the TV set when transmission parameters are changed.

This update function applies to stations which use different transmission parameters at different times of the day, such as when they transmit regional programs.

Setting the data update function

- Press the **MENU** key to open the TV menu.
- Press the red key  to open the menu "Configuration".
- Press the appropriate numeric key (in this example **5**) to select "DVB-S".
- The cursor is located on the line "Arial facility".
- Press the appropriate numeric key (in this example **6**) to select "General settings".
- In the setting window, use the **V-/V+** key to set "Update data" to "On".



- Press the **OK** key to confirm the new setting.
- Press the **EXIT** key to close the TV menu.

²⁾ Possible only on sets equipped with this function.

20.7 DVB Prog. Info. signal quality

The displays for the DVB prog. info or signal quality are only for informational purposes. DVB prog. info. shows the data for the displayed station.

The signal quality display is not directly related to the picture quality. The bit error rate fluctuates between the transponders and increases if a rain front is approaching, for example.


- Select the program position for the DVB prog. info or signal quality that is to be displayed.
- Press the **(MENU)** key.
The TV menu appears on the screen.
- Press the white key 
The station table menu appears on the screen and the active program position is selected.
- Press the **(F2)** button.
- Press the cursor control key  and switch to the menu page.
- Use the assigned numeric keys to select the DVB prog. info. or the signal quality menu option.
- Clear the "TV menu" with the **(EXIT)** button.

Opening the menu

(MENU)



F2

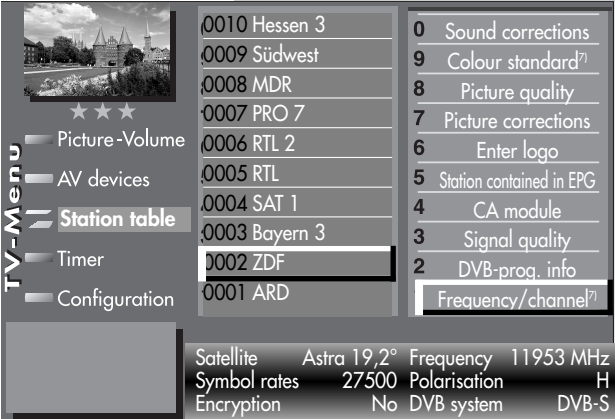
TV-Menu

- Picture-Volume
- AV devices
- Station table**
- Timer
- Configuration

0010	Hessen 3
0009	Südwest
0008	MDR
0007	PRO 7
0006	RTL 2
0005	RTL
0004	SAT 1
0003	Bayern 3
0002	ZDF
0001	ARD

0	Sound corrections
9	Colour standard ⁷⁾
8	Picture quality
7	Picture corrections
6	Enter logo
5	Station contained in EPG
4	CA module
3	Signal quality
2	DVB-prog. info
	Frequency/channel ⁷⁾

Satellite Astra 19,2° Frequency 11953 MHz
 Symbol rates 27500 Polarisation H
 Encryption No DVB system DVB-S

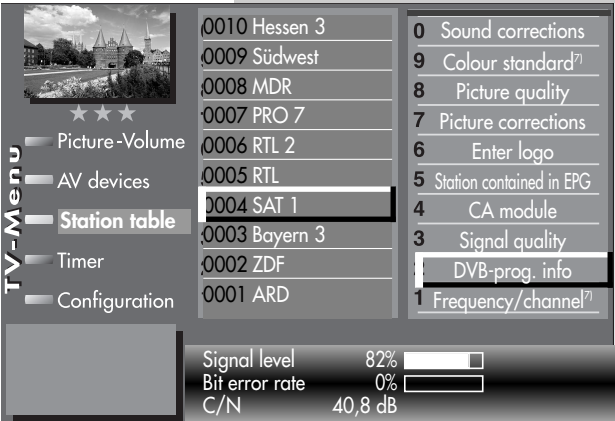



TV-Menu

- Picture-Volume
- AV devices
- Station table**
- Timer
- Configuration

0010	Hessen 3
0009	Südwest
0008	MDR
0007	PRO 7
0006	RTL 2
0005	RTL
0004	SAT 1
0003	Bayern 3
0002	ZDF
0001	ARD

0	Sound corrections
9	Colour standard ⁷⁾
8	Picture quality
7	Picture corrections
6	Enter logo
5	Station contained in EPG
4	CA module
3	Signal quality
	DVB-prog. info
1	Frequency/channel ⁷⁾

Signal level 82% 
 Bit error rate 0% 
 C/N 40,8 dB

7) Available only for analogue stations

Various pay TV stations broadcast portal stations. These portal stations are filled with sub-stations or optional channels.

In station search (see ch. 20) in "Search settings" the setting "all", "only free" or "free+CICAM" must be set so that these stations can be found too.




10	Kabel 1
9	Nord 3
8	RTL
7	PRO 7
6	Nord 3
5	PRO 7
4	SAT1
3	Portalsender
2	ZDF
1	ARD
56	Hessen 3
55	SW-BW
54	N-TV
53	West 3
52	Phönix

After a station search, the portal stations and the accompanying optional channels (may also be identified in the station table as SID=xy) will be shown in the station table on various program places.

We have programmed a simple way for you to find optional channels quickly.

If you select a portal station via the station table (see p. 11), a suitcase symbol appears next to the station logo.



This suitcase can be opened by pressing the white button  repeatedly. All optional channels included in this suitcase then appear in the station table. Other stations are not shown simultaneously.



5	Optionskanal 4
4	Optionskanal 3
3	Optionskanal 2
2	Optionskanal 1
1	Portalsender






 
In this way, you can switch quickly between the optional channels.

21. Station Logo

With the aid of the VPS signal, a station logo with a maximum length of 15 characters is automatically assigned to each station.

If this automatic assignment does not work, or if you want to use a different logo, you can change the setting manually.

Setting the station logo


- Press the **MENU** key.
- Press the white key  to open the "station table".
- Press the **F2** key to enable editing of the station table.
- Select the program position whose logo you wish to change.
- Press the cursor control key  to move to the other column.
- Use the corresponding numeric key (in the example: **5**) to select "Logo input".
- The various letters and digits can be selected with the aid of the cursor control key  .
- You can delete single characters with the red key  or the complete logo with the  key.
- Set the desired logo by repeatedly pressing the various numeric keys. The lowercase letters are displayed after the uppercase letters.
- Press the **OK** key to save the new logo.
- Press the **EXIT** key to close the TV menu.

Opening the menu

MENU



F2

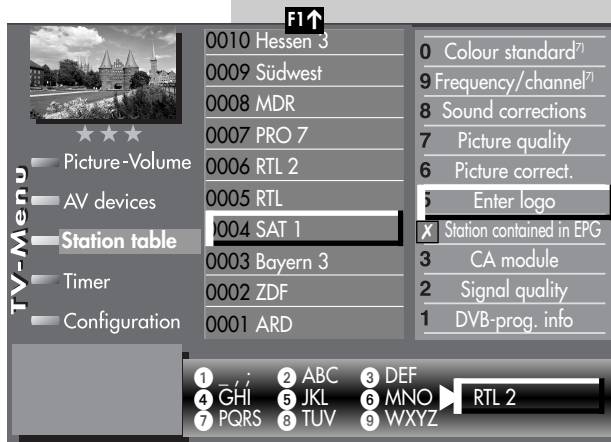

EXIT

The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

7) Available only for analogue stations

Opening the menu

MENU



0010	Hessen 3	0020	BR alpha
0009	Südwest	0019	3 SAT
0008	MDR	0018	Kinderkan.
0007	PRO 7	0017	FRANKEN
0006	RTL 2	0016	TELE-5
0005	RTL	0015	9LIVE
0004	SAT 1	0014	SuperRTL
0003	Bayern 3	0013	Kabel 1
0002	ZDF	0012	VOX
0001	ARD	0011	West 3

Select stations with (hold down to select a block). Select new position with the cursor.
 move/copy, delete.
Delete all marks with .



EXIT

22. Sorting stations, individual

Individual stations in the station table can be moved, copied or deleted.

Copying, moving, deleting individual stations

- Call up the TV menu with the **MENU** button.
- Use the white button to retrieve the station table.
- Use the cursor control key to select a program position that is to be copied, moved, or deleted.
- Press the **OK** button and mark the program position (prog. 0006 in the example).

Copy:

- When copying, afterwards use the cursor to select the program position where the station is to be inserted.
- Use the + key to copy the station

Move :

- When moving, select the program position where the program position is to be moved.
- Use the – key to move the station.

Delete:


- If the station is to be deleted, then press the I button.
- When you are finished, clear the “TV menu” using the **EXIT** button.

22. Sorting stations, block-by-block

Opening the menu

Individual or multiple stations can be moved, copied or deleted in the station table.

Copying, moving, deleting multiple stations

- Call up the TV menu with the **MENU** button.
- Use the white button  to retrieve the station table.
- Use the cursor control key to select the first program position that is to be copied, moved, or deleted.
- Press the **OK** button and mark the program position (prog. 006 in the example).
- Use the cursor control key to select the last program position that is to be copied, moved, or deleted.
- Press down the **OK** button until all stations between the first and last station position are marked.


Copy:


- When copying, afterwards use the cursor to select the program position after which the stations are to be inserted.
- Use the **+** key to copy the block of stations.

Move:





- When moving, afterwards use the cursor to select the program position after which the stations are to be re-inserted.
- Use the **-** key to move the block of stations.

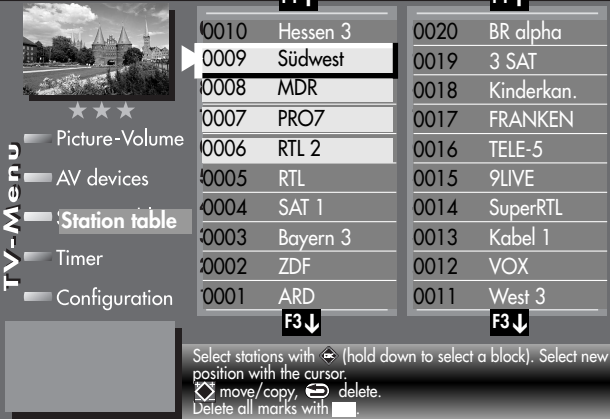Delete:

- If the marked block of stations is to be deleted, then press the  button.
- When you are finished, clear the "TV menu" with the **EXIT** button.



Station ID	Station Name
0010	Hessen 3
0009	Südwest
0008	MDR
0007	PRO7
0006	RTL 2
0005	RTL
0004	SAT 1
0003	Bayern 3
0002	ZDF
0001	ARD
0020	BR alpha
0019	3 SAT
0018	Kinderkan.
0017	FRANKEN
0016	TELE-5
0015	9LIVE
0014	SuperRTL
0013	Kabel 1
0012	VOX
0011	West 3



Select stations with  (hold down to select a block). Select new position with the cursor.
 move/copy,  delete.
Delete all marks with .

MENU



EXIT

Opening the menu

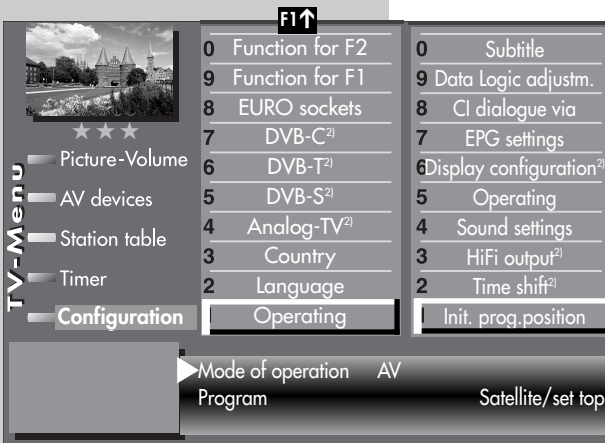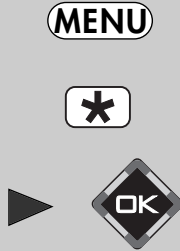

EXIT

The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

2) Possible only on sets equipped with this function.

23. Initial Program Position

You can define an initial program position for this TV set. The preferred use for the initial program position is to switch to the AV program position when using an external receiver or to set a favourite channel as the start-up station when the set is switched on

Initial program position settings

This menu option cannot be set in a 2 menu**

• Press the **MENU** key to open the TV menu.

• Use the red button to open the "Configuration" menu.

• Use the cursor control key to select "Operating" and "Init. prog. position" and press **OK**.

• The cursor is on the "Mode of operation" menu option. You can use the **V-/V+** key to set the desired mode of operation (TV, Radio or AV).


• Then select "Program". If you have selected TV as the mode of operation, you can now set the desired program (e.g. 004 for "RTL"). With the AV mode of operation, you can select an external AV connection like EURO 1, EURO 2²⁾, HDMI, etc. as an external AV connection.

• Press the **OK** button to save the new settings.

• Clear the "TV menu" with the **EXIT** button.


If the TV set is now switched on with the power button on the set or the button on the remote control, the preset initial program position appears.


24. Display Configuration²⁾

 **This menu item is not available in a 2 ** menu.**

By way of an option, the green display on the front of the TV set (depending on TV set configuration) can also be used for displaying the **time** or the **station logo**.

Setting the display configuration²⁾

- Press the **(MENU)** key to open the TV menu.
- Press the red key **(*)** to open the menu "Configuration".
- Use the cursor control key  to select "Initial program position".
- Use the corresponding numeric key (in the example: **5**) to select "Display configuration".
- In the setting window, use the **V-/V+** key to select the desired setting.
- Press the **OK** key to save the new setting.
- Press the **(EXIT)** key to close the TV menu.

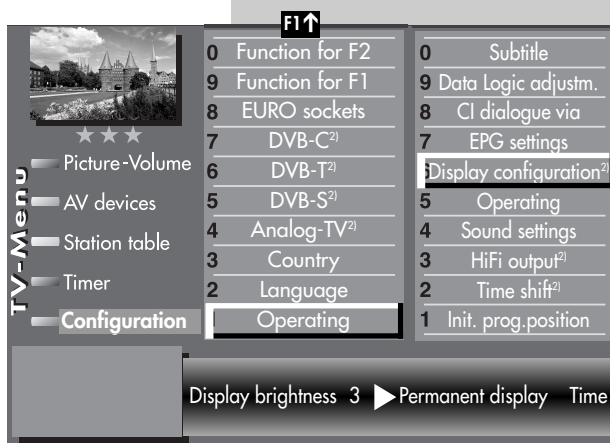

Opening the menu

(MENU)

(*)

 **6**



(EXIT)

The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

2) Possible only on sets equipped with this function.

Opening the menu

TV/R

TV/R

25. DVB Radio Mode

To switch from TV mode to DVB radio mode, press the **TV/R** key.


The screen is automatically blanked after about 30 seconds.

To switch from DVB radio mode to TV mode, press the **TV/R** key.

Setting DVB radio stations

The available DVB radio stations are automatically detected during a station search (see Section 20) and stored in a separate station table at the operating level for radio mode.

The radio station table can be sorted (see Section 22) and the station logos can be changed (see Section 21).

- 👉 **Chapters 12 / 14 / 15 / 15.2 / 16 special functions, normal/language and 18 to 18.3 also apply to radio programs.**
- 👉 **Note: The screen can be switched on and off manually with the blue key .**

26. Operation without the Remote Control

Operation without the remote control is provided as an emergency measure in case the batteries of your remote control are exhausted or the remote control is not readily available.

Local controls for Axio pro



Local controls for Linus, Sirius



26. Operation without the Remote Control

Local controls for Primus



Local controls for Caleo



Switching on

Press the main power switch on the TV set. After about 30 seconds, the TV set is switched on with program position 1 or the programd initial program position selected.

You can also use the following functions directly on the TV set, without a remote control.

Volume

Press and hold the preselection key **F** until the bar display for the volume appears on the screen. Then press the “-” or “+” button to adjust the volume.

Program selection

Press the - + buttons.

Program selection via program table:

Press preselection key **F** often enough until the program table appears on the screen. Select the program desired with the “-” or “+” key. Press preselection key **F** and make the selection.

Switching from TV to AV program

Press **F** key often enough until the selection table for the AV devices appears. Select the AV device desired with the “-” or “+” key. Press preselection key **F** and adopt the selection.

Switching from AV to TV program









Press preselection key **F** often enough until the selection list for the program table appears. Select the program desired with the “-” or “+” key. Press preselection key **F** and adopt the selection.

27. Scope of Operation

The adjustable scope of operation for the TV set can be a great help in finding your way around the complex operating functions of the TV set.

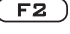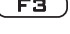
The scope of operation can be set to various levels, which are identified by asterisks.

1 ★ "Just watching TV"- in other words, it is not possible to open the TV menu and only the functions available on the remote control can be used:

- Zapping
- Selection of program positions with the numeric keys, the oval "P+/P-" rocker key or the white key .
- Opening Teletext.
- Displaying help information (INFO).
- Playing back films from a video recorder or DVD player by pressing the "AV" key.
- Selecting "Special functions 1" by pressing the  key.
- Selecting "Special functions 2" by pressing the  key.
- Selecting "Special functions 3" by pressing the  key.
- Selecting connected AV devices by pressing the  key.
- Calling the standard picture functions by pressing the blue key .
- Calling the standard sound functions by pressing the yellow key .
- Calling the "EPG" function with the  key.
- in TV mode: Archive open / in Archive2): Play
- All function keys for PVR can be operated (see too Chapter 3)



If the scope of operation is set to a 1★ menu and you subsequently want to open a menu, then:

- Press and hold the  key for at least five seconds to open the TV menu.
- The menu item "Operation" is automatically selected.

27. Scope of Operation

- Use the **V-/V+** key to select the desired scope of operation and press the **OK** key to save the new setting.

2 ★ ★ This menu permits you to configure the use of the TV set to a certain degree. All of the functions listed for the 1 ★ menu are available and are supplemented by the following functions:

- Childlock
- Timer control (sleep timer)
- Automatic station search
- Transfer of the TV station table from the TV set to a Data Logic video recorder.
- Editing functions in the station table


3 ★ ★ ★ This is the operating scope for persons who are interested in technology who want to be able to use the full range of functions of the TV set.

Setting the scope of operation

- Press the **(MENU)** key to open the TV menu.
- Press the red key **(★)** to open the menu "Configuration".
- Use the cursor control key **▶** to move to the menu line "Initial program position".
- Press the numeric key **5** to select "Scope of operation".
- In the setting window, use the **V-/V+** key to select the desired scope of operation.
- Press the **OK** key to save the new setting.
- Press the **(EXIT)** key to close the TV menu.

Opening the menu

(MENU)

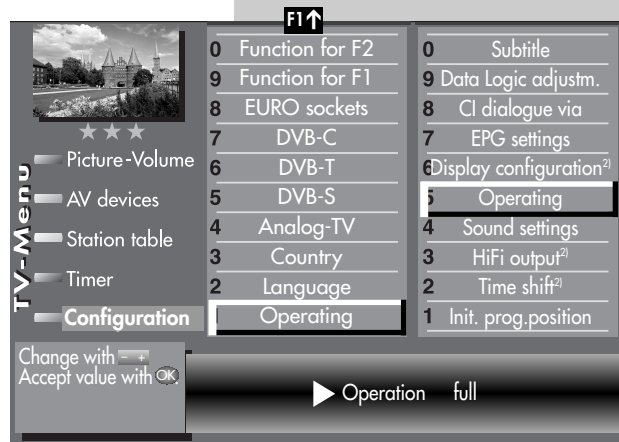

(EXIT)

The number of subjects and sections depends on the selected scope of operation. Depending on the configuration of the TV set, the various menu items may be displayed in a different order and numbered differently.

2) Possible only on sets equipped with this function.

28. Cleaning the TV Set

- ☞ **Before cleaning the set, always switch it off with the mains switch!**
- ☞ **Incorrect treatment and cleaning of the screen surface can cause irreparable damage to it. You should therefore always observe the following instructions for treatment and cleaning of the set.**

Treatment:

Always treat the screen surface very carefully.

Take care not to damage it mechanically by shocks, impact, scratching or scraping.

Keep sharp, pointed and hard objects away from the surface of the screen.

Keep the surface of the screen clean.

For cleaning the case and the screen, use only a soft, dry cloth. For removing stubborn marks, you may moisten the cloth slightly.

Cleaning and care:

The surface of the screen may be cleaned only with a soft, dry cloth (such as a microfleece duster). If any marks cannot be removed with this dry cloth, you may moisten the cloth slightly.

Take care that no water or other liquid can enter the TV set, since this can cause serious damage to the set.

If any liquid or other foreign object (pieces of metal, etc.) enters the set, immediately disconnect the mains plug from the wall outlet.

Never insert your hands or tools into the set, since this may result in electric shocks.

Detaching the front glass on Primus models

Pull the front glass out of the frame on all four corners as far as it will go.

Take out the front glass by lifting it approx. 1.5 cm upwards and at the same time forwards.

Detaching the front glass on Sirius models

The front glass can be taken off frontwards for cleaning. The Sirius 32 has 4 retaining pins and the Sirius 37/42 has 6 retaining pins on the back of the front glass. The front glass should be removed if possible by two persons, by removing the bolts one at a time and taking it off frontwards.

Cleaning

The front glass can be cleaned with a standard glass cleaner.


29. Connections on the Front Side of the Set

Axio pro 26, left side

Axio pro, Caleo, at the right side under the flap

Linus, Sirius, at the front under the flap

Primus, right side

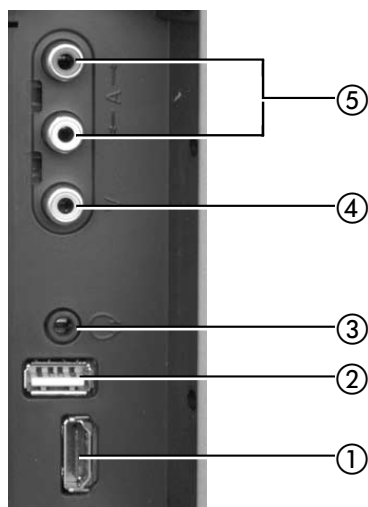

① HDMI connection. Signal type HDMI, (video/audio digital input)


② USB socket


③ Headphone socket, diameter 3.5 mm

④ FBAS/Video in (e.g. digital camera or camcorder)

⑤ Audio in R/L (e.g. camcorder)

29. Connections on the Rear of the Set (covered by a flap) Viewed from below

 With the aid of an optical audio cable ("Toslink" cable, available from your dealer), the digital audio signal (AC3) provided by the TV set can be output to an AV amplifier for multi-channel reproduction

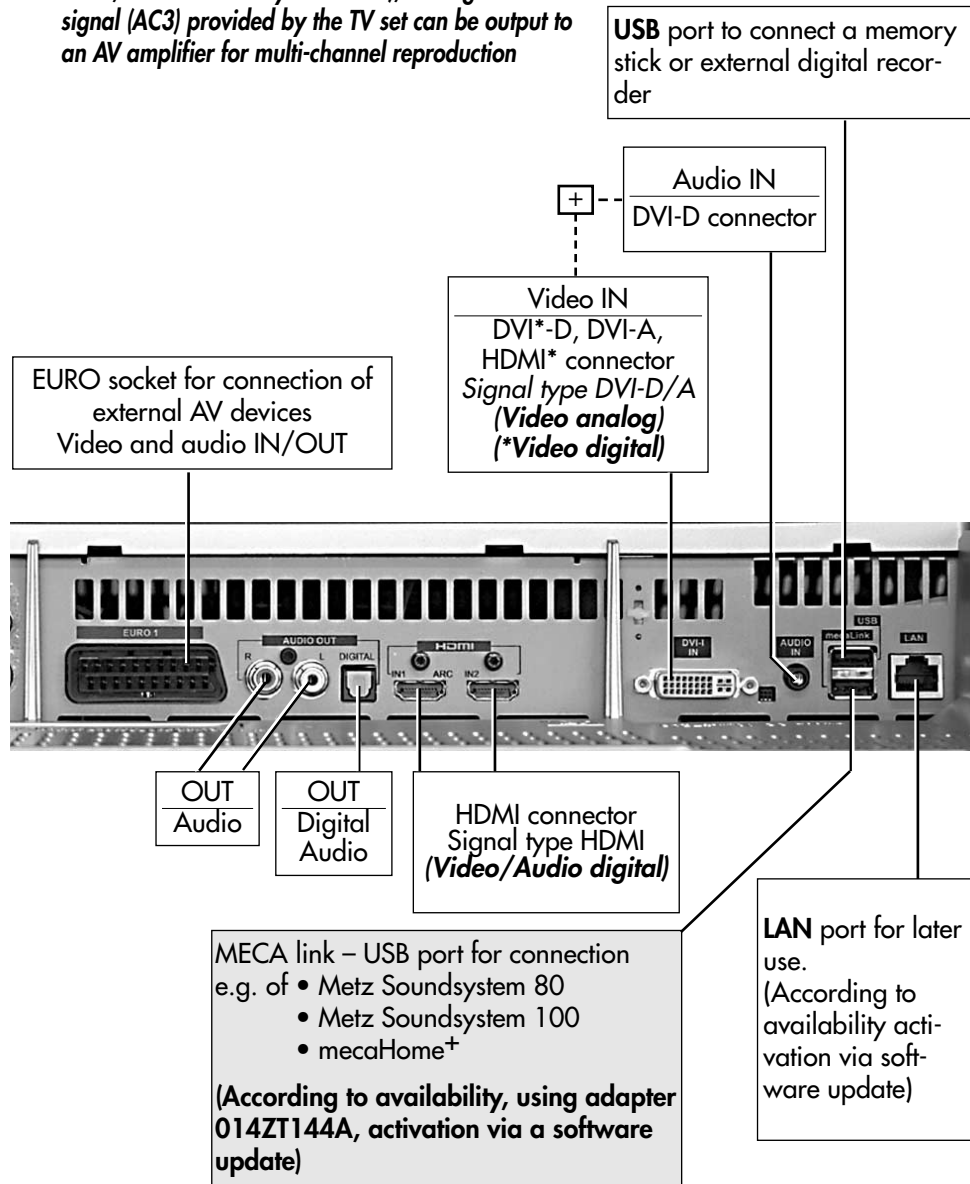

30. Registering AV Devices


Opening the menu

i AV (audio/video) devices are external devices which deliver video and/or audio signals (such as video recorders, DVD players, DVD recorders, etc.) and which can be connected to TV sets.

All commonly available AV devices are listed in the menu "AV devices".

Note that you must always connect AV devices exactly as shown in the connection diagram in the TV menu of your TV set !

Registering an AV device on the TV set

- Press the **MENU** key to open the TV menu.
- Press the yellow key  to open the menu "AV devices".
- Use the cursor control key to select the AV device you wish to register and press the **OK** key.
- Press numeric key **2** and set the signal types (OUT/IN) that apply to the AV device with the **V-/V+** key and then confirm with the **OK** button.

Signal types:

(also see pages and the user's guide of the respective AV device).

There are different signal types for the transmission of picture signals. See next page.


Caution! Connection of a new device may cause an existing connection diagram to be changed. If so, you must reconnect the AV devices accordingly.

2) Possible only on sets equipped with this function.

MENU



2

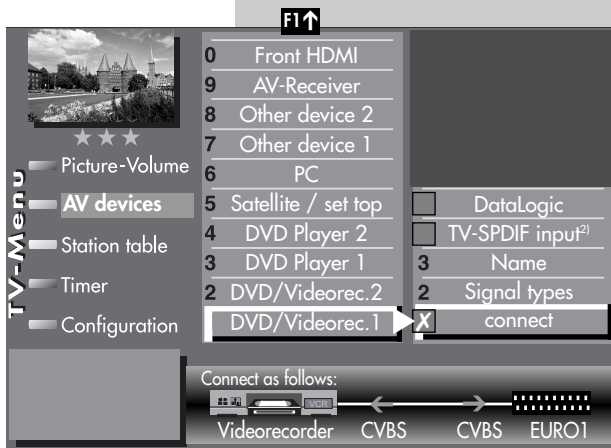

EXIT

30. Registering AV Devices

Fully-wired SCART or Euro AV cable	<p>FBAS: Connection of a VHS video recorder, analogue Sat receiver, decoder, camcorder, photos etc. via a Scart or EURO AV cable or via a Cinch cable or a Hosiden cable.</p> <p>For devices with higher picture quality (e.g. DVD players, Blu-Ray players, game consoles), the following applies:</p> <p>YC: Better quality through separation of brightness and colour information (SVHS/Hi8 video recorder) when connecting a VHS video recorder, analogue Sat receiver, decoder etc. via a Scart or EURO AV cable or a Hosiden cable</p> <p>RGB: Signal type with three video basic colours – Red, green, blue. Is usually needed to control a screen.</p>	<p>DVI-A /DVI-D: With a DVI interface, you can choose between DVI-A (analogue, PC with VGA interface) and DVI-D (digital, PC with DVI interface).</p> <ul style="list-style-type: none"> • If you want, press the numeric key 3 and specify another name for this AV device and then press the OK button.. • Use the cursor control key to select “Connect” and press the OK button. Connect the AV device to the respective EURO socket. • Press the “EXIT” key to close the TV menu.
Cinch-cable	<p>YUV High-quality video signal (video components); consists of brightness (Y) and the two colour difference signals (U and V) and is transmitted using three lines.</p>	
HDMI-cable	<p>HDMI: Using this interface, digital picture and sound signals are transmitted over a line with very high bandwidth (suitable for HDTV).</p>	

30.1 Registering AV Devices Data Logic

Opening the menu


i "Data Logic" is a system which provides a dialogue between a TV set and a video recorder. This "intelligent" system offers the features such as:


- Automatic transfer of the settings for terrestrial or cable TV stations (**not DVB**) to the video recorder.
- Immediate recording - the video recorder records the program currently displayed on the TV screen.
- Automatic switching to the AV program position.
- Direct control of the video recorder from the timer menu of the TV set.
- Automatic switching off of the video recorder when the TV set is switched to the standby state.

In the menu "AV devices" check **X** to the left of the field "Data Logic" for "DVD/Videorec. 1" and connect the video recorder to the EURO1 socket.

Comparable dialogue systems are: QLink (Panasonic), EasyLink (Philips), Megalogic (Grundig), SMARTLINK (Sony).

Registering a Data Logic video recorder on the TV set

- Press the **(MENU)** key to open the TV menu.
- Press the yellow key  to open the menu "AV devices".
- Use the cursor control key to select the AV device to be connected and press the **OK** key.

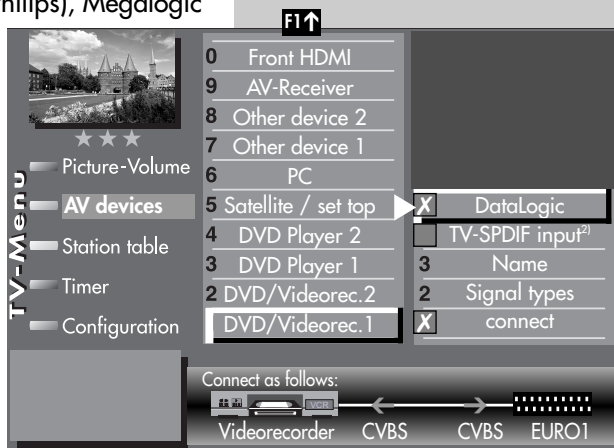

2) Possible only on sets equipped with this function.

Opening the menu




EXIT

MENU



4

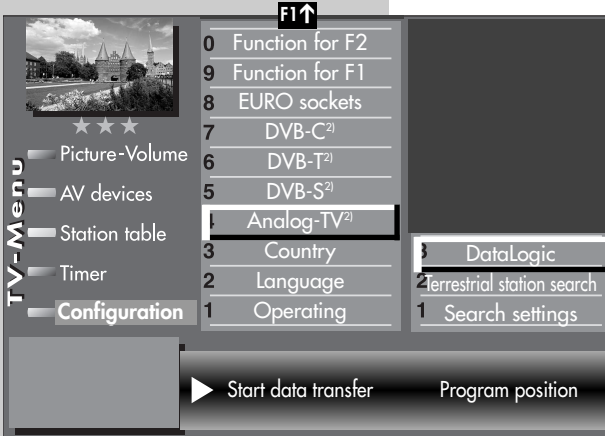

3



30.1 Registering AV Devices Data Logic

- Press numeric key **2**, use the **V-/V+** key to select the correct signal types (OUT/IN) and press the **OK** key.
(See also the operating instructions of the AV device.)
- If desired, press numeric key **3**, enter a new name for the AV device and press the **OK** key.
- Use the cursor control key to select "Data Logic" and press the **OK** key.
- Use the cursor control key to select "Connect" and press the **OK** key. Then connect the AV device to the corresponding EURO socket.

Data Logic: transferring the station table

- Press the **MENU** key to open the TV menu.
- Press the red key ***** to open the menu "Configuration".
- Press numeric key **4** to select "Analogue TV".
- Press the **OK** key and then press numeric key **3** to select "Data Logic".
- Press the **OK** key to transfer the program positions from the TV set to the video recorder.

2) Possible only on sets equipped with this function.

30.2 Registering AV Devices Setting signal types RGB

Opening the menu


 **The signal type always refers to the input and output of the AV device.**


Some AV devices may use a composite video signal (FBAS) for recording and playback operations and an RGB signal for displaying their menus.

It is not possible to make a general statement in this respect. The operating instructions of the AV device concerned may provide some indication.

If you connect such an AV device with the signal type "composite video" (FBAS) and recordings are played back correctly, but you cannot see the menu of the AV device, you must change the signal type in the menu "AV devices" to "RGB".

Setting the signal type


- Press the **(MENU)** key to open the TV menu.
- Press the yellow key  to open the menu "AV devices".
- Use the cursor control key to select the AV device whose signal type you wish to change and press the **OK** key.
- Press numeric key **2**, use the cursor control key to select "Signal OUT", and use the **V-/V+** key to change the setting to "RGB".
- Press the **OK** key to confirm your selection.
- Press the **(EXIT)** key to close the TV menu.

 **Caution ! This may cause an existing connection diagram to be modified. If so, you must reconnect the AV devices accordingly.**

(MENU)



2

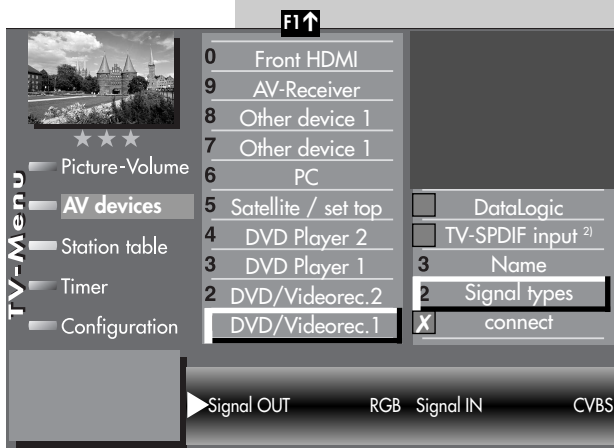

(EXIT)


2) Possible only on sets equipped with this function.

Opening the menu

MENU



2

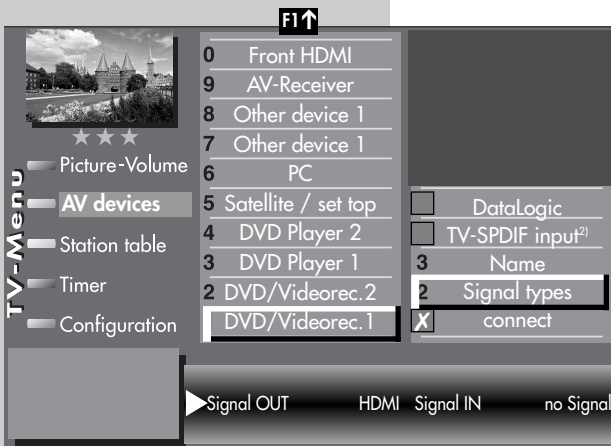

EXIT

30.2 Registering AV Devices Setting signal types DVI/HDMI

The signal type always refers to the input and output of the AV device.

AV devices equipped with a DVI or HDMI socket can be connected to the LCD TV with the aid of a DVI or HDMI cable, respectively.

The connected device must be registered in the menu "AV devices" with "Signal OUT" set to "DVI" or "HDMI", as applicable. Connection via a DVI or HDMI interface permits digital transfer of the picture signal from the device to the TV set. The sound signal must be connected with an additional Cinch or optical (Toslink) audio cable.

Setting the signal type DVI or HDMI

- Press the **MENU** key to open the TV menu.
- Press the yellow key to open the menu "AV devices".
- Use the cursor control key to select the AV device whose signal type you wish to change and press the **OK** key.
- Press numeric key **2**, use the cursor control key to select "Signal OUT", and use the **V-/V+** key to change the setting to "RGB".
- Press the **OK** key to confirm your selection.
- Press the **EXIT** key to close the TV menu.

Caution ! This may cause an existing connection diagram to be modified. If so, you must reconnect the AV devices accordingly.

2) Possible only on sets equipped with this function.

30.2 Registering AV Devices Setting signal types YUV²⁾

Opening the menu


Connection of external devices with YUV²⁾ component output to the "COMPONENT IN" RCA jacks.


 **The signal type always refers to the input and output of the AV device.**

AV devices equipped with a YUV jack²⁾ can be connected to the LCD TV by means of a YUV cable (see page 116). In the "AV Devices" menu, the connected AV device must be registered with signal OUT "YUV".

The connection of the analogue YUV source using the RCA jacks to the YUV input²⁾ of the LCD TV depends on the output format of the signal source. For YUV, the sound must be connected in addition via a Cinch or optical audio cable (Toslink). Configure the following settings, depending on the output format of your signal source:

Setting the YUV²⁾ Signal Type

- Enter the TV menu by pressing **(MENU)**.
- Press the yellow key  to open the "AV Devices" menu.
- Use the cursor control to select the AV device whose signal type you want to change and press **OK**.
- Press numeric key **2**, use the cursor control to select "Signal OUT", and use the **V-/V+** key to set "YUV" or "YUV (HD)".
- Confirm the setting by pressing **OK**.
- Exit the "TV Menu" by pressing **(EXIT)**.

 **Caution ! This may cause an existing connection diagram to be modified. If so, you must reconnect the AV devices accordingly.**

(MENU)



2



F1↑




(EXIT)

2) Possible only on sets equipped with this function.

30.3 Connecting a HiFi Amplifier/AV Receiver

Metz LCD-TV

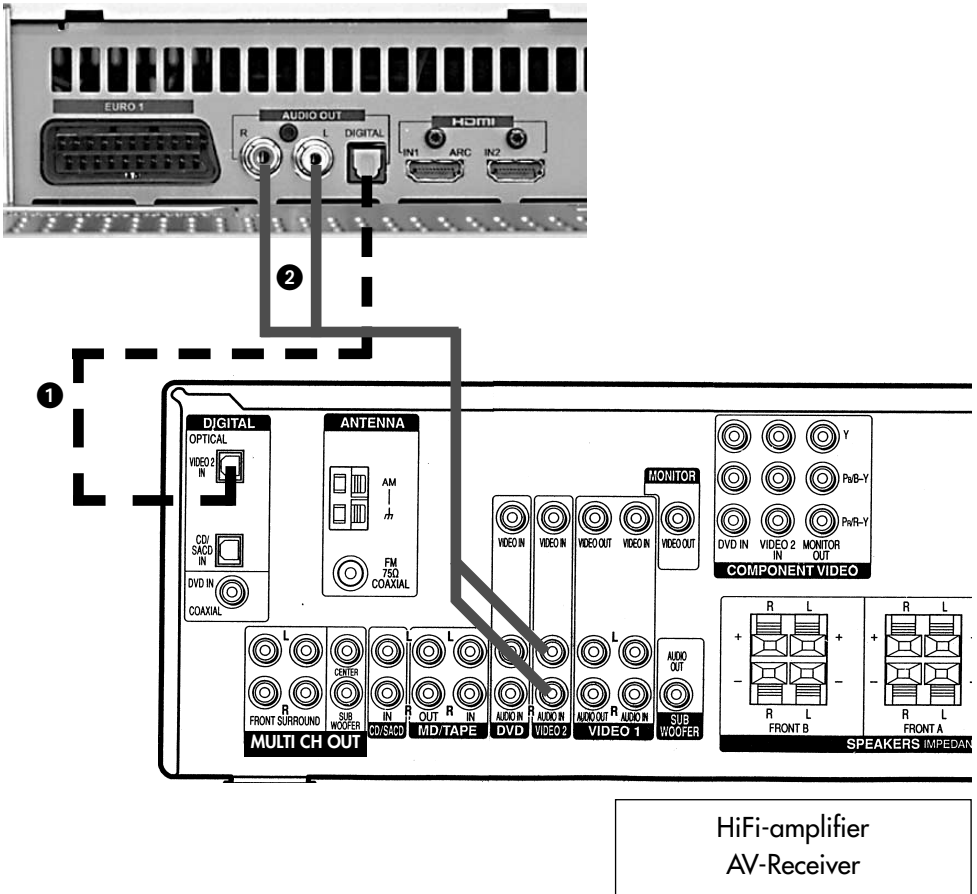
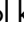





- ① Digital audio signal formats (depending on the source)
- ② analogue audio signal R+L (stereo)





30.3 Connecting a Hifi Amplifier/AV Receiver

Opening the menu

Registering the AV Device with the TV

- Enter the TV menu by pressing "MENU".
- Press the yellow key  to open the "AV Devices" menu.
- Use the cursor control key  to select "Hifi Amplifier" in the device selection.
- Press "OK" twice, use the cursor control key  to select "Signal Types", and press "OK"..
- For connection type , select the signal type "Signal IN - SPDIF".
For connection type , select the signal type "Signal IN – Stereo".
Confirm the setting by pressing "OK"
- Press the "EXIT" key to close the TV menu.


Sound:

- To configure the sound settings of the LCD TV, press the yellow key  and use the cursor control key  to select the menu item "Sound via ...".
- For connection type , use the **V-/V+** key to select "Sound via Hifi".
The speakers of the LCD TV are muted. The sound (AC3 or stereo sound) is rendered over the speakers of the Hifi set.
- For connection type , use the **V-/V+** key to select "Sound via surround".

The speakers of the LCD TV are used as the centre box. The sound (AC3 or stereo sound) is rendered over the speakers of the Hifi unit.

Opening the menu

MENU

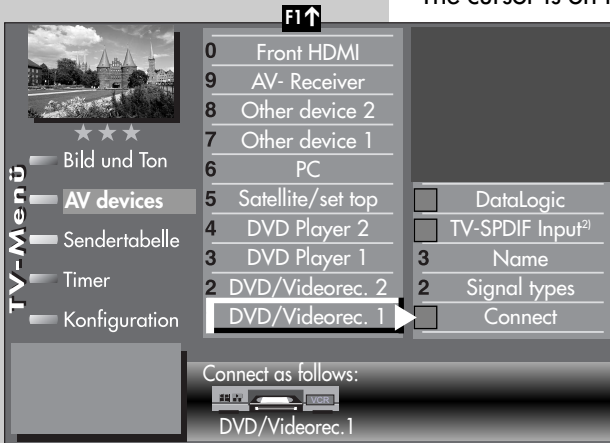

EXIT

30.4 Removing AV Devices

This menu item is not available in a 2 ** menu.

If desired, you can change the factory settings for AV devices (a video recorder on the EURO1 socket and a DVD player on the EURO2 socket²⁾).

Removing an AV device from the TV set

- Press the **MENU** key to open the TV menu.
- Press the yellow key to open the menu "AV devices".
- Use the cursor control key to select the device you wish to remove and press the **OK** key. The cursor is on the line "Connect".

- Press the **OK** key again. A message is displayed, asking if you really want to change the connected device.
- Press the **OK** key again to remove the connected device.
- Press the **EXIT** key to close the TV menu.


Caution ! This may cause an existing connection diagram to be modified. If so, you must reconnect the AV devices accordingly.

2) Possible only on sets equipped with this function.

31. Copying between AV Devices

Direct recording

Opening the menu

 **Re-recording is only possible from the front sockets (see p. 115) on the EURO1 socket or EURO2 socket²⁾ or from the EURO1 socket to the EURO2 socket²⁾.**

If you wish to copy a recording from one of the AV devices connected to your TV set (such as a DVD player) to another connected AV device (such as a video recorder), you must do this by means of a direct recording operation. In this case, the signal arriving at one of the EURO sockets is redirected to the other EURO socket, from where it can be recorded.

Example: you have a DVD player and a video recorder connected to the EURO sockets of the TV set (see Section 30).

Programming a direct recording for copying:

- Press the **O/AV** key and use the corresponding numeric key to select the DVD player (playback device).
- Press the **F2** key. Briefly pressing **F2** executes the function which is programmed for this function key (see Section 18, "Programming function keys"). Pressing and holding **F2** for about three seconds displays all functions available for this function key.
- Press **numeric key 0** to open the timer menu. The timer window displays the AV program position (DVD player), the current date and a time window of two hours.
- If two hours is insufficient for the copying operation, use the numeric keys to enter a later end time.



F2

0



31. Copying between AV Devices

Direct recording

- Use the cursor control key ▼ to select the line "Recording device".
If only one such device exists, it is then displayed. If further recording devices exist, you can select the desired device with the aid of the V-/V+ key.
- Press the **OK** key to save the settings.
- On the playback device (in this example, the DVD player) start the film which is to be copied.
- On the recording device (in this example, the video recorder), select the AV program position (in most cases AV1).
- On the recording device, start a direct recording by pressing the appropriate button (**REC** or **OTR**, etc.).

The TV set is now set up so that the signal coming from the playback device is connected directly to the recording device.

32. Inserting/Removing CA Modules

The LCD TV has two slots (CI1 / CI2) for CA modules at the top (card reader for smartcards or decoder cards).

To insert the CA module, open the lid on the top of the LCD TV and insert the CA module in one of the slots as shown in the pictures. Press the CA module down until the unlocking bar is lifted up.

Close the lid.


The LCD TV is now ready to decode the respective station.



Front view



Back/top view (without lid)

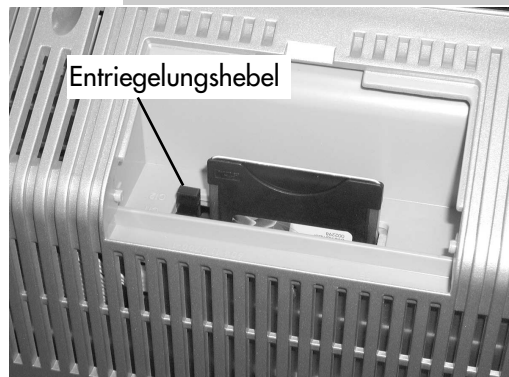

Back view (without lid)
with inserted module

33. Connecting a PC: PC [VGA] → TV set [DVI-A]

Start your PC and preset the resolution to 1024 x 768p 60 Hz. Exit windows and turn the PC off.

VGA → DVI-A setting

- Call up the TV menu with the key **MENU** .
- Open the "AV devices" menu with the yellow button **AV** .
- Use the cursor control key **▲** to select the "PC" AV device and then press the key **OK**. Use the cursor control key **▲** to go to the "Signal types" menu item and press. **OK**. the settings must be made as shown in Figure 1a.
- Exit the menu with the key **EXIT** . . Press the key **AV** for approx. three seconds and then select the AV device "PC".
- Connect the VGA output of the graphic card of the PC with the DVI input of your TV set with a multimedia cable (VGA, 15pol. (plug) to DVI (plug) (Picture 2).

- Switch the PC on. When the picture of the PC is shown on your TV for the first time, a box is displayed on the bottom edge of the screen with the resolution that has been set, e.g.:

Video: 1024 x 768 60Hz

👉 You can call up this information at any time by pressing the green **INFO button.**

While Windows is starting, data is exchanged between the graphics card and the TV. The possible resolutions are determined in the process.

When the start-up procedure is finished, you can set the resolution as you wish (recommended = 1360 x 768 - 60 Hz.) in the Windows menu "Display characteristics".

For PC sound from the speakers of your TV, see page 132.

fig. 1a


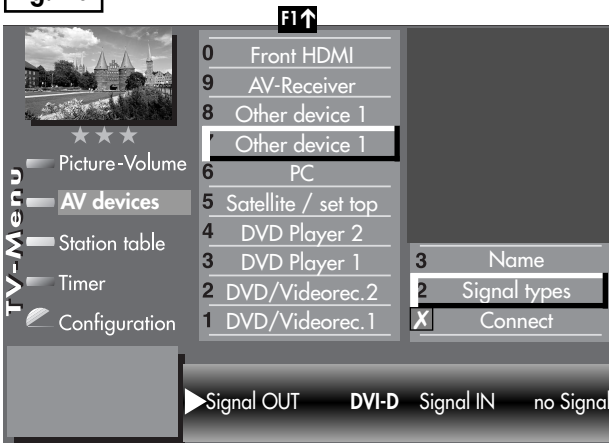


fig. 2

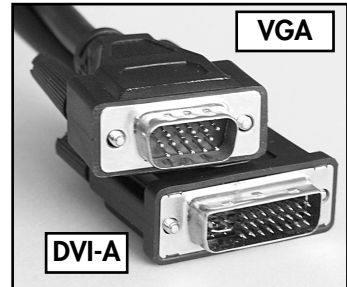

33. Connecting a PC: PC [DVI-D] → TV set [HDMI]

Start your PC and preset the resolution to 1024 x 768p 60 Hz. Exit windows and turn the PC off.

Setting DVI-D → DVI-D

- Call up the TV menu with the key **MENU**
- Open the "AV devices" menu with the yellow button **AV**.
- Use the cursor control key **▲** to select the "PC" AV device and then click the key **OK**. Use the cursor control key **▲** to go to the "Signal types" menu item. The settings must be made as shown in Figure 1b.
- Exit the menu with the key **EXIT**. Press the key **Q/AV** for approx. two seconds and then select the AV device "PC".
- Use a commercial multimedia cable (DVI-D → DVI-D, **fig. 3**) to connect the DVI-D output of the graphics card of the PC to the DVI-D input of your TV set. Switch the TV on.
- Switch the PC on. When the picture of

the PC is shown on your TV for the first time, a box is displayed on the bottom edge of the screen with the resolution that has been set, e.g.:

Video: 1024 x 768 60Hz

👉 You can call up this information at any time by pressing the green **⊙ button.**

While Windows is starting, data is exchanged between the graphics card and the TV. The possible resolutions are determined in the process.

When the start-up procedure is finished, you can set the resolution as you wish (recommended = 1360 x 768 - 60 Hz.) in the Windows menu "Display characteristics".

fig. 1b


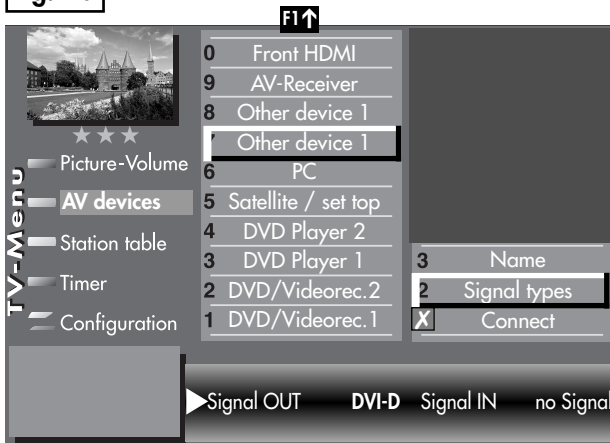


fig. 3

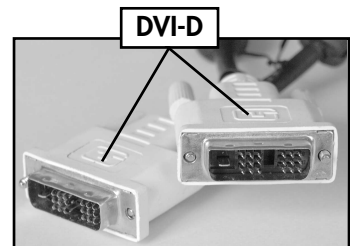


33. Connecting a PC: PC [HDMI] → TV set [HDMI]

If the graphics card of your PC has an HDMI output, then you can also use it to connect to the TV. To do this, proceed as described in this chapter (connect PC [PC [DVI-D] → TV set [DVI-D]) and in the menu AV - PC - Signal Types - Signal OUT, select the HDMI setting.

 *In this setting, sound is also transmitted via the HDMI cable but it must support the HDMI output of the graphics card of your PC.*

33.1 Connecting a PC: sound from the speakers of TV

Use a commercial audio cable with 3.5 mm stereo jack plugs to 3.5 mm stereo jack plugs to connect the Audio Line output of the sound card to the Audio-In input of the TV.

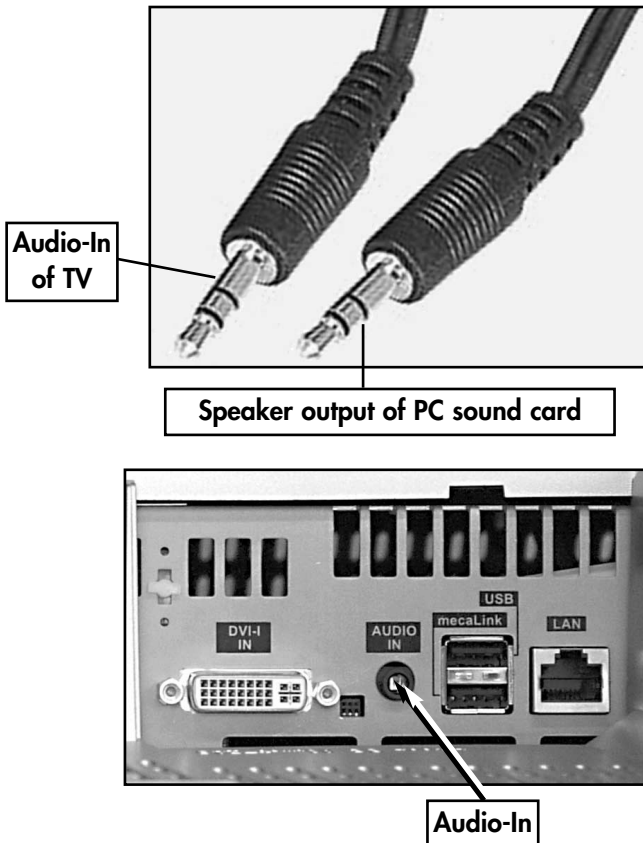

34. Glossary

Automatic zoom

When the automatic zoom function is active, programs broadcast in “widescreen format” (such as those in the 16:9 format) are expanded to fill as much of the screen as possible.

If this function is inactive, the format of such programs is not adjusted automatically.

AV program position

AV devices have one or more connection sockets, depending on the model. The designations of these sockets are marked on the device (e.g. AV1).

On the AV device, you can select which socket you want to use. The selected socket is shown on the display of the AV device (e.g. A1 for socket AV1).

Motion compensation, movie

“Motion compensation, movie” improves the picture display for black and white or cinema movies. Motion becomes smoother and a more three-dimensional picture appearance results.

Motion compensation, video

“Motion compensation video” improves the picture display for studio recordings, e.g. the news or documentaries.

Picture position, vertical

With widescreen films, subtitles are sometimes transmitted in the black area at the bottom of the screen. You can move the picture upwards on the screen to ensure that these subtitles remain visible.

Picture profile

Standard: Compromise for all applications

Sports: Setting for sports stations or sports programs

Brilliant: Setting for animated films, DVD players and Blue Ray players

Games: Preferred setting for recordings from game consoles

PC Monitor: Preferred setting for recordings from a connected PC.

User: Your self-configured picture profile

Code

The settings for the childlock function are protected by a four-digit code: you can enter any desired code, but you should note it for future use. If you have forgotten your code, please consult your local dealer.

Dyn. image sharpness

The “Dynamic image sharpness” setting facilitates an automatic increase to the sharpness of the picture in the event of a low level of sharpness.

34. Glossary

Dyn. Contrast

The "Dynamic contrast" setting facilitates an automatic increase of the picture contrast in the event of a low level of picture contrast.

Fine search

During the station search with a stipulated symbol rate, the channels are synchronised at the centre of the channel. If this setting does not lead to a satisfactory result, fine tuning can then be set. The search operation takes considerably longer with the fine search set.

Backlighting

The backlighting (given in %) is the basic value that is set in accordance with the light conditions in the room in which the TV set is located. The basic setting should be carried out in a dark room so that black picture content is still black.

Image sticking

Images that remain unchanged for a long time (several hours), such as still pictures, result in "image sticking", i.e. lasting shadow formation.

Such images should be avoided if at all possible. This effect is reversible and disappears again after a short time.

Tone settings

The tone can be set to either "Normal" or "Speech". In the setting "Speech", the bass and treble components of the sound signal are set to make speech as easy to understand as possible. The setting

"Normal" is recommended for music programs.

Volume correction

The various stations broadcast their sound at different volumes. The TV set can automatically compensate for these differences in the volume. This function remains active even if the standard sound settings are recalled.

Search setting

- 1 free-to-air programs, all non-encrypted stations are sought.
- 2 all programs, all non-encrypted and encrypted stations are sought. If a CA module and smart card are inserted, the corresponding encrypted stations are released.
- 3 free and CICAM programs, all non-encrypted and all encrypted [programs] for the smart card inserted in the CA module, are sought.

Standard values

The standard values are the settings (such as brightness, sound volume, colour, etc.) which are the same for all program positions.

Panorama

The panorama function can be used to expand "normal" TV programs broadcast in the 4:3 format to fill the full width of a 16:9 screen. This is done by expanding the picture width accordingly.

34. Glossary

Noise reduction

This function allows you to improve the picture quality of "snowy" pictures which result from poor reception conditions. Various levels of noise reduction can be selected and the settings can be made separately for each program position.

Symbol rate (baud rate)

The symbol or baud rate describes the data volume that is transmitted per second. The time required for the search function increases in proportion to the symbol rate.


VCR

The VCR function provides an optimal picture quality when playing back recordings from tape devices such as camcorders or video recorders.

Forced mono

It may happen that your TV set switches to stereo mode although the program you are watching is not broadcast with stereo sound. This is normally due to the local reception conditions. If you set the selected program position to "forced mono" all programs received at this program position are reproduced with mono sound.

35. Problem, Possible cause, Remedy

Problem	Possible cause	Remedy
TV set does not react to commands from the remote control	<ul style="list-style-type: none"> • No line of sight between the remote control and the TV set. • Sunlight is shining directly on the infrared window of the TV set. • Batteries of the remote control are exhausted. • TV set has been switched off with the main power switch. • Fault in the internal processor. 	<ul style="list-style-type: none"> • Remove any obstacles between the units. • Prevent sunlight from shining on the set. • Replace the batteries. • Switch on the TV set with the main power switch. • Switch off the TV set with the main power switch, wait a few seconds and then switch it on again.
The message "Enter code" is displayed when the TV set is switched on.	<ul style="list-style-type: none"> • The childlock is active and was programmed to disable all stations. 	<ul style="list-style-type: none"> • Enter the code you used when programming the childlock.
The TV set will not switch to a selected program position. A teddy bear is displayed instead.	<ul style="list-style-type: none"> • The childlock is active and was programmed so that only the stations shown in the list beside the teddy bear may be selected. 	<ul style="list-style-type: none"> • Enter the code you used when programming the childlock.
You have switched off the TV set with the  key, but the green LED remains on.	<ul style="list-style-type: none"> • EPG data are currently being collected from the programmed EPG station. 	<ul style="list-style-type: none"> • None. When all data have been collected, the TV set will switch itself off automatically.
No sound is output on the TV speakers	<ul style="list-style-type: none"> • "Speaker off" or "Speaker centre" is set in the "Configuration" – "Operation" – "Sound settings" TV menu. 	<ul style="list-style-type: none"> • In the "Configuration" – "Operating" – "Sound settings" TV menu, set "Speakers on"

35. Problem, Possible cause, Remedy

Problem	Possible cause	Remedy
Direct recording of an analogue terrestrial station (received via roof antenna or cable) with Data Logic does not work.	<ul style="list-style-type: none"> • The Data Logic video recorder is not connected to the roof antenna or cable outlet with a suitable cable. 	<ul style="list-style-type: none"> • Connect the Data Logic video recorder to the roof antenna or cable outlet with a suitable cable.
General problems with an external AV device connected to the TV set.	<ul style="list-style-type: none"> • The AV device has not been registered in the TV set. 	<ul style="list-style-type: none"> • Open the menu "AV devices", select the device with the cursor, set the signal types (OUT/IN) correctly and press the OK key. Make sure that you connect the AV device as shown in the connection diagram.
Data Logic does not work.	<ul style="list-style-type: none"> • The Data Logic video recorder with data transfer has not been registered correctly. • The Scart cable does not have all pins connected through. 	<ul style="list-style-type: none"> • Open the menu "AV devices" and register the Data Logic video recorder as video recorder 1 with "Data Logic On". • Use a Scart cable in which all pins are connected through.

35. Problem, Possible cause, Remedy

Problem	Possible cause	Remedy
A film in 16:9 format is played back from an AV device, but is displayed in 4:3 format.	<ul style="list-style-type: none">• The picture format for this program position has not been set correctly in the TV menu.	<ul style="list-style-type: none">• Select the AV program position and set the picture format to 16:9 or "Automatic" (see Chap. 10.4).
The menu of a connected AV device (such as a DVD player) is not visible on the TV screen.	<ul style="list-style-type: none">• The AV device has been registered in the TV menu with the signal type "Composite video".	<ul style="list-style-type: none">• Register the AV device with the signal type "RGB" (see Chap.30.2).

36. Upgrade Kits

- **PVR hard disc 095 NS 1727 (500 GB)**

for the digital recording and playback of DVB programs (including HDTV). Also offers the option of time shift TV (timeshift mode).

- **PVR hard disc 095 NT 1418 (750 GB)**

for the digital recording and playback of DVB programs (including HDTV). Also offers the option of time shift TV (timeshift mode)

- **EC-Modul 033 NT 1444
(Encoder-Modul)**

Also enables the recording of analogue TV programs in conjunction with the hard disc recorder.
Only possible in conjunction with an ET module.

- **DVB-CTS2 twin Nachrüstsatz
088NT2664
(ET-Modul)**

Tuner for the reception of digital terrestrial, digital cable and digital satellite and satellite HDTV stations for TV and radio programs. The DVB upgrade kit is installed in the TV instead of the CT or S2 tuner no additional remote control is required.

- **Double-CI+ slot 020NT120A**

For decoding two different encrypting systems.

In the case of PVR use for recording an encrypted station while simultaneously watching another encrypted station.

- **mecaHome+ radio control unit
017ZR10G3**

Innovative technology from Metz and Moeller ensures effective couch management.

(Only in combination with the 014ZT144A adapter)

- **Metz Soundsystem 80
(014LR7043)**

Active 2.1 Virtual Surround System for home theatre and hi-fi enjoyment

- **Metz Soundsystem 100
(014LR9048)**

Active 2.1 Virtual Surround System for home theatre and hi-fi enjoyment

36. Upgrade Kits

- **Metz Soundsystem LS 5.1 W (014LR5143)**

Active 5.1 Virtual Surround System for home theatre and hi-fi enjoyment

- **Adapter RS232 on USB 014ZT144A** for connecting Metz Sound Systems 80 and 100 and mecaHome+ radio control unit.

- **LAN-network connecting**

after an update by the specialist dealer the LAN socket can be released.

For further information and other retrofit kits, please contact your TV dealer.

You can also find further information on our homepage: www.metz.de.

37. Technical Data

Mains voltage:

230-240 VAC, 50Hz

Antenna input:

75 Ohms, unbalanced DIN 45325

Channel coverage:

Standard channels 2 - 12, 21 - 69

Special channels S1 - S20, S21 - S41,
S42 ... S46 (Belgium channels OIR)

Operating temperature range:

+5°C to +35°C at 75 % air humidity

Energy consumption per hour (Wh):

Multiply the power consumption in W by 1 hour

Stand-by < 0,3 W

37. Technical Data

Power consumption

		Power consumption**	Power consumption in eco mode (condition on delivery) (IEC 62087 Ed. 2)	Music output power to DIN 45324 into 4Ω (at 1 kHz) (sinusoidal power) *) into 8Ω
HDTV inside	Axio pro 26 LED CTS2 Z	ca. 63 W	ca. 49 W	2 x 20 W (2 x 12 W)
HDTV inside	Axio pro 32 LED 200 CTS2 Z	ca. 87 W	ca. 59 W	2 x 20 W (2 x 12 W)
HDTV inside	Axio pro 37 LED 200 CTS2 Z	ca. 109 W	ca. 69 W	2 x 20 W (2 x 12 W)
HDTV inside	Axio pro 42 LED 200 CTS2 Z	ca. 130 W	ca. 79 W	2 x 20 W (2 x 12 W)
HDTV inside	Linus 32 LED 200 CTS2 Z	ca. 89 W	ca. 61 W	2 x 20 W (2 x 12 W)
HDTV inside	Linus 37 LED 200 CTS2 Z	ca. 110 W	ca. 70 W	2 x 20 W (2 x 12 W)
HDTV inside	Linus 42 LED 200 CTS2 Z	ca. 132 W	ca. 80 W	2 x 20 W (2 x 12 W)
HDTV integriert	Caleo 37 LED 200 Media twin R	ca. 111 W	ca. 73 W	2 x 20 W (2 x 12 W)
HDTV integriert	Caleo 47 LED 200 Media twin R	ca. 130 W	ca. 80 W	2 x 20 W (2 x 12 W)
	DVB-Radio mode	—	ca. 25 W	—

Power consumption

** The power consumption was determined with the Backlighting-Control off (see p. 29). Depending on the parameters set then, the value shown here can be lower and therefore mean save power.

37. Technical Data

Supported in and output signals

HDMI IN

SDTV	640x480p	60 Hz
	720(1440)x576i	50 Hz
	720(1440)x480i	60 Hz
	720x576p	50 Hz
	720x480p	60 Hz
HDTV	1920x1080p	24Hz/ 50Hz/ 60Hz
	1920x1080i	50Hz/ 60Hz
	1280x720p	50Hz/ 60Hz
PC	640x480p	60 Hz
	800x600p	60 Hz
	1024x768p	60 Hz
	1280x800p	60 Hz
	1280x1024p	60 Hz
	1360x768p	60 Hz
	1400x1050p	60 Hz
	1440x900p	60 Hz
	1600x1200p	60 Hz
	1680x1050p	60 Hz

HDMI Audio: Linear PCM Stereo 32kHz/ 44.1kHz/ 48kHz

EURO1

RGB IN: 576i 50Hz, 480i 60Hz

Y/C IN: PAL 576i 50Hz, NTSC 480i 60Hz

FBAS IN: PAL 576i 50Hz, NTSC 480i 60Hz, SECAM 576i 50Hz, PAL 60

FBAS OUT: Yes (dependent on the AV-equipment)

Audio IN: Analog Stereo (Line-IN)

Audio OUT: Analog Stereo (Line-OUT)

DIGITAL AUDIO OUT SPDIF (Linear PCM Stereo bzw. Dolby Digital, dependent on the AV-equipment)

AUDIO OUT Analog Stereo (Line-OUT)

AUDIO IN Analog Stereo (Line-IN)

Front AV

FBAS IN: PAL 576i 50Hz, NTSC 480i 60Hz, SECAM 576i 50Hz, PAL 60

Audio IN: Analog Stereo (Line-IN)

Headphone OUT: Headphone impedance \geq 32 Ohm

Battery disposal

Do not dispose of batteries with domestic rubbish! Please return spent batteries to collecting points should they exist in your country.

Please only return fully discharged batteries. Normally, batteries are fully discharged if the device they power

- switches itself off and indicates "batteries spent"
- they no longer function flawlessly after prolonged use.

To prevent short circuits, please cover the battery poles with adhesive tape strips.

These symbols can be found on batteries containing harmful substances:

Pb = the battery contains lead

Cd = the battery contains cadmium

Hg = the battery contains mercury

Li = the battery contains lithium



Your Metz product was developed and manufactured with high-quality materials and components which can be recycled and/or re-used.

 This symbol indicates that electrical and electronic equipment must be disposed of separately from normal garbage at the end of its operational lifetime.

(GB)

Please dispose of this product by bringing it to your local collection point or recycling centre for such equipment.

This will help to protect the environment in which we all live.

Metz-Werke GmbH & Co KG
Postfach 1267
D-90506 Zirndorf/Germany

Fon: +49 911/97060
Fax: +49 911/9706340
www.metz.de
info@metz.de

Errors excepted. Subject to changes !

Index

- Automatic station search 90,92,99
- Automatic zoom 52
- AV devices, connecting/registering 117-125
- AV devices, removing 126
- AV program position 22
- AV playback, devices with switching voltage 21
- AV playback, devices without switching voltage 22

- Batteries for the remote control 9**

- Camcorder, connecting 115**
- Childlock 53
- Childlock, activating 53
- Childlock, deactivating 54
- Childlock, permitted programs 54
- Cleaning 114
- Code for childlock 54
- Connections on front and rear of set. . 115,116
- Copying recordings 127
- Country 84

- Datalogic video recorder 119**
- DVI / HDMI 122
- Direct recording (OTR) 68,127
- Double font size 19
- DVD player, connecting 116-117
- DVD player, removing 126

- Electronic Program Guide (EPG) 76**
- EURO sockets 21,116
- Equalizer 40
- External devices (playback) 21
- External devices, connecting . . 115,116

- Font size, double 19**
- Freeze frame 10,12

- Glossary 133**

- Headphones 51,115**
- HDMI / DVI 122
- Help 16
- HiFi output 46,116

- Info (Information) 16**
- Initial program position 108
- Interests (by EPG) 80

- Language for TV menu 84**

- Marks in Teletext, clearing 20**
- Marks in Teletext, overview 20
- Marks in Teletext, scrolling by 19
- Marks in Teletext, setting 19
- Menu language 84
- Menu, menu control 17
- Multiple pages, sub-pages 18
- Mute 46

- Noise reduction 27,135**

- Off time 55**
- On time 55
- Operating mode 20


- Panorama 34,70**
- PC, connect 130
- Picture format 69
- Picture position 71
- Picture quality from video recorder. . . 23
- Picture sharpness 28
- Playing back from ext. devices. . . 21,22
- Portal stations 104

Index

Program guide	80	Teletext, scrolling by marks	19
Program switching for AV devices	22	Teletext, setting marks	19
Radio mode with DVB	110	Volume correction	37
RGB	121	Volume correction, automatic	38
Recording with the EPG	83	Winter time	56
Riddle key	19	YUV	123
Signal type (Euro sockets)	121-123	Zoom	34
Sleep timer	55		
Sound 1, Sound 2	51		
Sound corrections	44		
Sound effects	40		
Sound settings	10,37		
Standard picture settings	10,28-36		
Standard sound settings	37-50		
Station logo	105		
Station selection	15		
Station table	15		
Stations, moving, copying,	106		
, sorting, deleting	106		
Summer time (see time settings).	56		
Switching off	6,10,12		
Switching on	6,10,12		
Switching voltage, devices with	21		
Switching voltage, devices without	22		
Thunderstorms	7		
Timer control	55		
Timer, setting manually	56		
TV menu	17		
VCR function	23		
Video recorder, picture quality	23		
Teletext	18		
Teletext, clearing marks	20		
Teletext, font size	19		
Teletext, overview of marks	20		



- ① Service Centre
- ② Training Centre
- ③ Administration and development
- ④ Storage/Dispatch
- ⑤ Mecablitz production
- ⑥ TV production
- ⑦ Plastics technology

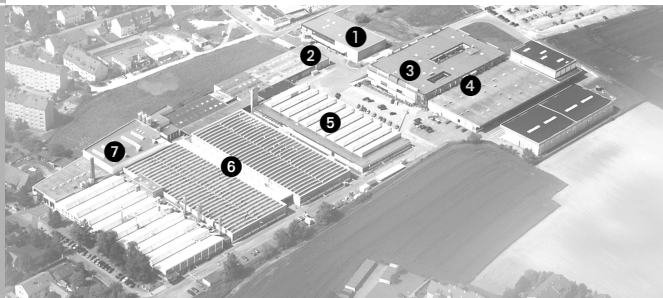

Metz - Werke GmbH & Co. KG - Zirndorf near Nürnberg

Core competence in the areas of electronics and plastics technology to form the basis of the excellent reputation of the Metz Werke that has been built up throughout the world over a period of many decades.

Metz offers quality made in Germany:
Consumer electronics, mecablitz flash units,
plastics technology and industrial electronics.

Metz-Werke GmbH & Co. KG
Postfach 1267, D-90506 Zirndorf

Fon: +49 911 - 97060
Fax: +49 911 - 9706340

www.metz.de
info@metz.de

Errors excepted. Subject to changes.
© Printed in Germany

Metz - always first class.